



4: TROUBLESHOOTING MANUAL

NX10

AM TRANSMITTER

Document ID:

NHB-NX10-TRB

Version:

3.0

Issue Date:

2019-06-01

Status:

Standard



Contact Information

Nautel Limited

10089 Peggy's Cove Road
Hackett's Cove, NS Canada B3Z 3J4

Toll Free: +1.877.6NAUTEL (662.8835)

(Canada & USA only) or

Phone: +1.902.823.3900 or

Fax: +1.902.823.3183

Nautel Inc.

201 Target Industrial Circle
Bangor, Maine USA 04401

Phone: +1.207.947.8200

Fax: +1.207.947.3693

Customer Service (24-hour support)

+1.877.628.8353 (Canada & USA only)

+1.902.823.5100 (International)

Email: support@nautel.com

Web: www.nautel.com

The comparisons and other information provided in this document have been prepared in good faith based on publicly available information. For verification of materials, the reader is encouraged to consult the respective manufacturer's most recent publication on the official website or through contact with Customer Service.

© Copyright 2019 NAUTEL. All rights reserved.

CONTENTS

Contact Information	4.iii
<hr/>	
RELEASE CONTROL RECORD	4.vii
<hr/>	
RESPONDING TO ALARMS	4.1.1
Corrective Maintenance	4.1.1
Electrostatic Protection	4.1.3
Identifying an Alarm	4.1.4
Troubleshooting an Alarm	4.1.6
Accessing the Inside of the Transmitter	4.1.44
Troubleshooting Tips	4.1.46
Removing and Reinstalling RF Power Modules	4.1.52
Troubleshooting RF Power Modules	4.1.57
Control/Interface PWB Removal/Replacement	4.1.65
SCR Rectifier Inspection/Replacement	4.1.67
Digital AM Exciter PWB Replacement	4.1.69
Exgine PWB Replacement	4.1.74
GPS Sync PWB Replacement	4.1.74
Rack Interface PWB Replacement	4.1.75
Power Module Interface PWB Replacement	4.1.77
Gas Discharge PWB and Relay Replacement	4.1.79
Fan Tray Replacement	4.1.81
Fan Tray Cooling Fan Replacement	4.1.82
RF Voltage and Current Sample PWB Replacement	4.1.83
Directional Coupler Replacement	4.1.87
Arc Detector UV Sensor Replacement	4.1.89
+15 V or +48 V Power Supply Replacement	4.1.92
Graphic User Interface Display and UI Interface PWB Replacement	4.1.94

PARTS LISTS	4.2.1
Family Tree	4.2.1
How to Locate Information About a Specific Part	4.2.1
Column Content	4.2.2
Common Abbreviations/Acronyms	4.2.4

WIRING/CONNECTOR LISTS	4.3.1
Wiring Lists Provided	4.3.1
Wiring Lists Not Provided	4.3.1
Connector Mating Information	4.3.1
Wire Colours	4.3.1
Printed Wiring Board Patterns	4.3.1

READING ELECTRICAL SCHEMATICS	4.4.1
Component Values	4.4.1
Graphic and Logic Symbols	4.4.1
Reference Designations	4.4.1
Unique Symbols	4.4.2
Identifying Schematic Diagrams	4.4.2
Structure of Schematics	4.4.3
Locating Schematic Diagram(s) for a Functional Block	4.4.3
Locating a Part or Assembly on a Schematic	4.4.4

MECHANICAL DRAWINGS	4.5.1
Identifying Mechanical Drawings	4.5.1
Content of Mechanical Drawings	4.5.1
Locating a Part or Assembly on a Mechanical Drawing	4.5.1

LIST OF TERMS	4.6.1
---------------	-------

Release Control Record

ISSUE	DATE	REASON
3.0	2019-06-01	Supports NX10 hardware NARA65B implementing NAP39C RF Power modules and a shielded arc detector assembly. Supports NX SW version 5.0 and higher, which includes configurable analog inputs.

SECTION 4.1: RESPONDING TO ALARMS

This section provides instructions you need when performing troubleshooting on the NX10 transmitter, including the following topics:

- [Corrective Maintenance](#)
- [Electrostatic Protection - see page 4.1.3](#)
- [Identifying an Alarm - see page 4.1.4](#)
- [Troubleshooting an Alarm - see page 4.1.6](#)
- [Accessing the Inside of the Transmitter - see page 4.1.44](#)
- [Troubleshooting Tips - see page 4.1.46](#)
- [Troubleshooting RF Power Modules - see page 4.1.57](#)
- [Other Module Replacement Procedures - see page 4.1.43](#)

If none of the procedures and alarms described in this section address your problem, contact Nautel for assistance.

Corrective Maintenance

Corrective maintenance procedures consist of identifying and correcting defects or deficiencies that arise during transmitter operation. Local and/or remote alarm signals are generated when a malfunction occurs. If an alarm condition is caused by a malfunction in the RF power stage, the transmitter may maintain operation at a reduced RF output level. The nature of the fault – and station policy – will dictate whether an immediate maintenance response is necessary. Fault analysis and rectification may be conducted from three different levels, with a different technical competence level required for each: on-air troubleshooting, remote or local, and off-air troubleshooting.

CAUTION! The transmitter contains many solid state devices that may be damaged if subjected to excessive heat or high voltage transients. Take every effort to ensure that circuits are not overdriven or disconnected from their loads while turned on.

On-Air Troubleshooting

On-air troubleshooting can be performed from a remote location, or locally at the transmitter site.

Remote Troubleshooting

Remote on-air troubleshooting consists of monitoring the transmitter's radiated signal using an on-air monitor or via a LAN connection, and observing the status of each remote fault alarm indicator. Information obtained from these sources should enable an operator to decide whether an alarm response may be deferred to a more convenient time, an immediate corrective action must be taken, or if a standby transmitter must be enabled (if one is available). It is recommended that the significance of remote indications, and the appropriate responses, be incorporated into a station's standard operating procedures. Refer to ["Identifying an Alarm" on page 4.1.4](#) to determine the remedial action required for a given fault.

Local Troubleshooting

Local on-air troubleshooting consists of monitoring the transmitter's integral meters and fault alarm indicators. Analysis of this data will normally identify the type of fault, and in most cases will determine what corrective action must be taken. Refer to ["Identifying an Alarm" on page 4.1.4](#) to determine the remedial action required for a given fault.

The power amplifier stage contains an integral modular reserve (IMR) feature. This feature permits the transmitter to operate at a reduced RF output level when a malfunction occurs in one of its power modules. Station operating procedures will dictate whether a reduced RF output level is acceptable. When a reduced RF output level can be tolerated, replacement of the defective RF power module may be deferred to a convenient time. A defective RF power module may be removed from the transmitter for servicing, while the transmitter is operating, provided that the conditions in the removal instructions detailed in ["Removing an RF Power Module" on page 4.1.52](#) are met.

WARNING! FAILURE TO FOLLOW THE RF POWER MODULE REMOVAL INSTRUCTIONS MAY RESULT IN INJURY TO THE OPERATOR AND SERIOUS PHYSICAL DAMAGE TO THE RF POWER MODULE AND TRANSMITTER.

Off-Air Troubleshooting

Off-air troubleshooting must be performed when the replacement of a defective RF power amplifier module, or routine on-air calibration adjustments, will not restore operation.

It is recommended that the transmitter's output be connected to a precision 50 Ω resistive dummy load (rated for at least 1.5 times the rated transmitter carrier power) before starting off-air troubleshooting procedures. If an appropriate dummy load is not available, troubleshooting for a majority of faults can be performed with RF power stage turned off. The transmitter may remain connected to its antenna system for these procedures.

NOTE: Reduce the RF output level to a minimal value when troubleshooting faults in the power amplifier stage while the transmitter's RF output is connected to the antenna system.

Electrostatic Protection

The transmitter's assemblies contain semiconductor devices that are susceptible to damage from electrostatic discharge. The following precautions must be observed when handling an assembly which contains these devices.

CAUTION! Electrostatic energy is produced when two insulating materials are rubbed together. A person wearing rubber-soled shoes, walking across a nylon carpet or a waxed floor, can generate an extremely large electrostatic charge. This effect is magnified during periods of low humidity. Semiconductor devices such as integrated circuits, field-effect transistors, thyristors and Schottky diodes may be damaged by this high voltage unless adequate precautions are taken.

Electrical Discharging of Personnel

Personnel should be electrically discharged by a suitable grounding system (e.g., anti-static mats, grounding straps) when removing an assembly from the transmitter, and while handling the assembly for maintenance procedures.

Handling/Storage

An assembly should be placed in an anti-static bag when it is not installed in a transmitter, or when it is not undergoing maintenance. Electronic components should be stored in anti-static materials.

Tools/Test Equipment

Testing and maintenance equipment – including soldering and unsoldering tools – should be suitable for contact with static sensitive semiconductor devices.

Stress Current Protection

Every precaution should be taken to ensure the static sensitive semiconductor devices are protected from unnecessary stress current. This is achieved by ensuring that current is not flowing when an electrical connection is broken, and that voltages are not present on external control/monitoring circuits when they are connected.

Identifying an Alarm

You can identify an alarm locally by viewing the front panel (see [“Front Panel UI Alarm Checks”](#)) or remotely by viewing the remote AUI’s Transmitter Status page (see [“Remote AUI Alarm Checks”](#) on page 4.1.5). After successfully identifying an alarm, attempt to determine the cause of the alarm and correct it (see [“Troubleshooting an Alarm”](#) on page 4.1.6).

Front Panel UI Alarm Checks


There are two ways to check for alarms on the front panel:

- [Alarm/Status LEDs](#)
- [View Alarms Screen](#) - see page 4.1.5

Alarm/Status LEDs

There are four LEDs on the left-hand side of the LCD display that provide information about the operational status of various sections of the transmitter - Controller/Exciter, Power Amplifier, Output Network and Power Supply (see [Figure 4.1.1](#)). The LEDs can glow green, amber or red. Typically, green indicates normal operation, amber indicates a warning, and red indicates a fault or error.

Figure 4.1.1: Alarm/Status LEDs

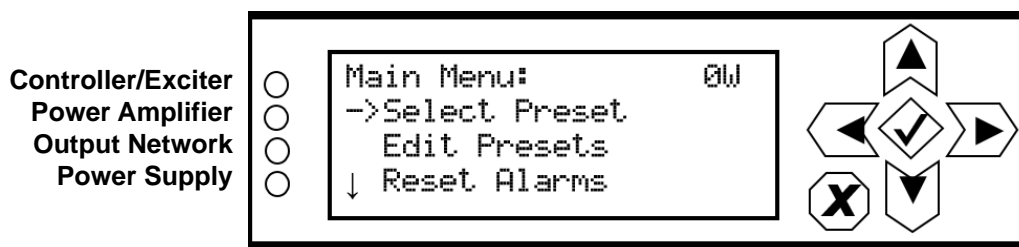

When an LED is:


- ❖ Green - transmitter is on, with no known faults that would affect the normal operation of the transmitter.
- ❖ Amber - a fault is present that affects the normal operation of the transmitter and may cause a reduction in RF power, but the transmitter is still producing RF power.
- ❖ Red - a fault is present and the transmitter is not producing RF power.

When a fault is present, the transmitter may still produce an RF output. In this case, or if the transmitter has shut down, you should schedule and commence more in-depth fault diagnosis. See [“View Alarms Screen”](#) on page 4.1.5.

View Alarms Screen

If an alarm exists and is currently being recognized by the transmitter system, it is displayed in the View Alarms screen (Main Menu -> View Status -> View Alarms) of the front panel Display (see [Figure 4.1.2](#)). Scroll through the View Alarms screen to view the active faults.

Figure 4.1.2: View Alarms Screen

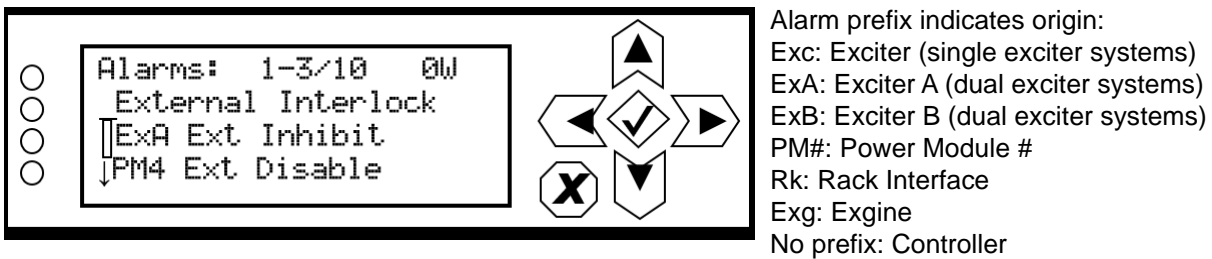


Remote AUI Alarm Checks

The colour of the Status button (see [Figure 4.1.3 on page 4.1.5](#)) at the bottom of the remote AUI indicates the severity of the highest offending alarm. The button can display green, amber or red. When the Status button is:

- ❖ Green - transmitter is on, with no known faults that would affect the normal operation of the transmitter.
- ❖ Amber - a fault is present that affects the normal operation of the transmitter and may cause a reduction in RF power, but the transmitter is still producing RF power.
- ❖ Red - a fault is present and the transmitter is not producing RF power.

Figure 4.1.3: Transmitter Status Page

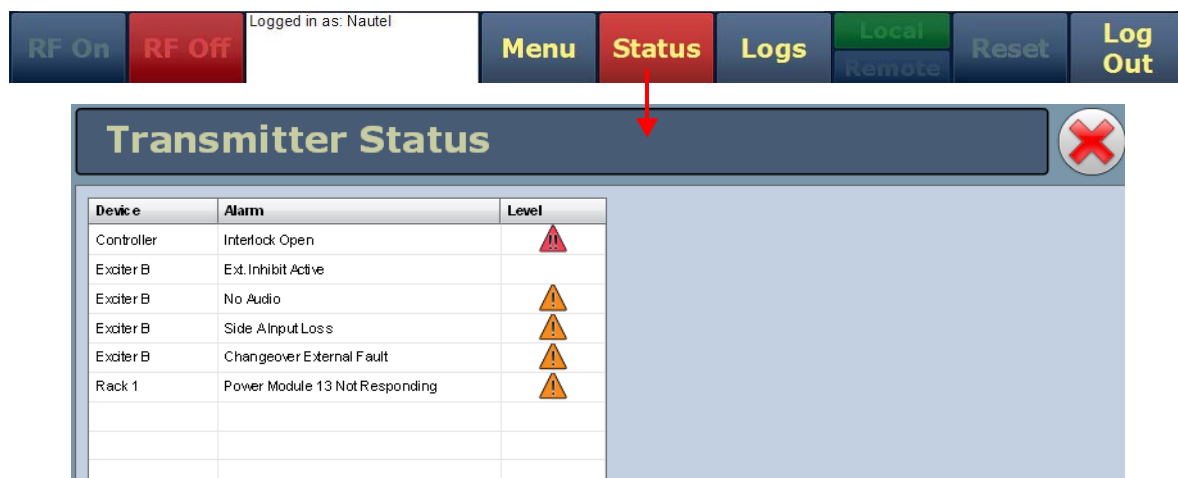

Click the Status button to view the Transmitter Status page (see [Figure 4.1.3 on page 4.1.5](#)), which displays a list of active alarms. Alarms are listed by their origin (Device column), then by name (Alarm column), and then by severity (Level column).

- The Device column displays the sub-system origin of the alarm. The sub-systems that can be displayed are:
 - ❖ Controller: All alarms in this sub-system apply to the controller.
 - ❖ Exciter A or B: All alarms in this sub-system apply to an exciter (A or B).
 - ❖ Rack #: All alarms in this sub-system apply to a rack (cabinet) (only Rack 1 for NX10).
 - ❖ Module #: All alarms in this sub-system apply to a specific RF power module (1 through 4).
 - ❖ Engine: For systems with Engine installed, all alarms in this sub-system apply to the Engine.
- The Alarm column displays the alarm name. Use this name as a cross-reference during troubleshooting (see [“Troubleshooting an Alarm” on page 4.1.6](#)).
- The Level column displays a symbol indicates the severity of the alarm, as follows:
 - ❖ One Yellow ! - low severity, normal operation of transmitter not affected
 - ❖ One Orange ! - medium severity, normal operation of transmitter affected, RF output may be reduced
 - ❖ Two Red !! - high severity, RF output is inhibited

Troubleshooting an Alarm

Troubleshoot an alarm as follows:

NOTE: Before undertaking any troubleshooting, record all meter readings and note if any other alarms are displayed on the front panel UI's View Alarms page or the remote AUI's Transmitter Status page. Record all alarms.

1. Attempt to clear any latching alarms:
 - ❖ locally, using the front panel UI, by pressing the checkmark button in the Main Menu -> View Status -> Reset Alarms screen.
 - ❖ remotely, using the remote AUI, by pressing the Reset button on the bottom banner of the AUI page.

If the alarm persists, it will not clear from the display.

-
2. Locate the alarm name in the appropriate table (see below) to determine the cause of the alarm and perform any recommended procedures in the Description and Troubleshooting Action column. This may also lead to replacing a suspect PWB, power supply or fan, as detailed in [Table 4.1.7 on page 4.1.43](#).

- ❖ See [Table 4.1.1 on page 4.1.8](#) for Controller alarms
- ❖ See [Table 4.1.2 on page 4.1.19](#) for Exciter A/B alarms
- ❖ See [Table 4.1.3 on page 4.1.28](#) for Engine alarms
- ❖ See [Table 4.1.4 on page 4.1.29](#) for RF Power Module alarms
- ❖ See [Table 4.1.5 on page 4.1.34](#) for Rack alarms

NOTE: [Table 4.1.1](#) through [Table 4.1.5](#) list all **Alarms** that can occur, sorted alphanumerically for each sub-system (e.g., Controller, Exciter A/B, Module, etc.), including both the names displayed on the AUI and, if different, the front panel UI (in parentheses). The **Severity** column shows the low, medium or high severity of the alarm (see [page 4.1.6](#)). The **Description and Troubleshooting Action** column provides a brief description of the alarm, troubleshooting tips and a cross-reference to more detailed troubleshooting, as applicable.

- ❖ See [Table 4.1.6 on page 4.1.38](#) for Summary alarms

NOTE: [Table 4.1.6](#) lists the Summary alarms that can be configured for remote monitoring through the front panel UI or remote AUI's Remote I/O -> Remote Outputs menu (see the "Operating the Transmitter" section of the Operations & Maintenance Manual for configuration details). Each Summary alarm can be triggered by any one alarm in a specific sub-set, as shown in [Table 4.1.6](#). The **Description and Trigger Alarms** column of [Table 4.1.6](#) provides a brief description of the summary alarm and a list of the triggering alarms. To determine the root cause(s) of a Summary Alarm, check the front panel UI or remote AUI for an offending trigger alarm and refer to its troubleshooting information for more details.

3. If troubleshooting and subsequent replacement of a suspect PWB or module causes the alarm to disappear, the alarm has been successfully cleared. If the fault condition does not clear contact Nautel Customer Service for assistance.

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
+1.2V Fail	Low	This alarm occurs if the +1.2 V rail is outside its acceptable range of 1.08 V to 1.32 V. The transmitter takes no action on this alarm. Replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
+3.3V Fail	Low	This alarm occurs if the +3.3 V rail is outside its acceptable range of 2.97 V to 3.63 V. The transmitter takes no action on this alarm. Replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
-15V Fail	Low	This alarm occurs if the -15 V rail is outside its acceptable range of -16.5 V to -13.5 V. The transmitter takes no action on this alarm. Replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Arc Shutback	High	This alarm indicates the transmitter has entered a shutback (see Shutback on page 3.1.10 of the Operations & Maintenance Manual for a description of the shutback routine) due to one of the rack controller's arc detectors being activated. When this fault occurs, the transmitter immediately inhibits PDM and the transmitter's output power drops to 0 W. Once the fault clears the transmitter will automatically recover, either to the power setpoint, or to a reduced power as determined by the cutback routine (see Cutback on page 3.1.11 of the Operations & Maintenance Manual for a description of the cutback routine). Visually inspect the inside of the transmitter to locate the fault causing the arc detector to trigger.
Audio Loss Shutdown	High	This alarm occurs if the modulation level is below the preset threshold for the designated period of time set in the Audio Loss settings of the current preset, and the desired action was set to RF Inhibit. This will cause the transmitter to shut down its RF output until the exciter determines that the modulation source has returned. If this alarm is unexpected, check the audio inputs specified in the preset and verify there is signal present.
Brownout Reset	Medium	This alarm is only visible in the transmitter logs, and indicates the controller was reset because its +5 V power supply voltage was less than +4.3 V, but remained above +1.4 V, and then subsequently recovered. This alarm should occur concurrently with other alarms. Follow the troubleshooting information for the associated alarms. If the alarm persists without the presence of other alarms, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Combiner Interlock Open (Combiner Interlock)	High	This alarm will only occur if the transmitter is connected in a combined system. The alarm indicates that the interlock signal from the combiner is open. When this alarm occurs, the transmitter immediately inhibits the PDM and the transmitter's output power drops to 0 W. The transmitter will automatically recover when the condition is cleared. Check the combiner for a condition that may cause it to open the interlock to the transmitter. If so, troubleshoot the cause of that condition. If not, inspect the wiring between the combiner and the transmitter and verify there is no damage. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Controller Reset	Medium	This alarm is only visible in the transmitter logs, and indicates the controller was reset because its +5 V power supply voltage was less than 1.4 V, which normally happens due to a loss of ac power. If the controller is rebooting without losing ac power to the transmitter, check for the presence of other alarms at the time of the controller reset and follow the troubleshooting information for those alarms. Otherwise, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
EEPROM Failure: Config (EEP Fail Config)	Medium	<p>This alarm occurs when the transmitter is unable to read the following settings from EEPROM upon boot-up. The transmitter will revert to its initial default settings, which may be different from the values set before the transmitter was shipped. The alarm will remain asserted until at least one of the settings are changed. Affected settings are:</p> <ul style="list-style-type: none"> – Main Exciter (Defaults to A) – Standby Exciter Installed (Defaults to Yes) – Exciter Sync (Defaults to None) – Active Max Power Lockout (Defaults to 1) – RF Monitor Select (Defaults to forward power) – Host Watchdog Enable (Defaults to OFF, should be turned ON) – UI Backlight Brightness (Defaults to 100%) – UI Inactivity Timeout (Defaults to 10 minutes) – Network Configuration <p>Configure the affected settings as desired. Cycle (turn off, then on) ac power to the transmitter. If the alarm persists, replace the battery on the control/interface PWB and retry the above steps. If the alarm persists, replace the control/interface PWB (see “Control/Interface PWB Removal/Replacement” on page 4.1.65).</p>
EEPROM Failure: Potentiometers (EEP Fail Pots)	Medium	<p>This alarm occurs when the transmitter is unable to read its RF Symmetry Adjustment calibration from EEPROM upon boot-up. The alarm will remain asserted until the RF Symmetry has been re-calibrated. When this alarm occurs, the transmitter will load a default level of exactly mid-scale for the symmetry adjustment potentiometers. Set the RF Symmetry Adjust per the factory configuration. Cycle (turn off, then on) ac power to the transmitter. If the alarm persists, replace the battery on the control/interface PWB and retry the above steps. If the alarm persists, replace the control/interface PWB (see “Control/Interface PWB Removal/Replacement” on page 4.1.65).</p>

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
EEPROM Failure: Remotes (EEP Fail Remotes)	Medium	This alarm occurs when the transmitter is unable to read its remote I/O configuration from EEPROM upon boot-up. The transmitter will revert to the initial default remote I/O settings and the alarm will remain asserted until a new remote input/output is configured. Reconfigure the remote I/O settings as desired. Cycle (turn off, then on) ac power to the transmitter. If the alarm persists, replace the battery on the control/interface PWB and retry the above steps. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
EEPROM Failure: Schedule (EEP Fail Schedule)	Medium	This alarm occurs when the transmitter is unable to read its schedule configuration from EEPROM upon boot-up. The transmitter will establish a new, completely blank schedule. The alarm will remain asserted until at least one new scheduled event is created. Recreate the desired schedule settings. Cycle (turn off, then on) ac power to the transmitter. If the alarm persists, replace the battery on the control/interface PWB and retry the above steps. If it still persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
EEPROM Failure: Thresholds (EEP Fail Thresholds)	Medium	This alarm occurs when the transmitter is unable to read the setting for the Fast SWR Shutback threshold voltage from EEPROM upon boot-up. The transmitter will revert to its initial default settings, which may be different from the values set before the transmitter was shipped. The alarm will remain asserted until the setting is changed. Contact Nautel to obtain to correct value for the Fast SWR Shutback Voltage threshold and configure the setting accordingly. Cycle (turn off, then on) ac power to the transmitter. If the alarm persists, replace the battery on the control/interface PWB and retry the above steps. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Exciter A or B Not Responding (Exciter A or B Offline)	Medium	This alarm occurs when the controller is configured to expect exciter A (or B) is installed, and it has failed to receive any serial response from that exciter. The alarm is cleared if the controller is configured to expect that same exciter is not installed, or if it receives a serial response from the exciter. When this alarm occurs on the standby exciter, automatic changeover will be inhibited. When this alarm occurs on the main exciter, if automatic changeovers are enabled and the main exciter is active and the standby exciter is responding to serial communication, an automatic changeover will occur. If there are two exciters in the transmitter, swap exciter positions. If the alarm follows the exciter, or there is only one exciter in the system, replace the digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69). If the alarm persists, or the alarm remains with the position, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Exciter Changeover (Auto Changeover)	Medium	This alarm indicates that an automatic exciter changeover has occurred. This alarm will occur as a result of another alarm triggering the automatic exciter changeover. Follow the troubleshooting information for the associated alarm.
Exgine Not Responding (Exgine Offline)	Low	This alarm indicates the transmitter is configured for an IBOC mode of operation and the controller has not received any communication from the Exgine over a set period of time. The alarm will clear if the transmitter is configured for a non-IBOC mode of operation, or the controller receives a response from the Exgine. If the Exgine is operating normally, ignore this alarm. If the Exgine is not operating normally, cycle ac power to the transmitter. If the alarm persists, inspect the cabling between the Exgine and the transmitter controller. If the cabling is acceptable and the alarm persists, replace the Exgine PWB see "Exgine PWB Replacement" on page 4.1.74). If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
External PDM Inhibit (External Inhibit)	High	This alarm occurs if the external PDM inhibit circuit, wired to the control/interface PWB, is closed. When this alarm occurs, the transmitter immediately inhibits the PDM and the transmitter's output power drops to 0 W. The transmitter will automatically recover when the condition is cleared. Ensure the transmitter is set to RF Off and disconnect the PDM inhibit circuit from the transmitter. Measure the impedance of the interlock circuit. If the impedance measures short circuit (low impedance) the PDM inhibit is closed, and it will be necessary to locate the external device that is causing this condition. If the impedance does not measure short circuit, verify the PDM inhibit circuitry has been properly configured. If the PDM inhibit circuitry is properly configured and the alarm persists, replace the control PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). See also "Controller: External PDM Inhibit" on page 4.1.46 .
External Reset	Medium	This alarm is only visible in the transmitter logs, and indicates the controller was reset by triggering the controller's reset pin. If this alarm continues to occur unexpectedly, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Fast SWR Shutback	High	This alarm indicates the peak reflected power measured by the directional coupler at the output of the transmitter has exceeded the factory-set threshold. When this alarm occurs, the transmitter immediately inhibits the PDM and RF drive (see Shutback on page 3.1.10 of the Operations & Maintenance Manual for a description of the shutback routine). Once the fault clears, the transmitter will automatically recover, either to the power setpoint, or to a reduced power as determined by the cutback routine (see Cutback on page 3.1.11 of the Operations & Maintenance Manual for a description of the cutback routine). If this alarm occurs in conjunction with the Exciter's SWR Shutback alarm, it generally indicates a fault in the transmitter's external RF output network (e.g., rigid-line, antenna, etc.). If this alarm is occurring while the Exciter's SWR Shutback alarm is not, verify the wiring between the directional coupler and the control/interface PWB is not damaged. If not, verify the Fast SWR Shutback threshold is set properly (contact Nautel to obtain the correct setting for your transmitter). If this threshold is set correctly and the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). If the alarm continues to persist, replace the directional coupler assembly (see "Directional Coupler Replacement" on page 4.1.87).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
GPS Not Responding (GPS Offline)	Medium	This alarm indicates the transmitter is configured to use a GPS sync PWB as a frequency and phase reference, but the controller is not receiving communication from the GPS sync PWB. The alarm will clear when the transmitter is configured to not use the GPS sync PWB as the frequency and phase reference, or the controller receives communication from the GPS sync PWB. Inspect the wiring between the GPS sync PWB and the control/interface PWB, if applicable. If the wiring is acceptable, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74).
GPS PLL Unlocked	Medium	This alarm indicates the timing phase-lock-loop between the 1 PPS signal from the GPS and the 10 MHz reference is not locked. This can occur due to a power failure, or because the GPS receiver is not locked to the GPS satellites. Verify the GPS antenna is installed and is located in a spot where it is possible to obtain a GPS satellite lock. If the alarm persists, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74).
GPS Receiver Not Responding (GPS Rcvr Offline)	Medium	This alarm occurs when the GPS receiver is not responding to serial commands on the GPS sync PWB. When this occurs, the GPS sync PWB's phase-lock-loop will not be locked, and the timing signals will be free-running. Cycle (turn off, then on) the ac power to the transmitter. If the alarm persists, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74).
GPS Sync No 1-PPS (GPS No 1-PPS)	Medium	The alarm occurs when the 1 PPS output from the GPS receiver is not present. This occurs when the GPS receiver is not locked to the GPS satellites. When the 1 PPS input is not present, the phase-lock-loop cannot lock properly to discipline the 10 MHz reference. Verify the GPS antenna is installed and is located in a spot where it is possible to obtain a GPS satellite lock. If the alarm persists, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74).
GPS Unlocked	Medium	This alarm occurs when the GPS module on the GPS sync PWB does not have a valid satellite lock. When this alarm occurs, the phase-lock-loop is no longer running to discipline the 10 MHz oscillator, and it is allowed to free-run at the last valid setting. Verify the GPS antenna is installed and is located in a spot where it is possible to obtain a GPS satellite lock. If the alarm persists, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
High RF Drive	Low	This alarm indicates the controller's RF Drive Duty Cycle meter has risen above 60% for longer than 10 seconds. This alarm will cause an exciter changeover, if automatic changeover is enabled and the transmitter is operating on the main exciter. If there are two exciters in the transmitter, swap exciter positions. If the alarm follows the exciter, or there is only one exciter in the system, replace the digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69). If the alarm persists or the alarm remains with the position, replace the control/interface PWB. (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Host Network Down	Low	This alarm indicates the transmitter is configured to have networking enabled, but the host is indicating there is no network connectivity. If the transmitter is not connected to a network, the alarm can be inhibited by changing the network settings to static IP and setting the IP address to 0.0.0.0. If the transmitter is connected to a network, verify the network settings are configured properly, and the network cable is connected to the correct port on the transmitter.
Host Not Booted	Medium	This alarm indicates that the controller has not received any communication from the host since the last time the controller booted (i.e., was powered up). The occurrence of this alarm is normal for approximately one to five minutes while the host is booting, immediately after ac power has been applied to the transmitter. If this alarm continues to occur more than 30 minutes after ac power has been applied to the transmitter, cycle (turn off, then on) the ac power. If the alarm persists after 30 minutes, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Host Not Responding	Medium	This alarm indicates that the controller has not received any communication from the host in a set period of time. The occurrence of this alarm is normal for approximately one to five minutes while the host is booting, immediately after ac power has been applied to the transmitter. If this alarm continues to occur more than 30 minutes after ac power has been applied to the transmitter, cycle (turn off, then on) the ac power. If the alarm persists after 30 minutes, replace the control/interface PWB. (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Internal Watchdog Reset	Medium	This alarm will only be seen in transmitter logs, and indicates that the controller was reset by its internal watchdog. If this alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Interlock Open	High	This alarm indicates that the external interlock input wired to the control/interface PWB is open. An alarm will be triggered by user-set conditions (e.g., the state of the door to the ATU). When this alarm occurs, the transmitter immediately inhibits the PDM and the transmitter's output power drops to 0 W. If this condition persists for more than 10 seconds, the transmitter will inhibit the RF power modules, fans and B+ power supply. The transmitter will automatically recover when the condition is cleared. With the transmitter set to RF Off, disconnect the interlock circuit from the transmitter. Measure the impedance of the interlock circuit. If the impedance measures open circuit (high impedance) the interlock is open, and it will be necessary to locate the external device that is causing this condition. If the impedance does not measure open circuit, verify the interlock circuitry has been properly configured. If the interlock circuitry is properly configured, make a temporary jumper and use it to short out the interlock circuit. If the alarm disappears, the transmitter is operating as expected and it will be necessary to locate the external device that is causing this condition. If the alarm persists, replace the control PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). See also "Controller: Interlock Open" on page 4.1.46 .
Jumped to Bootloader Code (Jump to Bootloader)	Medium	This alarm is only visible in the transmitter logs, and indicates the controller was reset due to performing a firmware upgrade. If this alarm is occurring when a firmware upgrade is not being performed, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Local UI Failure (UI Failure)	Low	This alarm indicates that the transmitter controller is not receiving any communication from the local user interface. The alarm will clear when the controller begins to receive communications from the local user interface. Inspect the wiring between the local user interface and the control/interface PWB. If the alarm persists, replace the local user interface (see "Graphic User Interface Display and UI Interface PWB Replacement" on page 4.1.94).
Low Battery	Medium	This alarm occurs if the voltage of the backup battery has fallen below an acceptable level. Replace the battery (BT1) on the control/interface PWB while ac power is on. If the alarm persists after replacing the battery, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Low RF Drive	Low	This alarm indicates the controller's RF Drive Duty Cycle meter has fallen below 40% for longer than 10 seconds. This alarm will cause an exciter changeover, if automatic changeover is enabled and the transmitter is operating on the main exciter. If there are two exciters in the transmitter, swap exciter positions. If the alarm follows the exciter, or there is only one exciter in the system, replace the digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69). If the alarm persists, or the alarm remains with the position, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Out of Memory Reset	Medium	This alarm is only visible in the transmitter logs, and indicates the controller automatically reset because it ran out of the memory required to continue normal operation. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Power Loss	Medium	This alarm indicates that the controller lost power at the time the event was logged. The alarm should occur concurrently with other alarms. Follow the troubleshooting action for the associated alarm(s). Otherwise, if the alarm persists without the presence of other alarms, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Rack 1 Not Responding	Medium	This alarm indicates that the controller is no longer receiving serial communication from Rack 1. No action is taken. Check the wiring and connections between the control/interface PWB and the rack interface PWB and verify there is no damage. If the wiring is OK, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). If the alarm persists, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
Rack Shutback	High	This alarm indicates that the rack interface has requested a shutback, but there is no information on the specific cause for the request. This alarm causes the transmitter to shut back (see Shutback on page 3.1.10 of the Operations & Maintenance Manual for a description of the shutback routine). Check the wiring and connections between the control/interface PWB and the rack interface PWB, specifically the Rack Shutback signal and the serial communication bus, and verify there is no damage. If the wiring is OK, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65) or the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).

Table 4.1.1: Troubleshooting Controller Alarms

Controller Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Unknown Reset Cause	Medium	This alarm is only visible in the transmitter logs, and indicates the controller was reset, but it was unable to determine the cause of the reset. if the controller is rebooting unexpectedly, check for the presence of other alarms at the time of this alarm and follow the troubleshooting action for the associated alarm(s). Otherwise, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
AES 1 (or 2) Unlocked	Medium	This alarm indicates there is no AES data detected on the applicable AES (1 or 2) input and that same input is selected as the active input in either Analog or Digital settings for the active preset. Verify there is valid AES data being applied to the corresponding input on the control/interface PWB. If there is data being applied to the correct input and the alarm persists, replace the digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69) or the control/interface PWB (see “Control/Interface PWB Removal/Replacement” on page 4.1.65).
AM Input Loss	Medium	This alarm occurs if the input signal being used to generate the analog AM modulation is low or not present. This alarm will be triggered immediately if the AES input is unlocked, or after 2 minutes if the incoming modulation level is below 10%. The presence of this alarm will trigger an exciter changeover if automatic changeover is enabled and the transmitter is operating on the main exciter. Verify that the active preset is calling up the correct audio input and is set for the correct input level. Verify that there is a valid audio signal on the audio input being used. If the alarm persists, replace the associated digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69).
Audio Loss	Medium	This alarm occurs as a result of the modulation being below the specified threshold for the designated period of time set in the remote AUI's Audio Loss tab for the current preset. This will cause the action specified in the preset to be taken. Check the audio inputs specified in the preset and verify there is signal present.
Audio Overmod Protection (Audio Overmod)	Medium	This alarm indicates that the exciter has reduced the output signal due to overmodulation on the audio input. This alarm is typically caused by low frequency or excessive modulation, although it can also occur if the DRM AES input sensitivity is incorrectly configured, resulting in too much signal level. The alarm will clear and allow the gain to return to 100% once the excessive modulation condition disappears. Check the input signal being applied to the exciter and reduce the level as necessary.

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
B+ Sample Uncalibrated (B+ Uncalibrated)	Medium	This alarm indicates that the associated exciter's B+ sample has never been calibrated. This alarm should only occur when replacing an exciter, and indicates the configuration file was not properly uploaded (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
Carrier Sync Unlocked (Sync Unlock)	Medium	This alarm occurs when the transmitter's Sync Source is set to GPS Sync Card or Combiner and the exciter cannot lock to the 1 kHz signal used for phase synchronization. If the Sync Source is set to Combiner, this alarm will cause the transmitter to be inhibited, otherwise this alarm is displayed for information only. If the transmitter's Sync Source is set to GPS Sync Card, check the connection between the GPS sync PWB and the control/interface PWB. If the connection looks OK, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74). If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69) or the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). If the transmitter's Sync Source is set to Combiner, check the connection between the combiner and the control/interface PWB. If the connection looks OK, troubleshoot the combiner's synchronization signal source.
Cutback	Medium	The forward power has been reduced due to multiple shutbacks. See "Cutback:" on page 3.1.11 of the Operations & Maintenance Manual for a description of the cutback routine. Check for associated alarms and refer to their troubleshooting information to determine the specific cause of the cutback.
Digital Input Loss (Dig Input Loss)	Medium	This alarm indicates the input signal being used to generate the digital modulation is too low or no longer present. This alarm will be triggered immediately if the AES input (DRM) is unlocked or the Exgine stream (IBOC) is missing, or if the DSP is receiving zeroes on the AES (DRM) or Exgine (IBOC) input for more than 100 ms. The presence of this alarm will trigger an exciter changeover, if automatic changeover is enabled and the transmitter is operating on the main exciter. Verify that the active preset is calling up the correct input and is set for the correct input level. Verify that there is a valid signal on the input being used. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Entered Firmware Upgrade (FW Upgrade)	Low	This alarm indicates that the exciter firmware is being upgraded, and it has inhibited the RF output until complete. The alarm will clear when the upgrade is complete and the exciter reboots. If a firmware upgrade has not been initialized intentionally, try resetting the exciter. If the alarm continues to persist, replace the associated digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69).
External Inhibit Active (Ext Inhibit)	Low	This alarm indicates that the transmitter controller has inhibited the exciters. Transmitter output power is reduced to 0 W. It is normal to see this alarm when the transmitter is in an RF OFF state. If this alarm occurs while RF is turned on, there should be a corresponding alarm indicated by the transmitter controller. Follow the troubleshooting information for that alarm.
FPGA Test Failed (FPGA Test Fail)	Medium	This alarm indicates there is a programming failure with the FPGA. Cycle the power (off, then on) to the transmitter. If the alarm persists, replace the associated digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69).
High B+ Voltage (High B+)	Medium	This alarm indicates that the B+ voltage measured by the exciter exceeded the B+ setpoint by more than 20 V for at least ten (10) seconds. If the rack interface’s High B+ voltage alarm is present, see the troubleshooting action for that alarm. If the rack interface’s alarm is not present, compare the exciter’s B+ voltage meter with the rack’s B+ voltage meter. If they are different, calibrate the exciter’s B+ voltage sample using a multimeter to measure the B+ voltage. If after calibrating the exciter’s B+ voltage sample the meters continue to read the incorrect voltage, replace the associated digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69).
High DC Current Foldback (IDC Foldback)	Medium	This alarm indicates that the transmitter’s forward power is being reduced because the total dc current being drawn from the B+ power supply, as measured by the transmitter controller’s Total B+ Current meter, exceeded 49 A. The alarm will clear once the transmitter’s forward power is no longer being reduced. This alarm indicates the transmitter’s efficiency is much lower than expected, most likely due to a poor load being presented to the RF power modules. Ensure the load impedance being presented to the transmitter by the antenna network is within specification.

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
High Forward Foldback (Fwd Foldback)	Medium	This alarm occurs when the transmitter's forward power has been reduced because the average forward power increased above 150% of the transmitter's rated carrier power. The alarm will clear when the forward power is no longer being reduced. The alarm will generally occur due to excessive modulation. Reduce the level of modulation applied to the transmitter.
High Power Lockout (Power Lockout)	Medium	This alarm occurs when the exciter has reduced the power set point due to the currently active high power lockout limit being lower than the active preset's power set point.
High Temperature Foldback (Temp Foldback)	Medium	This alarm indicates either the average temperature of the RF power modules has exceeded 80 degrees Celsius, or the rectifier heatsink temperature has exceeded 80 degrees Celsius, and the transmitter's forward power is being reduced to maintain temperatures that are below the above temperature thresholds. Once the high temperature condition has cleared, it may take up to an hour for the transmitter to return to its power setpoint, and the alarm will clear when the power is no longer being reduced. Otherwise, pressing the reset button will cause the alarm to clear. Check the transmitter's output network and verify that the air filter in the back of the cabinet is clean. Verify the temperature of the transmitter building is within specifications.
Low B+ Voltage (Low B+)	Medium	This alarm occurs when the B+ voltage measured by the exciter drops below 75% of the B+ setpoint for more than 10 seconds. When this alarm is present the exciter will not allow the PDM duty cycle to be increased to compensate for fluctuations in B+. This alarm will clear when the B+ voltage measurement exceeds 81.25% of the B+ setpoint. Generally this alarm indicates that the B+ voltage cannot be increased because the ac voltage is too low. Check the ac mains voltage connected to the transmitter and verify the power transformer is tapped correctly.
Low Forward Power Threshold 1 (or 2) (Low Forward 1 or 2)	Medium	This alarm occurs when the output power of the transmitter is below the corresponding user-defined Low Forward Power Threshold (1 or 2). This alarm should occur with other alarms indicating why the transmitter's output power has dropped. See the troubleshooting information with associated alarms.

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
No B+ Sample	Medium	This alarm indicates the exciter's B+ voltage sample is below 40 V for more than 10 seconds. If there is an associated Low B+ voltage alarm, follow the troubleshooting information for that alarm. If there are no additional alarms and there is a second exciter installed, switch exciters and check if the alarm is present on the other exciter. If the alarm is present on the second exciter, check the cabling between the B+ sampling point and the control/interface PWB. If the connection is OK, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). If the alarm is not present on the second exciter, or there is no second exciter in the transmitter, replace the digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
No Carrier Sync Signal Present (No Carrier Sync)	Medium	This alarm will occur when the transmitter's Sync Source is set to GPS Sync Card or Combiner and the 10 MHz or 1 kHz synchronization signal is either not present or out of specification. If the Sync Source is set to Combiner, this alarm will cause the transmitter to be inhibited, otherwise this alarm is displayed for information only. If the transmitter's Sync Source is set to GPS Sync Card, check the connection between the GPS sync PWB and the control/interface PWB. If the connection is OK, replace the GPS sync PWB (see "GPS Sync PWB Replacement" on page 4.1.74). If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69) or the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65). If the transmitter's Sync Source is set to Combiner, check the connection between the combiner and the control/interface PWB. If the connection looks OK, troubleshoot the combiner's synchronization signal source.
No External 10 MHz (No Ext 10MHz)	Medium	This alarm indicates the transmitter is set to run on an external 10 MHz source, but the exciter has determined the frequency of the external source to be outside of the range 9.9 MHz to 10.1 MHz. This will cause the exciter to revert to using its internal 10 MHz reference until it determines the external 10 MHz is in range. This may also cause an exciter changeover if a backup exciter is installed and automatic changeover is enabled. Check the integrity and signal level of the external 10 MHz source. If the external source is acceptable and the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
No Host Audio	Medium	This alarm indicates there is no audio modulation being provided by the audio player when the transmitter configured to run using the audio player as the audio source. This alarm will trigger the AM Input Loss alarm. Verify the transmitter is intentionally running with the audio player as the analog audio source. Verify the audio player is configured to play audio files, those files are present on a USB flash drive connected to the transmitter, and the audio player is playing. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69) or the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
No IBOC Data	Medium	This alarm indicates there is no modulation data being provided by the embedded Engine when the transmitter is running in an IBOC mode of operation. This alarm will trigger the Digital Input Loss alarm. Verify the transmitter is operating in the intended mode. Verify the embedded Engine is connected to the control/interface PWB and the wiring connections are intact. Verify the Exporter is connected to the Engine and the Engine is receiving data from the Exporter. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69) or the Engine PWB (see "Engine PWB Replacement" on page 4.1.74).
Over-Current Shutback (RF I Shutback)	High	This alarm indicates the peak RF current at the output of the transmitter has exceeded the Peak RF Current Limit. This alarm causes the transmitter to immediately shut down its RF output and then recover. If this alarm occurs in conjunction with the Controller's Fast SWR Shutback alarm, there may be a fault in the transmitter's external RF output network (i.e., rigid-line, antenna, etc.). If this alarm is occurring without the presence of the Controller's Fast SWR Shutback alarm, verify the RF current sample, RF voltage sample and the wiring between the sample point and the control/interface PWB is not damaged. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
PLL Unlocked	High	This alarm indicates the exciter's phase lock loop, which locks the transmitter's carrier frequency to a 10 MHz reference, is no longer locked to the reference. If an external 10 MHz source is being used, the exciter will fall back to using its internal 10 MHz clock. Otherwise, the exciter will inhibit its output. If an external 10 MHz source is being used, check the integrity and signal level of the source. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
Power Below Setpoint (Pwr Below Set)	Medium	This alarm indicates that the transmitter cannot achieve the desired output power. For the alarm to occur, the power must be at least 10% below the setpoint for more than four (4) seconds, and the exciter is not able to increase the output power because it has reached maximum gain, or the output is being limited by a foldback condition. The alarm is typically accompanied by other alarms. See the troubleshooting action for the associated alarms
Pre-correction Inhibited (Correction Off)	Medium	This alarm indicates that the exciter has disabled its pre-correction compensation. This alarm will occur because the transmitter's B+ voltage is too low. See the troubleshooting action for the associated low B+ voltage alarm.
Protection Mechanisms Disabled (Protection Off)	Medium	This alarm indicates that the exciter's protection (shutback, foldback, cutback) has been turned off by the user. The state should only be required when calibrating the transmitter after a frequency change. If this state is not intentional, press the reset button on the associated digital AM exciter PWB. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
Reboot for Settings Needed (Reboot Needed)	Medium	This alarm indicates that the exciter needs to reboot itself to reconfigure its settings. The exciter should automatically reboot itself, however if the alarm persists, press the reset button on the associated digital AM exciter PWB. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
RF Probes Uncalibrated (RF Uncalibrated)	High	This alarm indicates that the associated exciter has not been calibrated for the transmitter's current operating frequency. If the operating frequency has been changed inadvertently, change the frequency back to its original setting. If a frequency change has been performed, recalibrate the exciter per the Nautel provided frequency change procedure.

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
SWR Foldback	Medium	This alarm indicates the average reflected power has exceeded the acceptable limit, and the transmitter's RF output is being reduced to maintain the maximum acceptable reflected power. This alarm normally occurs due to a poor impedance being presented to the transmitter. Inspect the antenna network and check the tuning to ensure the impedance being presented to the transmitter is within specification.
SWR Shutback	High	This alarm indicates the transmitter's peak reflected power has exceeded the factory set peak reflected limit. This alarm causes the transmitter to immediately shut down its RF output, then recover. If this alarm occurs in conjunction with the Controller's Fast SWR Shutback alarm, it generally indicates a fault in the transmitter's external RF output network (e.g., rigid-line, antenna, etc.). If this alarm occurs without the presence of the Controller's Fast SWR Shutback alarm, verify the RF current sample, RF voltage sample and the wiring between the sample point and the control/interface PWB is not damaged. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
Transmitter Gain Too Low (TX Gain Low)	High	This alarm occurs when the power gain of the transmitter falls below 63%. This alarm is latching and requires pressing the reset button to clear the alarm. This alarm normally occurs because there is a significant number (greater than 37%) of disabled power modules. Try resetting transmitter alarms to clear power module faults. If the alarm persists, repair or replace RF power modules to clear this alarm (see "Troubleshooting RF Power Modules" on page 4.1.57).
Transmitter Type Not Set (TX Type Not Set)	High	This alarm indicates that the associated exciter has not been informed of the type of transmitter it has been installed in. If the affected exciter is a replacement, follow the digital AM exciter PWB replacement procedure to clear the alarm (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
Unsigned DSP Image (Unsigned DSP)	High	This alarm indicates that the software installed on the exciter is invalid or corrupt and it is inhibiting its output. Try pressing the reset button on the digital AM exciter PWB. If the alarm persists, perform a software upgrade on the transmitter. If the alarm persists, replace the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.2: Troubleshooting Exciter A/B Alarms

Exciter A/B Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Unsigned FPGA Image (Unsigned FPGA)	High	This alarm indicates that the software installed on the exciter is invalid or corrupt. Press the reset button on the digital AM exciter PWB. If the alarm persists, perform a software upgrade on the transmitter. If the alarm persists, replace the associated digital AM exciter PWB (see “Digital AM Exciter PWB Replacement” on page 4.1.69).

Table 4.1.3: Troubleshooting Engine Alarms

Engine Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
AM/FM Mode Mismatched (Mode Mismatch)	Medium	This alarm indicates the Exporter mode does not match the Engine mode. Reconfigure the Exporter or Engine to the correct mode.
DPLL Unlocked	Medium	This alarm occurs when the Engine phase-locked loop can no longer follow the reference input within 1 ppm of its calibrated value. When using Ethernet sync, this can be triggered by excessive jitter on the Ethernet link or a sudden change in throughput delay of the E2X signal path (e.g., switched IP circuits). This alarm can be temporary, in this case, once the delay has been compensated for and a new equilibrium has been found. This alarm can also be caused by Engine crystal aging, which can be resolved by recalibrating the Engine crystal. Ensure the alarm is not temporary and persists for at least one (1) hour. Verify the disciplining input (Exporter clock) is correct. If Engine crystal aging is suspected, widen the VCXOPPM limits to 5 ppm. Restart the system, operate for 24 hours and ensure the alarm clears. Configure the calibrated VCXO value with the new DAC value as reported from the Engine status screen. Set the limits back to 0.95 ppm. Restart the system and ensure the alarm is cleared.
Lost External 10MHz (Lost Ext 10MHz)	Medium	This alarm is occurs when the Engine's external 10 MHz signal disappears during an active E2X connection. When this alarm is present, the Engine will run on the internal oscillator. This can eventually lead to diversity delay drifts and FIFO Overflow or Underflow conditions. If an external 10 MHz signal is being intentionally applied to the Engine, verify a valid 10 MHz signal is being applied to the Engine. If an external 10 MHz signal is not being applied to the Engine, cycle (turn off, then on) ac power to the transmitter. If the alarm persists in either condition, replace the Engine PWB (see "Engine PWB Replacement" on page 4.1.74).
Network Down	Medium	This alarm indicates the Engine has no network connectivity. Verify the Engine's network settings are configured properly, and the network cable is connected to the correct port on the Engine PWB.
Network Misconfigured	Medium	This alarm indicates that invalid Engine network parameters have been configured. Review and correct all engine network settings including the IP address, netmask and gateway.
System Error	Medium	This alarm acts as a summary alarm for a number of unexpected Engine system conditions, such as failed memory checks or internal configuration errors. Contact Nautel Customer Service to troubleshoot this issue.

Table 4.1.4: Troubleshooting RF Power Module Alarms

Module Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
+15V Fail	Medium	This alarm indicates the RF power module's +15 V power supply is below +13.5 V or above +16.5 V. This alarm will cause the RF power module to be immediately disabled. If other alarms are present at the same time this alarm is active, see the troubleshooting action for the associated alarms. Otherwise, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52).
EEPROM Failure (EEPROM Fail)	Medium	This alarm indicates the RF power module was not able to load valid data from its EEPROM. Try removing and re-inserting the RF power module. If the alarm persists, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52).
External Disable Active (Ext. Disable)	Medium	This alarm indicates the PDM cable has been disconnected from the front of the RF power module, which causes the power module to be immediately disabled. If this alarm occurs, reconnect the PDM drive cable associated with that RF power module. If the problem persists, swap the affected RF power module with an operational RF power module's position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with the position, try replacing the PDM drive cable. If the alarm persists, replace the source of the PDM signal (see "Digital AM Exciter PWB Replacement" on page 4.1.69 or "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Front Panel Inhibit (User Inhibit)	Medium	This alarm indicates that the RF power module has been disabled through the front panel user interface. If this alarm is present, attempt to enable the RF power module through the front panel user interface.
High B+ Voltage (High B+)	Medium	This alarm indicates the RF power module's B+ meter has exceeded 450 V. If high B+ voltage alarms are present for other system components, see the troubleshooting action for those alarms. If the alarm persists, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52).

Table 4.1.4: Troubleshooting RF Power Module Alarms

Module Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
High DC Current (High DC I)	Medium	This alarm indicates that the RF power module's DC Current meter has exceeded 22 A, or the RF power module's peak DC current has exceeded the threshold applied to the microcontroller's comparator. This alarm will immediately disable the RF power module, and latch it off. If this alarm occurred in conjunction with an Overmodulation alarm, follow the troubleshooting action for that alarm. Otherwise, try resetting the alarms using the front panel UI or the remote AUI. If the alarm persists, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the alarm clears, troubleshoot the suspect RF power module for RF FET failures (see "Troubleshooting RF Power Modules" on page 4.1.57) or the associated gas discharge tube has activated. If the alarm persists, suspect that the associated RF relay is not opening (see "Gas Discharge PWB and Relay Replacement" on page 4.1.79).
High PA Voltage (High PAV)	Medium	This alarm occurs because of one of two conditions: (1) the PA voltage is at least 10% above the product of the B+ level and the PDM duty cycle; or (2) the PA voltage has exceeded 95% of the B+ value for more than 50 ms. The alarm is latching and will cause the associated RF power module to disable itself. This alarm generally indicates that a modulator FET has failed. See "Troubleshooting RF Power Modules" on page 4.1.57 to determine whether to replace the affected RF power module or to repair damaged parts.
High RF Drive (High RF Drv)	Medium	This alarm indicates the RF drive duty cycle as measured by the RF power module is above 65%. The affected RF power module is immediately disabled. Try swapping the affected RF power module with an operational RF power module in another position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with that position, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75) or associated RF power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77). If the alarm is present on all RF power modules, try replacing the RF drive cable. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65) or the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.4: Troubleshooting RF Power Module Alarms

Module Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
High Temperature (High Temp)	Medium	This alarm indicates the power module's measured heatsink temperature has exceeded 90 degrees Celsius. The affected RF power module is immediately disabled. If this alarm occurs with another alarm, troubleshoot that alarm first. Otherwise, see "Troubleshooting RF Power Modules" on page 4.1.57 to determine whether to replace the affected RF power module or to repair damaged parts.
Invalid Thermistor Sample (Therm. Fault)	Medium	This alarm indicates there is a problem with the associated RF power module's temperature sample. When this alarm occurs, the associated RF power module will disable itself until the condition is cleared. Inspect R1 on the RF power module, which is soldered to pads G and H of A1, and repair or replace as necessary. Otherwise replace the entire RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52).
Low B+ Voltage (Low B+)	Medium	This alarm indicates the B+ level of the associated RF power module is below 75% of its nominal value. If the Rack Interface's Low B+ Voltage alarm is present, follow the troubleshooting action for that alarm. Try swapping the affected RF power module with an operational RF power module in another position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with that position, check the B+ fuse associated with the RF power module and replace as necessary (see "RF Module #: Low B+ Voltage" on page 4.1.50).
Low Fan 1 (or 2) Speed (Fan 1 or 2 Fault)	Medium	This alarm occurs if the RF power module is expected to produce RF power and the fan (1 or 2) tachometer drops below 1650 RPM. The affected RF power module is immediately disabled. Try swapping the affected RF power module with an operational RF power module in another position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with that position, replace the associated fan tray assembly (see "Fan Tray Replacement" on page 4.1.81). If the alarm persists, replace the associated power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77).

Table 4.1.4: Troubleshooting RF Power Module Alarms

Module Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Low PA Voltage (Low PAV)	Medium	This alarm indicates the RF power module's PA Voltage meter has dropped 10% below the expected value - determined by multiplying the power module's B+ Voltage meter by the PDM Duty Cycle meter - for more than 500 ms. This alarm can only be triggered if the RF power module PDM Duty Cycle meter is above 10%, causing the affected RF power module to be immediately disabled, and latched. Try resetting the alarm using the front panel UI or remote AUI. If the alarm persists, replace the affected RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52).
Low RF Drive	Medium	This alarm indicates the RF drive duty cycle of the affected RF power module is below 35%. The affected RF power module is immediately disabled. Try swapping the affected RF power module with an operational RF power module in another position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with that position, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75) or associated RF power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77). If the alarm is present on all RF power modules, try replacing the RF drive cable. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65) or the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).
No Controller Communications (No Comms)	Medium	This alarm indicates the RF power module has not received any communication from the rack interface for 10 seconds. Try swapping the affected RF power module with an operational RF power module in another position. If the alarm follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the alarm remains with the position, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75) or the power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77).

Table 4.1.4: Troubleshooting RF Power Module Alarms

Module Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Overmodulation (Overmod)	Medium	This alarm indicates the RF power module's PDM Duty Cycle meter is above 95%. Verify the modulation being applied to the transmitter is not too high. Try swapping the RF power module with an RF power module that is not showing this alarm. If the alarm follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the alarm remains with the original position, try replacing the digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69) or the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65).
Residual PA Voltage Present (Residual PAV)	Medium	This alarm indicates the PA voltage of the RF power module is higher than expected with either the modulator or the RF amplifier disabled. See "Troubleshooting RF Power Modules" on page 4.1.57 to determine whether to replace the affected RF power module or to repair damaged parts, suspecting a failure of one of the FETs.
RF Drive Fault (RF Drv Fault)	Medium	This alarm indicates that the duty cycle of the RF drive or the dead time between RF drive signals on the associated RF power module is not as expected. This alarm causes the RF power module to be immediately disabled and latched off. Try resetting the alarm using the front panel UI or the remote AUI. Try swapping the affected RF power module with an operational RF power module in another position. If the fault follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the fault remains with that position, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75) or associated RF power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77). If the alarm is present on all RF power modules, try replacing the RF drive cable. If the alarm persists, replace the control/interface PWB (see "Control/Interface PWB Removal/Replacement" on page 4.1.65) or the associated digital AM exciter PWB (see "Digital AM Exciter PWB Replacement" on page 4.1.69).

Table 4.1.5: Troubleshooting Rack Alarms

Rack Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
+15 V Fail	Medium	This alarm occurs if the +15 V rail is outside the acceptable range (13.5 V to 16.5 V). Measure the output voltage of the +15 V power supply. If it is outside the acceptable range, replace the +15 V power supply (see "+15 V or +48 V Power Supply Replacement" on page 4.1.92). Otherwise check the continuity of the cabling between the power supply and the rack interface PWB and repair as necessary. If the cabling is OK, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
+30 V Fail	Medium	This alarm occurs if the +30 V rail is outside the acceptable range (27 V to 33 V). Replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
+48 V Fail	Medium	This alarm occurs if the +48 V rail is outside the acceptable range (44 V to 52 V). Measure the output voltage of the +48 V power supply. If it is outside the acceptable range, replace the +48 V power supply (see "Graphic User Interface Display and UI Interface PWB Replacement" on page 4.1.94). Otherwise check the continuity of the cabling between the power supply and the rack interface PWB and repair as necessary. If the cabling is OK, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
-15 V Fail	Medium	This alarm occurs if the -15 V rail is outside the acceptable range (-13.5 V to -16.5 V). Suspect a faulty dc-dc converter (U5) on the rack interface PWB. Remove the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75) and replace the defective dc-dc converter or the entire rack interface PWB.
AC Phase Loss	Medium	This alarm occurs when the SCR rectifier assembly detects a significant imbalance in the ac phase voltages. The rectifier will shut down when this condition exists and prevent the transmitter from generating RF. In a safe manner, measure the voltage of each phase of the ac mains. If a phase is missing, check the ac mains fuses. If the ac mains phases are normal and the alarm persists, check the Phase Loss LED on the rectifier. If it is on, replace the SCR rectifier (see "SCR Rectifier Inspection/Replacement" on page 4.1.67). If the Phase Loss LED is off, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
Arc Detector 1	High	This alarm indicates that the transmitter's arc detector has detected an arc and caused the transmitter to shut back. Due to the sensitivity of the arc detector, it is possible for an external UV source to cause this alarm. Check and remove all external UV sources. If the alarm persists, perform a visual inspection inside the rear of the transmitter for signs of corona or arcing.

Table 4.1.5: Troubleshooting Rack Alarms

Rack Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
EEPROM Failure (EEPROM Fail)	Medium	This alarm indicates that the rack controller has failed to load its configuration from EEPROM. Remove and reapply the ac power to the transmitter. If the alarm persists, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
High AC Voltage (High AC)	Medium	This alarm indicates the rack interface's Ac Sample meter is above 384 V. The alarm clears when the sample falls below this voltage. It can be caused by an improperly tapped power transformer or a transient on the ac mains. Verify the mains transformer is tapped correctly (see Step 11 of "Connecting Ac Power" in the Installation Manual). If so, monitor the ac mains for transient conditions when this alarm occurs.
High B+ Shutback (Hi B+ Shutback)	High	This alarm occurs when the B+ voltage measured by the rack interface exceeds the set threshold (normally 430 V). This causes the transmitter to disable the B+ power supply until the B+ voltage has decreased an additional 15 volts below the threshold. This alarm normally occurs with extreme changes in transmitter power (i.e., preset changes, interlock open, etc.). If the alarm is occurring continuously, or when unexpected, monitor the B+ with an oscilloscope and determine if the B+ is exceeding the shutback limit. If it is not exceeding the limit, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75). If it is exceeding the limit, verify the ac mains transformer is tapped correctly (see Step 11 of "Connecting Ac Power" in the Installation Manual).
High B+ Voltage (High B+)	Medium	If the B+ voltage is more than 10 V above the B+ voltage set point, the rack interface will attempt to decrease the rectifier's output. If the rack interface reaches the bottom of its adjustment range and the B+ voltage remains 10 V or more above the B+ voltage setpoint for more than 15 seconds, this alarm will occur. The alarm will clear when the B+ voltage changes to within 10 V of the B+ voltage setpoint, or the B+ power supply is inhibited (by turning RF Off, for example). If the alarm persists while the transmitter is producing RF power, check the ac mains voltages and verify they are within $\pm 10\%$ of the nominal voltage for which the transformer is tapped. Verify the mains transformer is tapped correctly (see Step 11 of "Connecting Ac Power" in the Installation Manual). If the alarm persists, replace the rectifier assembly (see "SCR Rectifier Inspection/Replacement" on page 4.1.67) or the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).

Table 4.1.5: Troubleshooting Rack Alarms

Rack Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
High Rectifier Temperature (Rectifier Temp)	Medium	This alarm indicates that the rectifier heatsink temperature has exceeded 100 degrees Celsius. The exciter should reduce the transmitter's output power before this alarm occurs (see High Temperature Foldback alarm in Table 4.1.2). The alarm will clear once the rectifier heatsink temperature drops below 99.5 degrees Celsius. The alarm indicates that there is excessive dissipation in the rectifier, likely due to high current draw. This may be due to the secondary voltage of the power transformer being lower than specified. Verify the mains transformer is tapped correctly (see Step 11 of " Connecting Ac Power " in the Installation Manual). If the alarm persists, replace the rectifier assembly (see " SCR Rectifier Inspection/Replacement " on page 4.1.67).
Low AC Voltage (Low AC)	Medium	This alarm indicates the rack interface's Ac Sample meter is below 256 V. The alarm clears when the sample rises above this voltage. It is caused by an improperly tapped transformer, or a transient on the ac mains. Verify the mains transformer is tapped correctly (see Step 11 of " Connecting Ac Power " in the Installation Manual). If so, monitor the ac mains for transient conditions when this alarm occurs.
Low B+ Shutdown	High	This alarm indicates that the B+ decreases more than 126 V below the B+ setpoint. While this alarm is active, the rectifier and exciter PDM outputs will be inhibited. This alarm will clear if the measured ac voltage on the transformer secondary increases above 263 Vac line-to-line after a minimum one (1) second delay or if the transmitter is turned RF Off. If the alarm persists, check the ac mains voltage and verify they are within the nominal voltage the transmitter is tapped for $\pm 10\%$. Verify the mains transformer is tapped correctly (see Step 11 of " Connecting Ac Power " in the Installation Manual). With RF On at low power, verify the B+ voltage is 400 V (or per the B+ setpoint if adjusted). If not, replace the rectifier (see " SCR Rectifier Inspection/Replacement " on page 4.1.67). Otherwise suspect the rack interface PWB (see " Rack Interface PWB Replacement " on page 4.1.75).

Table 4.1.5: Troubleshooting Rack Alarms

Rack Alarm Name (AUI/UI)	Severity	Description and Troubleshooting Action
Low B+ Voltage (Low B+)	Medium	If the B+ voltage falls to more than 15% below the B+ voltage set point, the rack interface will attempt to turn up the rectifier output voltage. If the rack interface reaches the top of its adjustment range and the B+ voltage remains 25% or more below the B+ voltage setpoint for more than two (2) seconds, this alarm will occur. The alarm will clear when the B+ voltage changes to within 25% of the B+ voltage setpoint, or the B+ power supply is inhibited (by turning RF Off, for example). If the alarm persists while the transmitter is producing RF power, check the main B+ fuse and replace as necessary. If the fuse is OK or the alarm persists, check the ac mains voltages and verify they are within $\pm 10\%$ of the nominal voltage for which the transformer is tapped. Verify the mains transformer is tapped correctly (see Step 11 of "Connecting Ac Power" in the Installation Manual). If the alarm persists, replace the rectifier assembly (see "SCR Rectifier Inspection/Replacement" on page 4.1.67) or the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75).
Power Module 1 (or 2,3,4) Not Responding (PM 1 or 2,3,4 Offline)	Medium	This alarm indicates that the rack interface PWB is not receiving a response from the associated RF power module. Try swapping the affected RF power module with an RF power module in another location. If the alarm follows the RF power module, replace the RF power module (see "Removing and Reinstalling RF Power Modules" on page 4.1.52). If the alarm remains with the location, replace the rack interface PWB (see "Rack Interface PWB Replacement" on page 4.1.75). If the alarm persists, replace the associated power module interface PWB (see "Power Module Interface PWB Replacement" on page 4.1.77).

Table 4.1.6: Troubleshooting Summary Alarms

Summary Alarm Name, AUI (front panel UI)	Description and Triggering Alarms		
Audio Loss Summary (Audio Loss Summary)	This summary alarm is triggered if any of the following audio loss related alarms occur: <u>Exciter A/B alarms:</u> AES1/2 Unlocked Audio Loss No Host Audio AM Input Loss Digital Input Loss No IBOC Data		
Controller Fault Summary (Controller Summary)	This summary alarm is triggered if any of the following Controller related alarms occur: <u>Controller alarms:</u> EEPROM Failure: Config Host Not Booted +1.2V Fail EEPROM Failure: Potentiometers Host Not Responding +3.3V Fail EEPROM Failure: Remotes Local UI Failure -5V Fail EEPROM Failure: Schedule Low Battery -15V Fail		
Exciter Fault Summary (Exciter Summary)	This summary alarm is triggered if any of the following Exciter related alarms occur: <u>Controller alarms:</u> Audio Loss Shutdown High RF Drive Exciter Changeover Low RF Drive Exciter A or B Not Responding <u>Exciter A/B alarms:</u> AES 1/ 2 Unlocked Low Forward Power 1/2 Power Below Setpoint AM Input Loss No B+ Sample Precorrection Inhibited Audio Loss No Carrier Sync Signal RF Probes Uncalibrated B+ Sample Uncalibrated No External 10 MHz Transmitter Gain Too Low Carrier Sync Unlocked No Host Audio Transmitter Type Not Set Digital Input Loss No IBOC Data Unsigned DSP Image External Inhibit Active PLL Unlocked Unsigned FPGA Image FPGA Test Failed		

Table 4.1.6: Troubleshooting Summary Alarms

Summary Alarm Name, AUI (front panel UI)	Description and Triggering Alarms
Exgine Fault Summary (Exgine Summary)	<p>This summary alarm is triggered if any of the following Exgine related alarms occur:</p> <p><u>Controller alarms:</u> Exgine Not Responding</p> <p><u>Exgine alarms:</u> AM/FM Mode Mismatched FIFO Underflow Network Misconfigured DPLL Unlocked Lost External 10 MHz System Error FIFO Overflow Network Down</p>
External Fault Summary (External Summary)	<p>This summary alarm is triggered if any of the following external alarms occur:</p> <p><u>Controller alarms:</u> Combiner Interlock Open External PDM Inhibit Interlock Open</p> <p><u>Exciter alarms:</u> Audio Overmod Protection</p>
GPS Sync Fault Summary (GPS Sync Summary)	<p>This summary alarm is triggered if any of the following GPS related alarms occur:</p> <p><u>Controller alarms:</u> GPS Not Responding GPS Receiver Not Responding GPS Unlocked GPS PLL Unlocked GPS Sync No 1-PPS</p>
High Reflected Power Summary (Refl Power Summary)	<p>This summary alarm is triggered if any of the following high reflected power related alarms occur:</p> <p><u>Controller alarms:</u> Fast SWR Shutback</p> <p><u>Exciter alarms:</u> SWR Foldback SWR Shutback</p>
High Temperature Summary (High Temp Summary)	<p>This summary alarm is triggered if any of the following temperature related alarms occur:</p> <p><u>Exciter alarms:</u> High Temperature Foldback</p> <p><u>Rack alarms:</u> High Rectifier Temperature</p>

Table 4.1.6: Troubleshooting Summary Alarms

Summary Alarm Name, AUI (front panel UI)	Description and Triggering Alarms		
Maintenance Fault Summary (Maintenance Summary)	This summary alarm is triggered if any of the following maintenance related alarms occur: <u>Controller alarms:</u> EEPROM Failure: Config GPS Not Responding Local UI Failure EEPROM Failure: Potentiometers GPS PLL Unlocked Low Battery EEPROM Failure: Remotes GPS Receiver Not Responding Low RF Drive EEPROM Failure: Schedule GPS Sync No 1-PPS Rack 1 Not Responding EEPROM Failure: Thresholds GPS Unlocked +1.2V Fail Exciter Changeover High RF Drive +3.3V Fail Exciter A or B Not Responding Host Not Booted -5V Fail Exigine Not Responding Host Not Responding -15V Fail <u>Exciter alarms:</u> B+ Sample Uncalibrated High B+ Voltage No Carrier Sync Signal Carrier Sync Unlocked Low B+ Voltage No External 10MHz External Inhibit Active No B+ Sample Precorrection Inhibited <u>Exigine alarms:</u> AM/FM Mode Mismatched FIFO Underflow Network Down DPLL Unlocked Lost External 10MHz Network Misconfigured FIFO Overflow <u>Module alarms:</u> External Disable Active High Temperature No Controller Comms Front Panel Inhibit Invalid Thermistor Sample Overmodulation High B+ Voltage Low B+ Voltage Residual PA Voltage High DC Current Low Fan 1/2 Speed RF Drive Fault High PA Voltage Low PA Voltage +15V Fail High RF Drive Low RF Drive <u>Rack alarms:</u> AC Phase Loss High Rectifier Temp +5V Fail EEPROM Failure Low AC Voltage +30V Fail High Ac Voltage Low B+ Voltage +48V Fail High B+ Voltage PM 1-4 Not Responding -5V Fail		

Table 4.1.6: Troubleshooting Summary Alarms

Summary Alarm Name, AUI (front panel UI)	Description and Triggering Alarms																					
Off Air Summary (Off Air Summary)	<p>This summary alarm is triggered if any of the following off-air related alarms occur:</p> <p><u>Controller alarms:</u></p> <table><tr><td>Arc Shutback</td><td>Combiner Interlock Open</td><td>Fast SWR Shutback</td></tr><tr><td>Audio Loss Shutdown</td><td>External PDM Inhibit</td><td>Interlock Open</td></tr></table> <p><u>Exciter alarms:</u></p> <table><tr><td>FPGA Test Failed</td><td>RF Probes Uncalibrated</td><td>Transmitter Type Not Set</td></tr><tr><td>Over-Current Shutback</td><td>SWR Shutback</td><td>Unsigned DSP Image</td></tr><tr><td>PLL Unlocked</td><td>Transmitter Gain Too Low</td><td>Unsigned FPGA Image</td></tr></table> <p><u>Rack alarms:</u></p> <table><tr><td>Arc Detector 1</td><td>High B+ Shutback</td><td>Low B+ Shutdown</td></tr></table>	Arc Shutback	Combiner Interlock Open	Fast SWR Shutback	Audio Loss Shutdown	External PDM Inhibit	Interlock Open	FPGA Test Failed	RF Probes Uncalibrated	Transmitter Type Not Set	Over-Current Shutback	SWR Shutback	Unsigned DSP Image	PLL Unlocked	Transmitter Gain Too Low	Unsigned FPGA Image	Arc Detector 1	High B+ Shutback	Low B+ Shutdown			
Arc Shutback	Combiner Interlock Open	Fast SWR Shutback																				
Audio Loss Shutdown	External PDM Inhibit	Interlock Open																				
FPGA Test Failed	RF Probes Uncalibrated	Transmitter Type Not Set																				
Over-Current Shutback	SWR Shutback	Unsigned DSP Image																				
PLL Unlocked	Transmitter Gain Too Low	Unsigned FPGA Image																				
Arc Detector 1	High B+ Shutback	Low B+ Shutdown																				
Output Network Fault Summary (O/P Network Summary)	<p>This summary alarm is triggered if any of the following output network related alarms occur:</p> <p><u>Controller alarms:</u></p> <table><tr><td>Arc Shutback</td><td>Fast SWR Shutback</td></tr></table> <p><u>Exciter alarms:</u></p> <table><tr><td>Cutback</td><td>Over-Current Shutback</td><td>SWR Shutback</td></tr><tr><td>High Forward Foldback</td><td>SWR Foldback</td><td></td></tr></table> <p><u>Rack alarms:</u></p> <table><tr><td>Arc Detector 1</td><td></td><td></td></tr></table>	Arc Shutback	Fast SWR Shutback	Cutback	Over-Current Shutback	SWR Shutback	High Forward Foldback	SWR Foldback		Arc Detector 1												
Arc Shutback	Fast SWR Shutback																					
Cutback	Over-Current Shutback	SWR Shutback																				
High Forward Foldback	SWR Foldback																					
Arc Detector 1																						
Power Module Fault Summary (PM Summary)	<p>This summary alarm is triggered if any of the following power module related alarms occur:</p> <p><u>Module alarms:</u></p> <table><tr><td>EEPROM Failure</td><td>High RF Drive</td><td>Low RF Drive</td></tr><tr><td>External Disable Active</td><td>High Temperature</td><td>No Controller Comms</td></tr><tr><td>Front Panel Inhibit</td><td>Invalid Thermistor Sample</td><td>Overmodulation</td></tr><tr><td>High B+ Voltage</td><td>Low B+ Voltage</td><td>Residual PA Voltage Present</td></tr><tr><td>High DC Current</td><td>Low Fan 1/2 Speed</td><td>RF Drive Fault</td></tr><tr><td>High PA Voltage</td><td>Low PA Voltage</td><td>+15V Fail</td></tr></table> <p><u>Rack alarms:</u></p> <table><tr><td>PM 1-4 Not Responding</td><td></td><td></td></tr></table>	EEPROM Failure	High RF Drive	Low RF Drive	External Disable Active	High Temperature	No Controller Comms	Front Panel Inhibit	Invalid Thermistor Sample	Overmodulation	High B+ Voltage	Low B+ Voltage	Residual PA Voltage Present	High DC Current	Low Fan 1/2 Speed	RF Drive Fault	High PA Voltage	Low PA Voltage	+15V Fail	PM 1-4 Not Responding		
EEPROM Failure	High RF Drive	Low RF Drive																				
External Disable Active	High Temperature	No Controller Comms																				
Front Panel Inhibit	Invalid Thermistor Sample	Overmodulation																				
High B+ Voltage	Low B+ Voltage	Residual PA Voltage Present																				
High DC Current	Low Fan 1/2 Speed	RF Drive Fault																				
High PA Voltage	Low PA Voltage	+15V Fail																				
PM 1-4 Not Responding																						

Table 4.1.6: Troubleshooting Summary Alarms

Summary Alarm Name, AUI (front panel UI)	Description and Triggering Alarms
Power Supply Fault Summary (PS Summary)	<p>This summary alarm is triggered if any of the following power supply related alarms occur:</p> <p><u>Exciter alarms:</u></p> <p>High B+ Voltage High DC Curr Foldback Low B+ Voltage</p> <p><u>Rack alarms:</u></p> <p>AC Phase Loss High Rectifier Temp +15V Fail High AC Voltage Low AC Voltage +30V Fail High B+ Shutback Low B+ Shutdown +48V Fail High B+ Voltage +5V Fail -15V Fail High DC Curr Foldback</p>
Rack Fault Summary (Rack Summary)	<p>This summary alarm is triggered if any of the following rack related alarms occur:</p> <p><u>Controller alarms:</u></p> <p>Rack 1 Not Responding</p> <p><u>Rack alarms:</u></p> <p>EEPROM Failure</p>
Reduced Power Summary (Power Low Summary)	<p>This summary alarm is triggered if any of the following reduced power related alarms occur:</p> <p><u>Exciter alarms:</u></p> <p>Audio Overmod Protection High Forward Foldback Power Below Setpoint Cutback High Temp Foldback SWR Foldback High DC Current Foldback Low Forward Power 1/2</p>

Table 4.1.7: Module Replacement Procedures

Module	Replacement Procedure
RF Power Module	See page 4.1.52
Power Amplifier MOSFET	See page 4.1.61
Modulator MOSFET	See page 4.1.63
Control/Interface PWB	See page 4.1.65
SCR Rectifier Assembly	See page 4.1.67
Digital AM Exciter PWB	See page 4.1.69
Exgine PWB	See page 4.1.74
GPS Sync PWB	See page 4.1.74
Rack Interface PWB	See page 4.1.75
Power Module Interface PWB	See page 4.1.77
Gas Discharge PWB and Relays	See page 4.1.79
Fan Tray	See page 4.1.81
Fan Tray Cooling Fan	See page 4.1.82
RF Voltage and Current Sample PWB	See page 4.1.83
Directional Coupler	See page 4.1.87
Arc Detector UV Sensor	See page 4.1.89
+15 V or +48 V Power Supply	See page 4.1.92
Graphic User Interface (GUI) and UI Interface PWB	See page 4.1.94

Accessing the Inside of the Transmitter

See [Figure 4.1.4 on page 4.1.45](#).

Front Access

The front of the NX10 has a hinged door that provides access to the control/exciter panel, which contains the control/interface PWB (A4), digital AM exciter PWBs (A5 and optional A6), Exgine PWB (A7, optional) and GPS sync PWB (A8, optional). You can also access RF power modules 1 through 4 (A12 through A15) and fan tray assemblies (A16 through A19).

Removing the 16 M5 screws that secure the hinged control/exciter panel allows access to the directional coupler assembly (A23).

Removing the 16 M5 screws that secure the lower, front panel allows access to the power transformer (T1). It should not be necessary to access the power transformer, but when it is necessary, use extreme caution as high voltage is present behind the panel when ac power is being applied.

WARNING! WHEN AC POWER IS ENABLED (ON), DANGEROUS VOLTAGES THAT CAN CAUSE INJURY OR DEATH ARE PRESENT BEHIND THE LOWER, FRONT PANEL. NAUTEL RECOMMENDS THAT ONLY TRAINED PERSONNEL BE ALLOWED ACCESS TO THIS AREA.

DISCONNECT AND LOCK OUT AC POWER BEFORE WORKING IN AREAS WHERE DANGEROUS VOLTAGES MAY BE PRESENT TO ENSURE THE SAFETY OF PERSONNEL.


Rear Access

The rear of the NX10 has a hinged door that - for safety purposes - is also secured with 24 screws. Removing these screws and opening the door provides access to the rectifier assembly (A1), rack interface PWB (A9), power module interface PWBs (A10 and A11), RF voltage and current sample PWB (A20), arc detector assembly (A24), +15 V power supply (U1) and +48 V power supply (U2).

WARNING! WHEN AC POWER IS ENABLED (ON), DANGEROUS VOLTAGES THAT CAN CAUSE INJURY OR DEATH ARE PRESENT BEHIND THE REAR PANEL. NAUTEL RECOMMENDS THAT ONLY TRAINED PERSONNEL BE ALLOWED ACCESS TO THIS AREA.

DISCONNECT AND LOCK OUT AC POWER BEFORE WORKING IN AREAS WHERE DANGEROUS VOLTAGES MAY BE PRESENT TO ENSURE THE SAFETY OF PERSONNEL.

Figure 4.1.4: Front and Rear Access

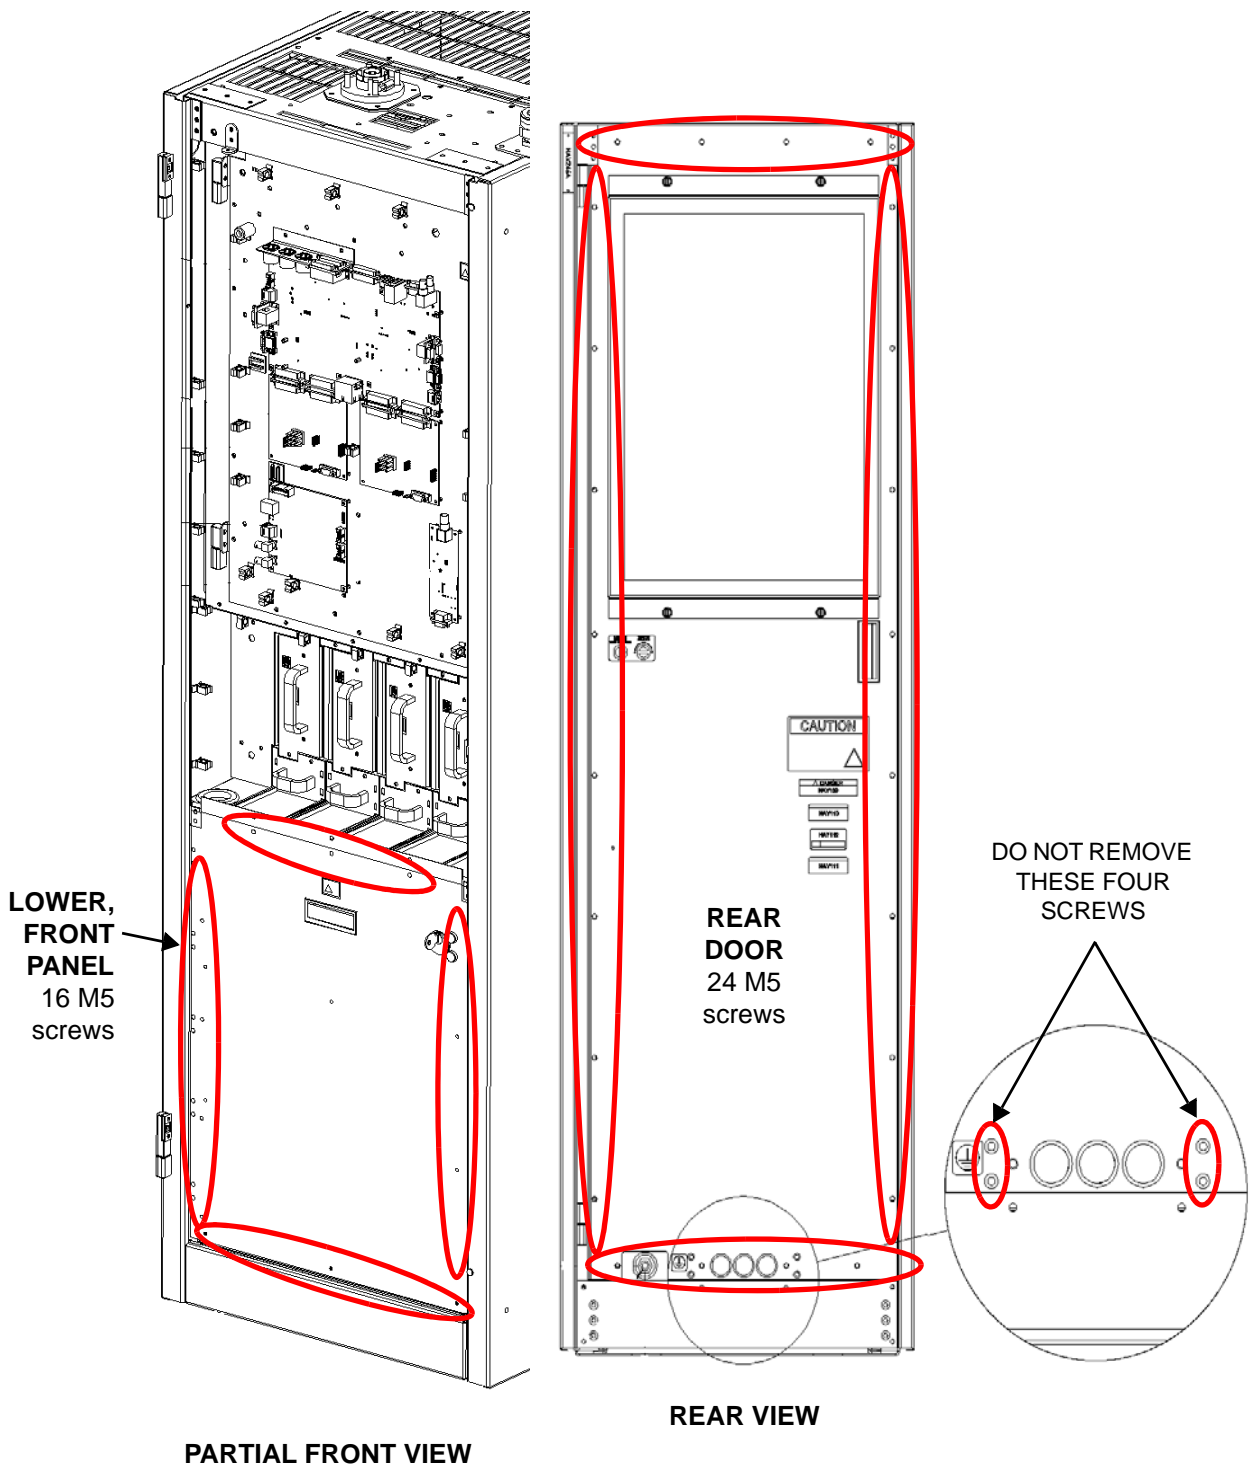

Troubleshooting Tips

Controller: External PDM Inhibit

A Controller: External PDM Inhibit alarm indicates that an external PDM inhibit command is present. The alarm could be caused by a short circuit in the external wiring path to the control/interface PWB or a fault in the switching circuitry on the control/interface PWB. Troubleshoot as follows:

The external PDM inhibit is wired to the control/interface PWB.

1. Gain access to the control/interface PWB (A4) (see [Figure 4.1.12 on page 4.1.66](#)) by opening the transmitter's front door. The door is not latched and just swings open to the left.
2. Connect a digital multimeter (set to measure dc) between J6A-12 of the control/interface PWB and ground.
 - ❖ If 15 V is present on J6A-12, there is no external PDM inhibit command. Suspect the control/interface PWB and if necessary, replace it (see ["Control/Interface PWB Removal/Replacement" on page 4.1.65](#)).
 - ❖ If 0 V is present on J6A-12, there is a valid external PDM inhibit command. Check the external PDM inhibit circuitry to determine the cause.

Controller: Interlock Open

A Controller: Interlock Open alarm indicates an external interlock is open. The transmitter's RF output will be inhibited.

The external interlock input is wired to the control/interface PWB by the end user and triggered by the conditions that they set (e.g., the state of the door to the transmitter room).

1. Gain access to the control/interface PWB (A4) (see [Figure 4.1.12 on page 4.1.66](#)) by opening the transmitter's front door. The door is not latched and just swings open to the left.
2. Connect a digital multimeter (set to measure dc) between J6A-20 of the control/interface PWB and ground.
 - ❖ If 0 V is present on J6A-20, the external interlock circuit is intact and the probable cause of the alarm is a defective monitoring circuit. Suspect the control/interface PWB and if necessary, replace it (see ["Control/Interface PWB Removal/Replacement" on page 4.1.65](#)).
 - ❖ If 15 V is present, the external interlock circuit is open (normally caused by an open interlock switch). Check the external system interlock circuitry to determine the cause.

RF Module Faults

There are many alarms on the front panel UI or remote AUI, prefixed by the text PM, that indicate faults related to one or more of the four RF power modules in the transmitter. The number that appears after Module (1-4) identifies the position of the affected module. Numbers correspond to modules in a left to right sequence, as viewed from the front of the transmitter.

1. Check the forward power reading on the front panel UI or remote AUI. If it is less than the preset level, one or more RF power modules are defective. Proceed to ["RF Power Module Fault Validation" on page 4.1.49](#).
2. If the forward power reading in [Step 1](#) is normal, go to the front panel UI's Alarms screen or click the remote AUI's Status button to check for other alarms that may have triggered the RF power module alarm.
3. From the remote AUI's Meter List View page (see [Figure 4.1.5](#)), click the **i** (information) button next to the Modules - Rack 1 folder in the Transmitter Layout section to view the status screen for all RF power modules (see [Figure 4.1.6 on page 4.1.48](#)) or click the left-hand drop-arrow to expand the Modules folder to allow clicking on the **i** button for an individual Module (PM) (see [Figure 4.1.7 on page 4.1.48](#)). You can also use the front panel UI's View Status -> View Meters -> Module screen to view meters sorted by meter name, by pressing the checkmark button, or by RF power module (PM), by pressing the right-hand arrow button. These screens display critical parameters for RF power modules. As an aid in troubleshooting, compare parameters to isolate possible module faults.

Figure 4.1.5: AUI - Meter List View page

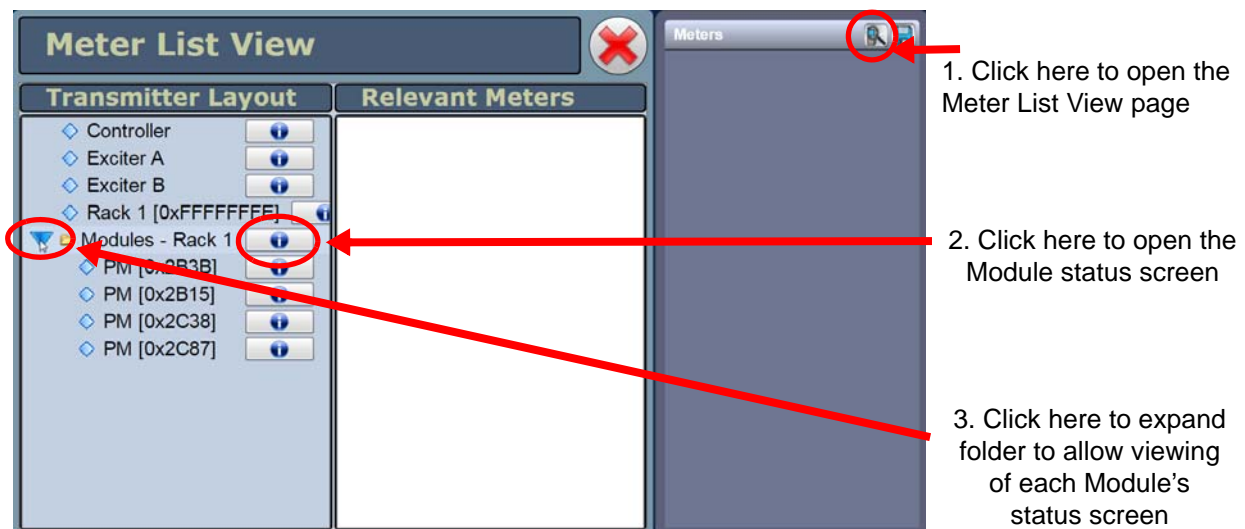


Figure 4.1.6: RF Module Status Screen (all modules)

Modules - Rack 1				
	PM 1	PM 2	PM 3	PM 4
Front Panel Inhibit	Enabled	Enabled	Enabled	Enabled
Serial Address	2B3B	2B15	2C38	2C87
DC Current	0 A	0 A	0 A	0 A
B+ Voltage	0 V	0 V	0 V	0 V
PDM Duty Cycle	0 %	0 %	0 %	0 %
PAVolts	0 V	0 V	0 V	0 V
Low Voltage Supply	15.1 V	15.0 V	15.1 V	15.1 V
RF Drive Duty Cycle	46.2 %	46.1 %	46.1 %	46.1 %
Temperature	29.0 °C	30.1 °C	30.1 °C	29.8 °C
Fan 1 Speed	0 rpm	0 rpm	0 rpm	0 rpm
Fan 2 Speed	0 rpm	0 rpm	0 rpm	0 rpm

Figure 4.1.7: RF Module Status Screen (individual module)

PM [0x2B3B]	
Firmware Version 1.0.12.5	
Meters	
DC Current	0 A
B+ Voltage	0 V
PDM Duty Cycle	0 %
PA Volts	0 V
Low Voltage Supply	15.1 V
RF Drive Duty Cycle	46.2 %
Temperature	29.0 °C
Fan 1 Speed	0 rpm
Fan 2 Speed	0 rpm
Alarms	

RF Power Module Fault Validation

Each RF power module has a multi-colour LED on its front panel, which can help in identifying a fault and allowing you to determine whether remedial action is required now or later.

Identify and isolate a defective RF power module, and verify the nature of the defect by checking the LEDs on the RF power modules' front panels. Note which RF power module is not operating normally and producing RF power (i.e., LED is not solid green). Record which RF power module(s) is/are displaying an alarm and the state of its/their LED (see below).

- ❖ solid green: module is producing RF with no alarms
- ❖ flashing amber and off: module is RF off
- ❖ solid red: module has a non-latching alarm, and is not producing RF
- ❖ flashing red, then green: module is producing RF, but has an alarm
- ❖ long red, short amber: module has a latching alarm, and is not producing RF
- ❖ long red, short off: module has no valid serial number
- ❖ short red, long off: module has no valid serial address on the internal bus
- ❖ long amber, short green: module is producing RF, but is receiving no serial communication from the rack interface
- ❖ long amber, short red: module is not producing RF and is receiving no serial communication from the rack interface

Except in the case of a High PA Volts or Residual PA Volts alarm, attempt to reset an RF power module by disconnecting and reconnecting the RJ45 plug in the front of the module. If you cannot reset the front panel LED alarm, see ["RF Power Module Troubleshooting"](#).

RF Power Module Troubleshooting

Refer to ["Removing and Reinstalling RF Power Modules"](#) on page 4.1.52 for removal and installation instructions and then refer to ["Troubleshooting RF Power Modules"](#) on page 4.1.57 for detailed troubleshooting information.

NOTE: A defective RF power module can be removed for repair without turning off the transmitter, as described in ["Removing an RF Power Module"](#) on page 4.1.52. The transmitter can be operated at a reduced output power level with an RF power module removed.

WARNING! FAILURE TO FOLLOW THE RF POWER MODULE REMOVAL INSTRUCTIONS MAY RESULT IN INJURY TO THE OPERATOR AND SERIOUS PHYSICAL DAMAGE TO THE RF POWER MODULE AND TRANSMITTER.

RF Module #: Low B+ Voltage

A Module # Low B+ Voltage alarm is triggered when the B+ voltage is less than 75% of its nominal level.

1. If all RF power modules are reporting this alarm, it is very likely there is also a Rack #: Low B+ Voltage alarm. If so, the fault is not likely associated with an RF power module; proceed to ["Rack #: Low B+ Voltage Alarm"](#) for further troubleshooting information. If not, proceed to [Step 2](#).
2. Check and, if necessary, replace the fuse on the power module interface PWB for the affected RF power module. Each power module interface PWB serves two RF power modules and therefore has two B+ fuses (F1 and F2). Refer to Figure MD-2 in the Mechanical Drawings section of this manual to locate the associated power module interface PWB and then refer to Figure MD-9 to locate fuse F1 or F2. If the alarm persists, continue to [Step 3](#).
3. Check and, if necessary, replace the affected RF power module. See ["Troubleshooting RF Power Modules"](#) on page 4.1.57.

Rack #: Low B+ Voltage Alarm

A Rack #: Low B+ Voltage alarm is triggered when the B+ voltage is at least 25% below its expected level. Recovery from this alarm is automatic when the B+ voltage rises to an acceptable level.

NOTE: An NX10 transmitter has only one rack (or cabinet) and will only display Rack 1.

If the transmitter does not automatically recover from this alarm, the low B+ voltage is normally caused by low ac input voltage, improper primary tap settings on the power transformer, or a faulty rectifier assembly. Troubleshoot a Rack #: Low B+ alarm as follows.

WARNING! LETHAL VOLTAGES EXIST IN THE POWER SUPPLY COMPARTMENT OF THE TRANSMITTER. USE EXTREME CAUTION IN THIS AREA.

1. Check the B+ voltage on the transmitter's AUI. If it is less than 75% of desired, the ac power source voltage or power transformer tap selection is suspect.
2. Check the ac sample voltage. If less than 302 V, continue to [Step 3](#). If not, go to [Step 4](#).
3. Measure the ac input voltage and verify the power transformer is tapped as shown in Section 2.4 of the NX10 Installation Manual. If necessary, turn off the transmitter, lock out the ac input voltage and retap the power transformer for the next lower voltage.
4. If the transformer taps are correct, the rectifier assembly may be defective or there may be a fault with the monitoring circuit. Contact Nautel for troubleshooting information.

Rack #: Low AC

A Rack #: Low AC alarm is triggered when the ac input voltage is less than 256 V. Recovery from this alarm is automatic when the ac voltage rises to an acceptable level.

NOTE: An NX10 transmitter has only one rack (or cabinet) and will only display Rack 1.

If the transmitter does not automatically recover from this alarm, the low ac voltage is normally caused by low ac mains voltage or improper primary tap settings on the power transformer. Troubleshoot a Rack #: Low AC alarm as follows.

WARNING! LETHAL VOLTAGES EXIST IN THE POWER SUPPLY COMPARTMENT OF THE TRANSMITTER. USE EXTREME CAUTION IN THIS AREA.

1. Measure the ac input voltage and verify the power transformer is tapped as shown in Section 2.4 of the NX10 Installation Manual. If necessary, turn off the transmitter, lock out the ac input voltage and retap the power transformer for the next lower voltage.
2. If the transformer taps are correct, the monitoring circuit may be defective. Contact Nautel for troubleshooting information.

Removing and Reinstalling RF Power Modules

Removing an RF Power Module

1. Confirm the location of the RF power module that is being removed. Note the alarm text includes a Module serial address that is also identified on the front panel of each RF power module. See [Figure 4.1.8 on page 4.1.53](#) to determine the location for a given RF power module [1 (A12) through 4 (A15)].
2. If possible, turn RF Off and proceed to [Step 4](#). Otherwise, if it is necessary to remove a power module while "on air" you must confirm the RF power module to be removed is disabled by using the front panel UI or the remote AUI.
 - ❖ Front Panel UI: From the Main Menu, go to the System Settings -> PM Inhibit screen (see [Figure 4.1.9 on page 4.1.54](#)). Use the up and down buttons to move the cursor to the desired RF power module (1 through 4) and then press the right button to enable editing. Use the up and down buttons to select Enable or Disable. Press the accept (checkmark) button to save the change. Press cancel (X) to discard changes and return to the previous menu.
 - ❖ Remote AUI: From the Meters page, click on the Modules - Rack 1 information (i) button. The Power Module status screen (see [Figure 4.1.9 on page 4.1.54](#)) should appear. Click on the associated RF power module's Front Panel Inhibit icon. The icon colour should change from green to red, indicating the RF power module is disabled.
3. When the RF power module is disabled, you should hear a relay (click) in the back of the cabinet drop out (de-energize). Proceed to [Step 4](#) if you hear the relay click. If you do not hear the relay de-energize (click), **DO NOT CONTINUE** to [Step 4](#). Re-enable the module and press the Reset button at the bottom of the page to clear any possible latched alarms while listening for the relay attempt to open. Try re-enabling and disabling a few times while trying to hear the relay de-energize. If you do not hear the sound, **DO NOT** remove the RF power module while the transmitter is on-air. Turn RF Off, remove the RF power module following [Step 4](#) through [Step 6](#) and replace the relay before turning RF On (see "[Gas Discharge PWB and Relay Replacement](#)" on [page 4.1.79](#)).
4. Disconnect the PDM cable (RJ45 connector) from the front of the RF power module.

WARNING! FAILURE TO FOLLOW THE RF POWER MODULE REMOVAL INSTRUCTIONS MAY RESULT IN INJURY TO THE OPERATOR AND SERIOUS PHYSICAL DAMAGE TO THE RF POWER MODULE AND TRANSMITTER.

5. Remove both mounting screws from the RF power module's front panel.
6. Grasp the handle on the front of the RF power module and carefully pull the RF power module out of the transmitter.

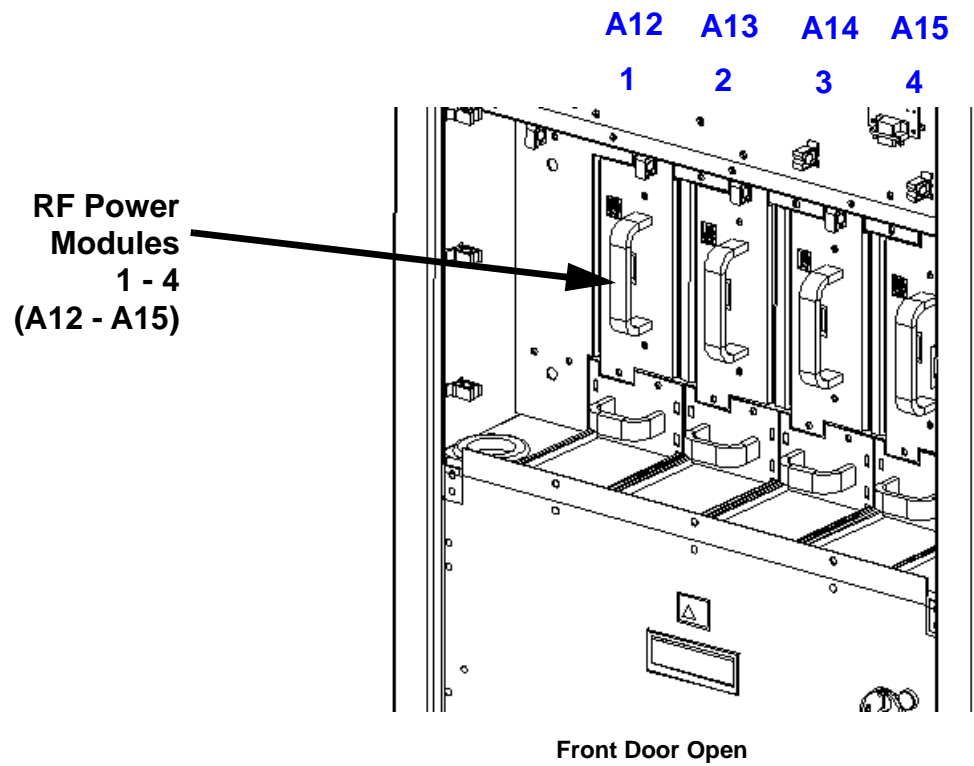
Figure 4.1.8: RF Power Module Locations


Figure 4.1.9: Disabling/Enabling an RF Power Module

Front Panel UI: Main Menu -> System Settings -> PM Inhibit



Remote AUI: Meters Page -> Rack information (i) button

Green indicates enabled. Click to disable (will turn red);
click again to re-enable (will turn green)

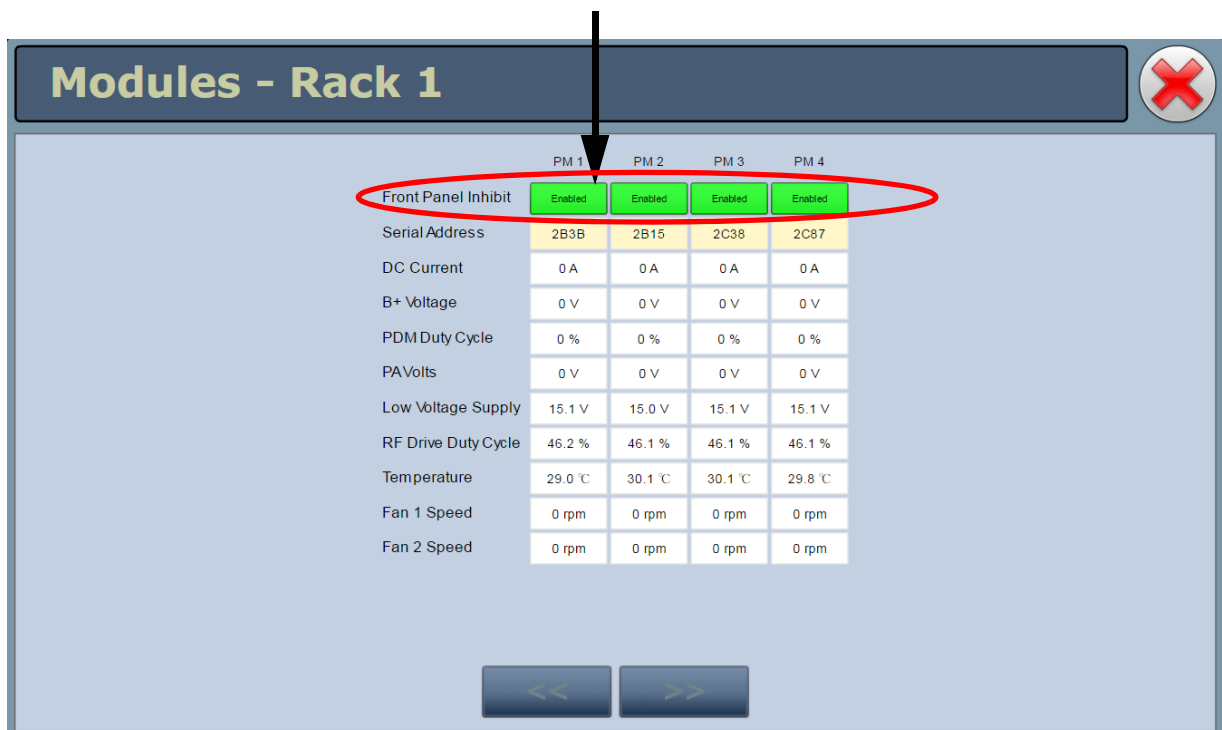

Installing an RF Power Module

NOTE: To ensure the transmitter recognizes RF power modules being installed, modules must be programmed with software version equivalent to NX SW 4.4 or newer.

1. If possible, turn off the transmitter before installing an RF power module. Grasp the handle on the front of the RF power module and insert it into the transmitter.
2. Carefully push the RF power module into place so that its card-edge connector mates with the transmitter. Verify the RF power module is fully inserted by ensuring the faceplate of the RF power module is touching the transmitter chassis that it mates with.
3. Install both mounting screws in the RF power module's front panel.
4. Connect the PDM cable (RJ45 connector) to the front of the RF power module.
5. If the RF power module was disabled through a user interface, enable it as follows:
 - ❖ Front Panel UI: From the Main Menu, go to the System Settings -> PM Inhibit screen (see [Figure 4.1.9 on page 4.1.54](#)). Use the up and down buttons to move the cursor to the desired RF power module (1 through 4) and then press the right button to enable editing. Use the up and down buttons to select Enable. Press the accept (checkmark) button to save the change. Press cancel (X) to discard changes and return to the previous menu.
 - ❖ Remote AUI: From the Meters page, click on the Modules - Rack 1 information (i) button. The Power Module status screen (see [Figure 4.1.9 on page 4.1.54](#)) should appear. Click on the associated RF power module's Front Panel Inhibit icon. The icon colour should change from red to green, indicating the RF power module is enabled.

You should hear a relay in the back of the transmitter pick up (energize).

6. Upgrade the RF power module's software using the front panel UI's Updating Firmware screen or the remote AUI's Upgrade Software page under the appropriate System Settings menu, by running an upgrade using the existing .tgz file already installed on the transmitter. See the NX10 Operations and Maintenance Manual for detailed instructions.

Optimizing RF Power Module Performance

When swapping damaged RF power modules with new RF power modules, it is possible that spurs of the fundamental PDM frequency ($f_c \pm 155$ kHz) may appear at the output of the transmitter. If these spurs violate the emissions limits of the region of installation, the problem may be corrected by initiating the PDM minimization routine, as follows:

CAUTION! Running the PDM minimization routine will disable the exciter's SWR protection. For this reason, you should only run this routine when the transmitter is connected to a suitable rated 50 ohm test load.

1. Turn off (RF Off) the transmitter and connect its RF output to a suitably rated 50-ohm test load.
2. Using the front panel UI or the remote AUI, set the following items as instructed:
 - ❖ Overall Mode = Analog AM
 - ❖ Output Power = rated power
 - ❖ AM Source = Unused
3. Set the transmitter to its RF On state.
4. Using the front panel UI or the remote AUI, navigate to the PDM minimization routine:
 - ❖ Front Panel UI: From the Main Menu, go to the Factory Settings -> PDM Settings - > PDM Minimization screen. Press the accept (checkmark) button to start the routine.
 - ❖ Remote AUI: From the Factory Settings -> PDM Settings page, click on the Start button next to Minimization Routine.

The PDM minimization routine requires approximately 30 minutes to complete.

Troubleshooting RF Power Modules

Maintenance Philosophy

Recommended troubleshooting procedures for RF power modules are limited to “go” or “no-go” resistance or diode measurements on the module’s power semi-conductors and replacement procedures for these devices.

Special Tools and Test Equipment

The following test equipment and cables are required to troubleshoot an RF power module.

- A digital multimeter with resistance and diode settings.
- A torque screwdriver with a torque range of 0 to 2.3 N-m (0 - 20 in-lbs). Required for installing MOSFET attaching hardware.
- A soldering iron and desoldering tool.
- An NX10 spares kit (contains replacement semi-conductors).

Electrostatic Precautions

The RF power module contains semiconductor devices that are susceptible to damage from electrostatic discharge. Follow the electrostatic precautions in [“Electrostatic Protection” on page 4.1.3](#) at all times.

Preparation for Troubleshooting

1. Follow the procedure in [“Removing an RF Power Module” on page 4.1.52](#) to remove the RF power module from the transmitter.
2. Place the RF power module on a suitable work surface.
3. Perform the resistance measurements on the modulator and power amplifier MOSFETs as described in [“Resistance Measurements” on page 4.1.58](#).
4. Perform the diode checks on the protection and free-wheel diodes as described in [“Protection Diode Checks” on page 4.1.58](#) and [“Free-Wheel Diode Checks” on page 4.1.59](#).
5. If the measurements in [Step 3](#) and [Step 4](#) are satisfactory, but the RF power module continues to display alarms when installed in the transmitter, replace the RF power module.

Resistance Measurements

Complete the following resistance measurements for each suspect RF power module. See [Figure 4.1.10 on page 4.1.60](#) to identify the power MOSFETs on the RF power module.

1. Remove fuse F1 from its holder and measure its resistance using a digital multimeter. A blown fuse will measure an open circuit. If the fuse is OK, return it to its holder.
2. For each power amplifier MOSFET (Q7 through Q10) and each modulator MOSFET (Q11, Q12 and Q13), use a digital multimeter to make the following resistance measurements. Note that Q7 through Q10 have screw-head terminals and Q11 through Q13 have solder pads (see [Figure 4.1.10 on page 4.1.60](#)):
 - ❖ Check for 1,000 Ω between the gate and source.
 - ❖ Check for an open circuit between the gate and drain.
3. If either measurement in [Step 2](#) is not satisfactory, replace the affected power amplifier MOSFET (see “[Power Amplifier FET Replacement](#)” on page 4.1.61) or modulator MOSFET (see “[Modulator FET or Free-Wheel Diode Replacement](#)” on page 4.1.63), as applicable, or replace the RF power module.

Protection Diode Checks

Complete the following protection diode checks for each suspect RF power module. See [Figure 4.1.10 on page 4.1.60](#) to identify the protection diode on the RF power module.


1. Use a digital multimeter (on its diode setting) to check protection diode CR9, noting the anode (A) and cathode (K) markings (see [Figure 4.1.10 on page 4.1.60](#)):
 - ❖ Check for a voltage of between 0.5 and 0.8 V with multimeter test leads in the forward bias orientation (+ on anode, - on cathode).
 - ❖ Check for an open circuit with multimeter test leads in the reverse bias orientation (- on anode, + on cathode).
2. If the diode is not satisfactory, replace it by desoldering its surface-mount leads and case from the PWB. A replacement diode can be purchased from Nautel (Part # QM64). Note the correct orientation when soldering the replacement to the PWB.

Free-Wheel Diode Checks

Complete the following free-wheel diode checks for each suspect RF power module. See [Figure 4.1.10 on page 4.1.60](#) to identify the free-wheel diodes on the RF power module.

1. Use a digital multimeter (on its diode setting) to check free-wheel diodes CR19 through CR21, noting the anode (A) and cathode (K) markings (see [Figure 4.1.10 on page 4.1.60](#)):
 - ❖ Check for a voltage of between 0.4 and 0.8 V with multimeter test leads in the forward bias orientation (+ on anode, - on cathode).
 - ❖ Check for an open circuit with multimeter test leads in the reverse bias orientation (- on anode, + on cathode).
2. If a diode is not satisfactory, replace it as detailed in [“Modulator FET or Free-Wheel Diode Replacement” on page 4.1.63](#).


Figure 4.1.10: RF Power Module MOSFET and Diode Locations

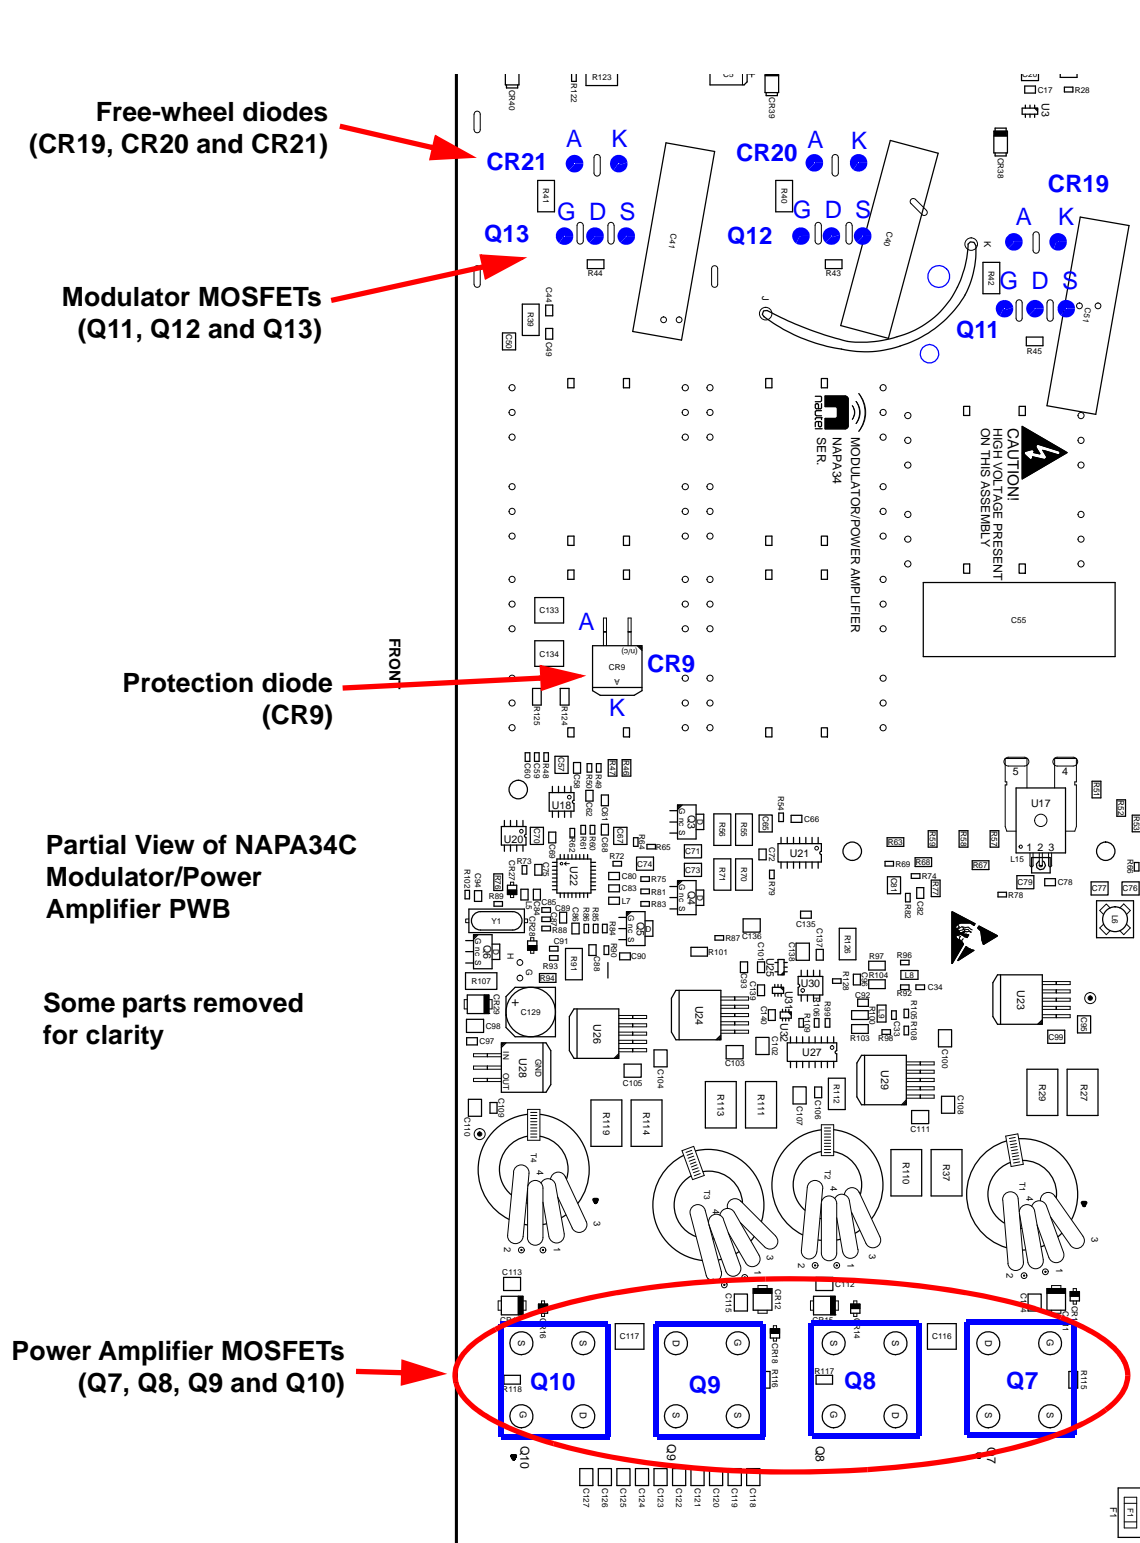

Power Amplifier FET Replacement

See [Figure 4.1.11 on page 4.1.62](#).

1. Remove five M3 screws that secure the modulator/power amplifier PWB to the chassis.
2. Remove 16 M4 screws (four for each MOSFET) that secure the PWB to the MOSFETs.
3. Swing the PWB away from the chassis and remove two M4 screws that secure the defective MOSFET to the chassis. If necessary, remove the screw securing the thermistor wire to the heatsink.
4. Discard the defective MOSFET and its associated thermal pad (between MOSFET and heatsink).
5. Ensure the surface of the heatsink is clean and free of debris.
6. Obtain a replacement MOSFET (Nautel Part # QR68) and a new thermal pad (Nautel Part # HAK55) from the spares kit, if purchased, and install them on the RF power module chassis using the two M4 screws removed in step 3. Torque hardware to 12 in-lbs (1.3 N-m).
7. Replace any other defective MOSFETs and then re-install the PWB to the chassis by reversing the instructions in steps 1 through 3. Torque the 16 MOSFET screws (four for each MOSFET) to 10 in-lbs (1.1 N-m).
8. Return the power module to service (see ["Installing an RF Power Module" on page 4.1.55](#)).

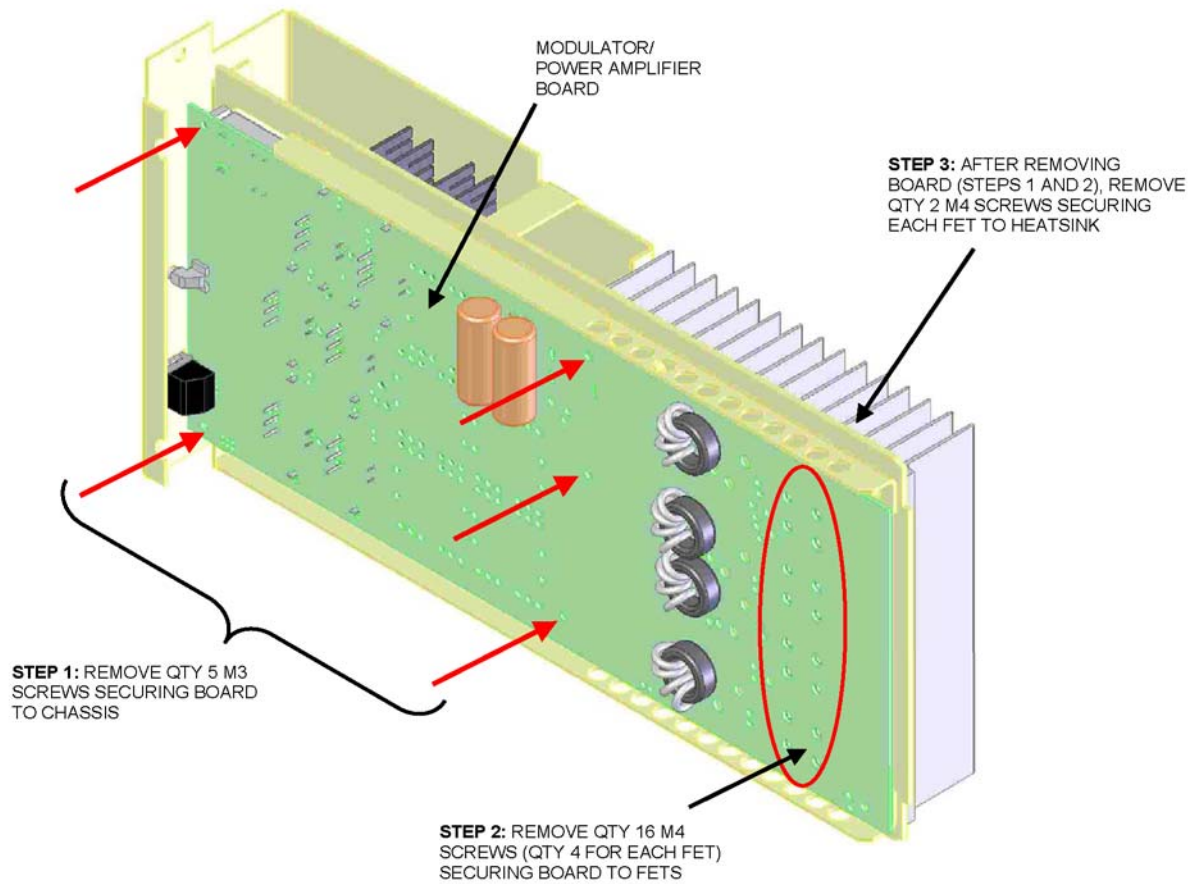Figure 4.1.11: Power Amplifier FET Replacement

Modulator FET or Free-Wheel Diode Replacement

1. Remove five M3 screws that secure the modulator/power amplifier PWB to the chassis.
2. Remove 16 M4 screws (four for each device) that secure the PWB to the devices.
3. Swing the PWB away from the chassis. If necessary, remove the screw securing the thermistor wire to the heatsink.
4. Desolder the connections that secure the defective device (modulator FET or free-wheel diode) to the PWB (see [Figure 4.1.10 on page 4.1.60](#)):
 - ❖ For modulator FETs (Q11, Q12, Q13), desolder the gate (G), drain (D) and source (S) connections.
 - ❖ For free-wheel diodes (CR19, CR20, CR21), desolder the anode (A) and cathode (K) connections.

Also desolder the two connections that secure the defective device's heatsink to the PWB. Remove the heat sink and the device from the PWB.

5. Remove the heatsink clip that holds the device on its heat sink. Remove and discard the defective device.

CAUTION! The heat sinks of modulator devices are coated with a film of thermal compound. Use care to ensure the film does not become contaminated with foreign particles.

When installing a replacement device, visually inspect the mating surfaces of the device and its heat sink. Ensure the heat sink surface is coated with a thin film of thermal compound. Ensure foreign particles that may affect thermal transfer are not embedded in the compound.

6. Clean the surface of the heat sink and make sure it is free of debris.
7. Obtain a replacement device (modulator FETs are Nautel Part # QR75; free-wheel diodes are Nautel part # QK50) from the spares kit. Apply a thin film of thermal compound (Nautel Part # HAG39, from the ancillary kit) to the device.
8. Install the device on the heat sink using the punched hole in the heat sink as an alignment aid. Apply downward pressure on the device and wiggle it slightly left and right and up and down to release trapped air and excess thermal compound. Reinstall the heat sink clip removed in [Step 5](#).


NOTE: The thermal joint between a modulator FET or free-wheel diode and its heatsink is critical for the reliability of the device. Incorrectly installed thermal compound could result in significantly reduced lifetime for the device, or even immediate failure of the device. See Microsemi Application Note 1810 for a more detailed procedure on properly applying thermal compound for electronic devices.

See http://www.microsemi.com/index.php?option=com_docman&task=doc_download&gid=14750

9. Re-install the heatsink on the PWB, first by soldering the two heatsink connections and then by soldering the device's leads:
 - ❖ For modulator FETs (Q11, Q12, Q13), solder the gate (G), drain (D) and source (S) connections.
 - ❖ For free-wheel diodes (CR19, CR20, CR21), solder the anode (A) and cathode (K) connections.
10. Replace any other defective devices and then reinstall the PWB to the chassis by reversing the instructions in steps 1, 2 and 3. Torque the 16 power amplifier MOSFET screws (four for each MOSFET) to a maximum of 10 in-lbs (1.1 N-m).
11. Return the power module to service (see ["Installing an RF Power Module" on page 4.1.55](#)).

Control/Interface PWB Removal/Replacement


1. Record the following minimum information from the front panel UI and remote AUI, as applicable:
 - ❖ Scheduler page: record Rules and Daily Events information.
 - ❖ Factory Settings page: record all information in the RF Symmetry, SWR Thresholds, Transmitter Type, Transmitter Frequency and PDM Settings menus.
 - ❖ System Settings page: record all information in the Exciter Clock Calibration, RF Monitor Level, Power Lockout and Power Thresholds menus.
 - ❖ Remote I/O page: record all information for the user-defined remote Inputs and Outputs, including Channel and Control settings.
2. Set the transmitter to its RF Off state. Turn off (disable or lock out) the ac power at the source. Open the front door to gain access to the exciter panel (see [Figure 4.1.12 on page 4.1.66](#)).
3. Disconnect all cables attached to the control/interface PWB (A4), taking note of the connector labels on the cables and the PWB.
4. Remove and retain the two screws securing the connector bracket in the upper, left portion of the control/interface PWB.
5. Remove and retain 10 sets of mounting hardware from the control/interface PWB.
6. Gently remove the control/interface PWB away from the digital AM exciter PWB(s) and out of the transmitter.
7. Obtain a replacement control/interface PWB (Nautel Part # NAPC168A).
8. Set jumper E1 on the replacement PWB to the same position as E1 on the defective PWB.
9. Install the new control/interface PWB by reversing [Step 3](#) through [Step 6](#). For connector mating assistance, refer to the connector mating tables in [Section 4.3, "Wiring/Connector lists" on page 4.3.1](#).
10. Turn on (enable) the ac power source. Set the transmitter to its RF On state.
11. Upgrade the subsystem's software using the front panel UI's Updating Firmware screen or the remote AUI's Upgrade Software page under the appropriate System Settings menu, by running an upgrade using the existing .tgz file already installed on the transmitter. See the NX10 Operations and Maintenance Manual for detailed instructions.
12. Use the remote AUI's Meter List View page to verify that the meters for all installed Modules are populated. See the NX10 Operations and Maintenance Manual for detailed instructions.
13. Re-enter all the front panel UI and remote AUI information recorded in [Step 1](#).

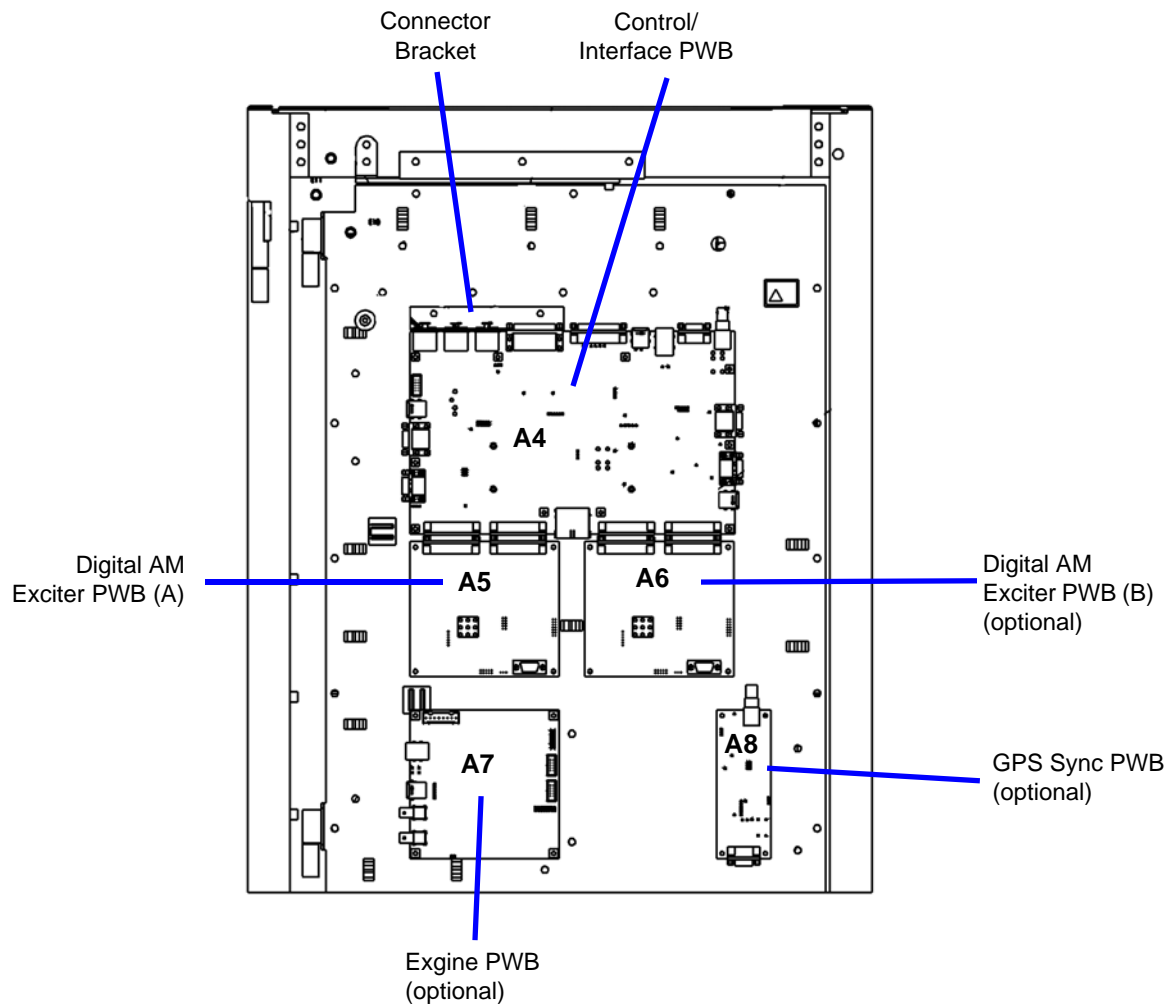Figure 4.1.12: NX10 Control/Exciter Panel

SCR Rectifier Inspection/Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDs IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.13: Location of SCR Rectifier Assembly A1

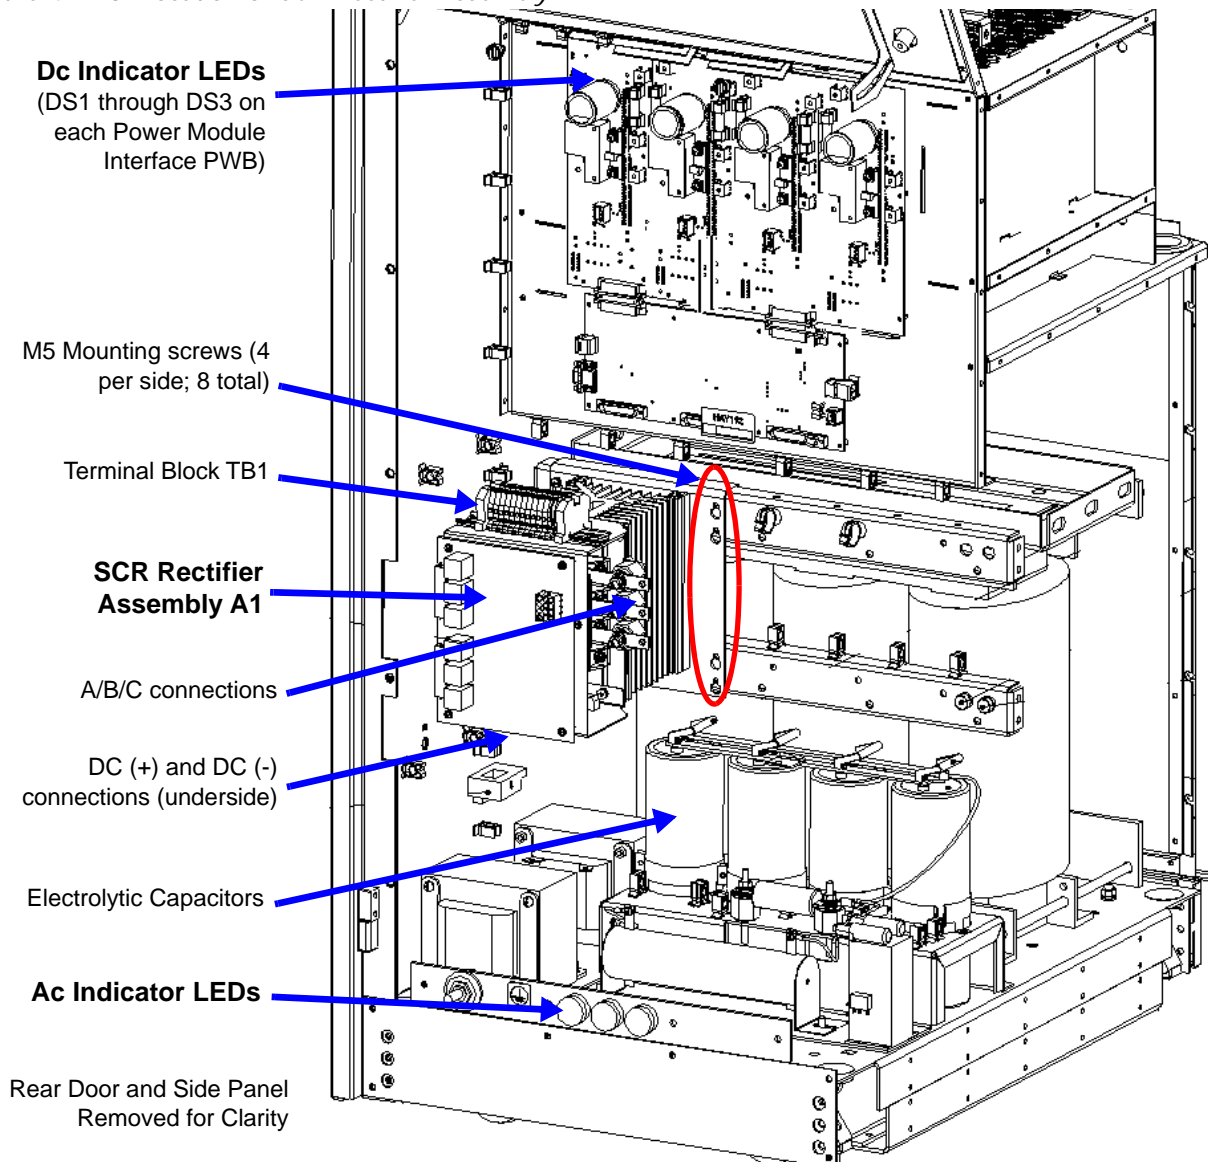

See [Figure 4.1.13 on page 4.1.67](#).


1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Disconnect all wiring attached to the SCR rectifier assembly's A (Line 1), B (Line 2), C (Line 3), DC (+), DC (-) and TB1 terminals, taking note of the wiring labels.
3. Loosen, but do not remove, the eight (8) sets of M5 mounting hardware that support the SCR rectifier assembly.
4. Carefully lift and remove the SCR rectifier assembly from the transmitter.
5. Obtain a replacement SCR rectifier assembly (Nautel Part # 212-7055).
6. Reverse [Step 2](#) through [Step 4](#) to reinstall the new or repaired SCR rectifier assembly. Ensure all connections are tight, noting that connections to the A, B, C, DC (+) and DC (-) terminals have special torque requirements. Torque these wires to 60 in-lbs (6.7 N-m). Torque TB1 connections to 4 in-lbs (0.45 N-m).
7. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation.

Digital AM Exciter PWB Replacement

NOTE: To ensure the transmitter recognizes exciter PWB(s) being installed, exciter PWB(s) must be programmed with software version equivalent to NX SW 4.4 or newer.

1. Set the transmitter to its RF Off state. Open the front door to gain access to the exciter panel (see Figure 4.1.12 on page 4.1.66).
2. Connect a straight-through serial (DB9) cable between the defective digital AM exciter PWB's RS-232 connector (9-pin D-sub J3, see Figure 4.1.14) and the serial port on a PC. See Figure 4.1.12 on page 4.1.66 to locate the digital AM exciter PWB(s) (A5 and A6, if purchased).

Figure 4.1.14: Part of Digital AM Exciter PWB - Location of RS-232 Connector J3

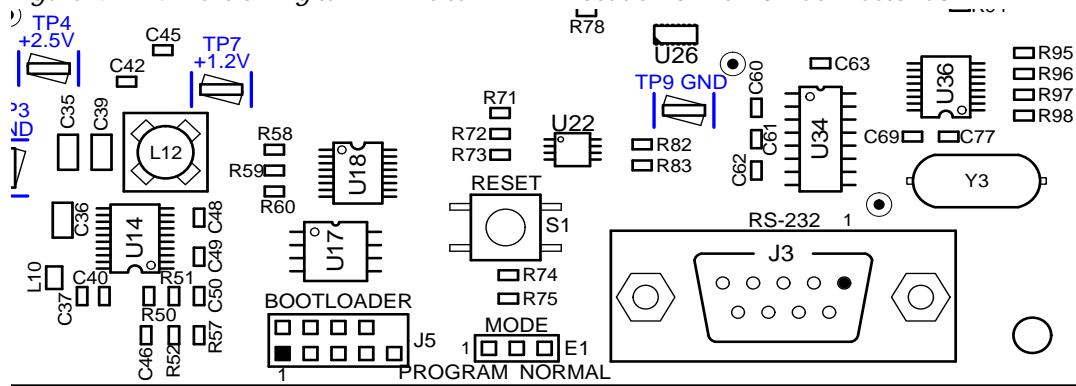

3. On MODE program header E1 (see Figure 4.1.14), install the shorting jumper in the PROGRAM position (shorting pins 1 and 2). Press RESET switch S1, located directly above E1.
4. Obtain the NCode Uploader application from Nautel's FTP site:
<ftp://www3.nautel.com/Utilities/NCodeUploader/>
5. From the PC, run the NCode Uploader application (see Figure 4.1.15 on page 4.1.70). Click Settings and ensure the COM port reflects the port that the serial cable is connected to on your PC.



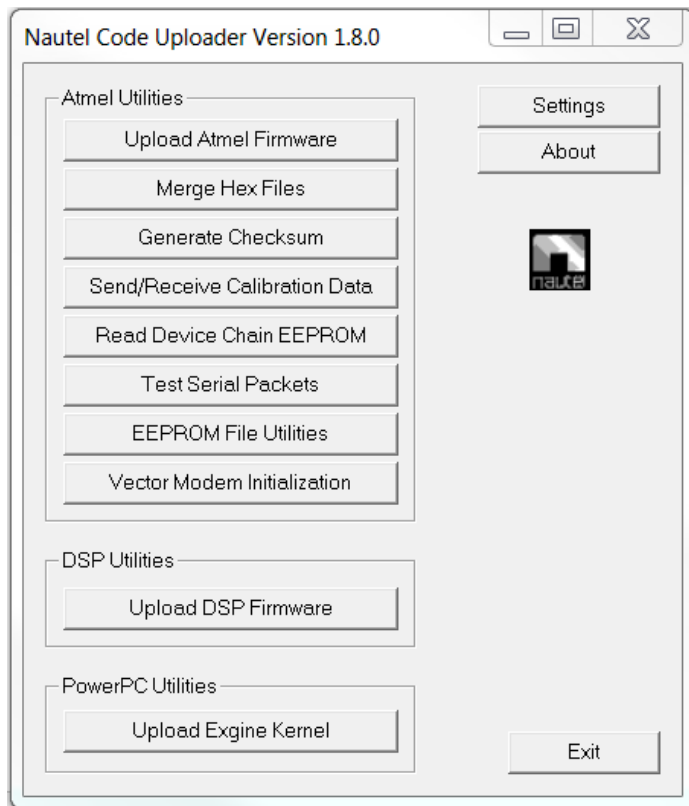
Figure 4.1.15: NCode Uploader Menu


Figure 4.1.16: Upload DSP Firmware Menu

6. Click the Upload DSP Firmware button (see [Figure 4.1.15 on page 4.1.70](#)). The menu shown in [Figure 4.1.16](#) should appear, along with the Connected to DSP successfully! prompt. Click OK.
7. Once connected, click the Read Exciter Configuration button. Select Save file to disk and click OK (see [Figure 4.1.17 on page 4.1.72](#)) to save the current calibration data. Browse to a desired location to save the file.
8. If the defective exciter does not allow the previous steps to be performed, try using the operational exciter to save the required calibration data. In this case, repeat [Step 2](#) through [Step 7](#) for the operational exciter's digital AM exciter PWB. If there is no operational exciter, contact Nautel for the required calibration data.

Figure 4.1.17: Upload DSP Firmware Menu - Select an Option

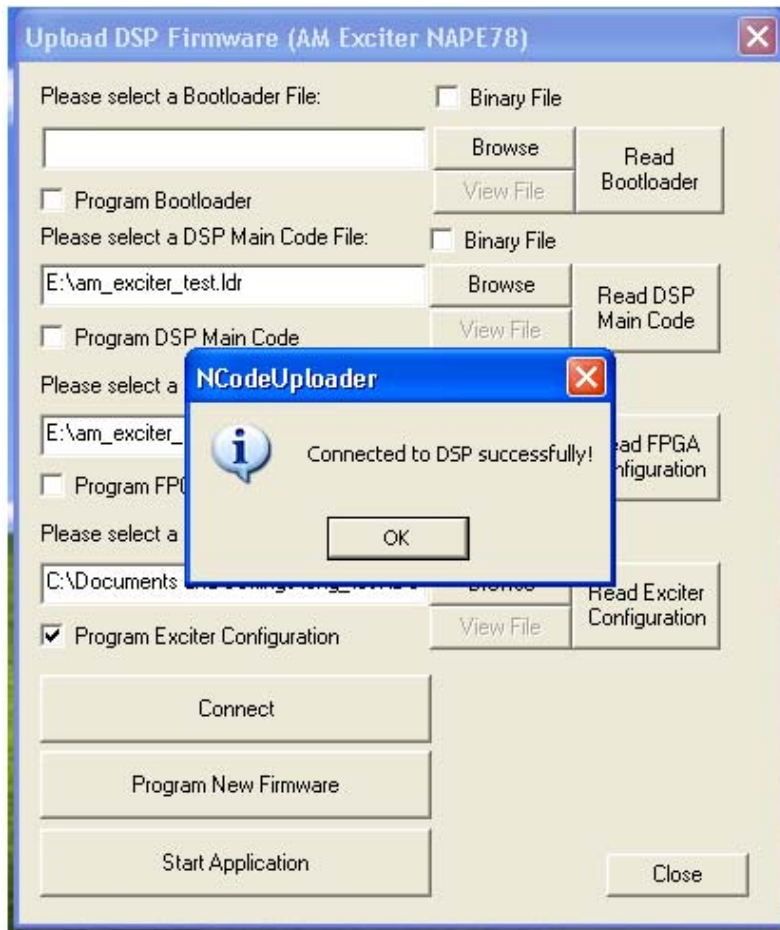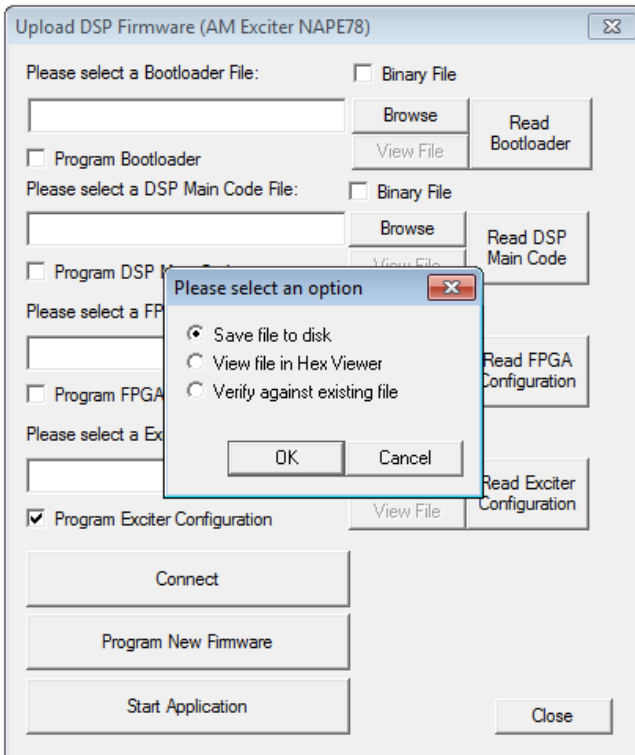

9. Turn off (disable) the ac power for the transmitter at the source. Remove and retain four sets of mounting hardware from the digital AM exciter PWB being replaced (A5 or A6).
10. Pull the digital AM exciter PWB away from the control/interface PWB (A4). It may be helpful to gently pry the connectors loose with a screwdriver.
11. Obtain a replacement digital AM exciter PWB (Nautel Part # NAPE78A/01).
12. Install the new digital AM exciter PWB by reversing [Step 9](#) and [Step 10](#).
13. Turn on (enable) the ac power source.
14. Connect a straight-through serial (DB9) cable between the replacement digital AM exciter PWB's RS-232 connector (9-pin D-sub J3, see [Figure 4.1.14 on page 4.1.69](#)) and the serial port on a PC.
15. On the digital AM exciter PWB's MODE program header E1 (see [Figure 4.1.14 on page 4.1.69](#)), install the shorting jumper in the PROGRAM position (shorting pins 1 and 2). Press RESET switch S1, located directly above E1.
16. Once connected, use the PC to browse to the configuration file saved in [Step 7](#) by clicking the Browse button next to the "Please Select a Exciter Configuration file:" field (see [Figure 4.1.18 on page 4.1.73](#)).

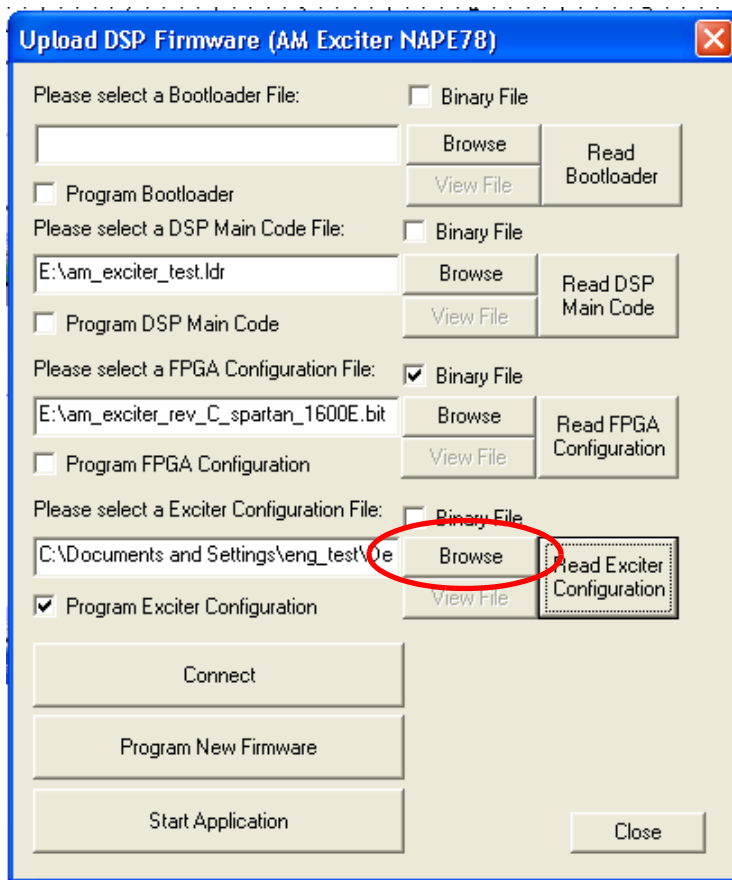Figure 4.1.18: Upload DSP Firmware Menu - Browse for configuration file

17. Click the Program Exciter Configuration checkbox (see [Figure 4.1.18](#)) so that the box contains a checkmark. Ensure the Program Bootloader, Program DSP Main Code and Program FPGA Configuration checkboxes are not checked. Click the Program New Firmware button.
18. On the digital AM exciter PWB's MODE program header E1 (see [Figure 4.1.14](#) on page 4.1.69), return the shorting jumper to the NORMAL position (shorting pins 2 and 3). Press RESET switch S1, located directly above E1.
19. Using the front panel UI or remote AUI, reset any active alarms.
20. Upgrade the subsystem's software using the front panel UI's Updating Firmware screen or the remote AUI's Upgrade Software page under the appropriate System Settings menu, by running an upgrade using the existing .tgz file already installed on the transmitter. See the NX10 Operations and Maintenance Manual for detailed instructions.
21. Set the transmitter to its RF On state. Ensure any previously present alarms have cleared.

Exgine PWB Replacement

1. Set the transmitter to its RF Off state. Turn off (disable) the ac power at the source. Open the front door to gain access to the exciter panel (see [Figure 4.1.12 on page 4.1.66](#)).
2. Disconnect all cables attached to the Exgine PWB (A7), taking note of the connector labels on the cables and the PWB.
3. Carefully remove and retain the four (4) sets of mounting hardware and remove the Exgine PWB from the exciter panel.
4. Obtain a replacement Exgine PWB (Nautel Part # NAPE74C/01).
5. Install the new Exgine PWB by reversing [Step 2](#) and [Step 3](#). Ensure all connections are tight. For connector mating assistance, refer to the connector mating tables in [Section 4.3, "Wiring/Connector lists" on page 4.3.1](#).
6. Turn on (enable) the ac power source. Set the transmitter to its RF On state. Ensure any previously present alarms have cleared.


GPS Sync PWB Replacement

1. Set the transmitter to its RF Off state. Turn off (disable) the ac power at the source. Open the front door to gain access to the exciter panel (see [Figure 4.1.12 on page 4.1.66](#)).
2. Disconnect all cables attached to the GPS sync PWB (A8), taking note of the connector labels on the cables and the PWB.
3. Carefully remove and retain the four (4) sets of mounting hardware and remove the GPS sync PWB from the exciter panel.
4. Obtain a replacement GPS sync PWB (Nautel Part # NAPX46).
5. Set the jumpers on the replacement PWB to the same positions as the defective PWB.
6. Install the new GPS sync PWB by reversing [Step 2](#) and [Step 3](#). Ensure all connections are tight. For connector mating assistance, refer to the connector mating tables in [Section 4.3, "Wiring/Connector lists" on page 4.3.1](#).
7. Turn on (enable) the ac power source. Set the transmitter to its RF On state. Ensure any previously present alarms have cleared.

Rack Interface PWB Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.19: Location of Rack Interface PWB

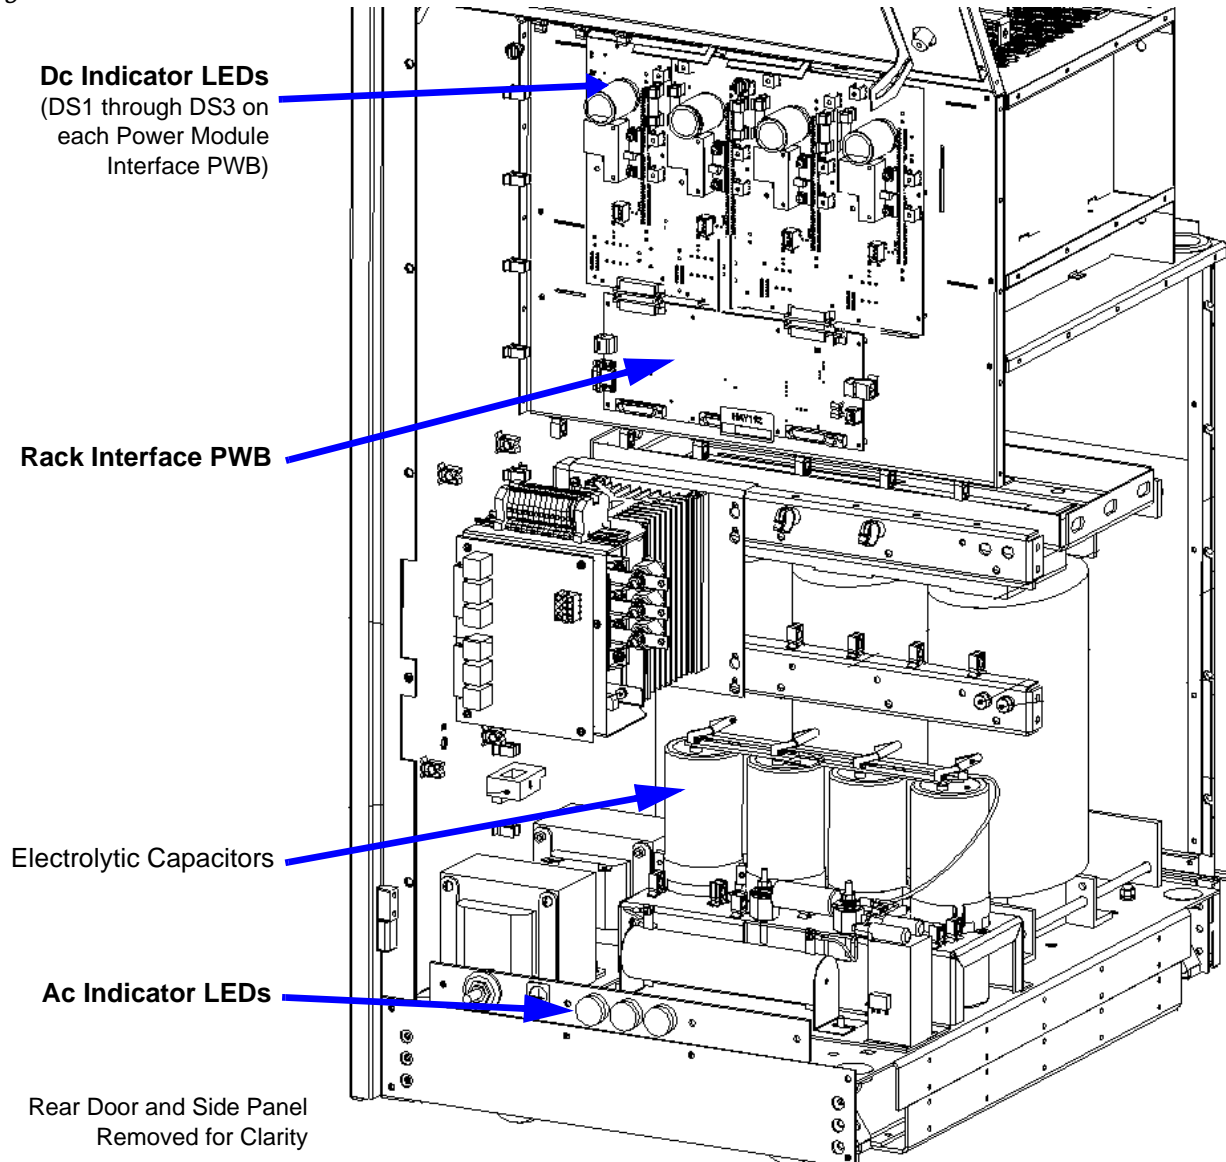


See [Figure 4.1.19 on page 4.1.75](#).

1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Disconnect all cables attached to the rack interface PWB (A9), taking note of the connector labels on the cables and the PWB.
3. Carefully remove and retain the eight (8) sets of mounting hardware and remove the rack interface PWB from the transmitter.
4. Obtain a replacement rack interface PWB (Nautel Part # NAPI173A).
5. Reverse [Step 2](#) through [Step 3](#) to install the replacement PWB. Ensure all connections are tight. For connector mating assistance, refer to the connector mating tables in [Section 4.3, "Wiring/Connector lists" on page 4.3.1](#).
6. Before restoring ac power, remove the four RF power modules from the transmitter (see ["Removing and Reinstalling RF Power Modules" on page 4.1.52](#)).
7. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source.
8. One at a time, reinstall each RF power module. The LED sequence on the front panel of each module should change to solid red. Reconnect each RF power module's PDM cable; the LED sequence should change to flashing amber.
9. Load the subsystem software (existing .tgz file) using the front panel UI's Updating Firmware screen or the remote AUI's Upgrade Software page under the appropriate System Settings menu. See the NX10 Operations and Maintenance Manual for detailed instructions.
10. Set the transmitter to its RF On state. Ensure any previously present alarms have cleared.

Power Module Interface PWB Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.20: Location of Power Module Interface PWBs

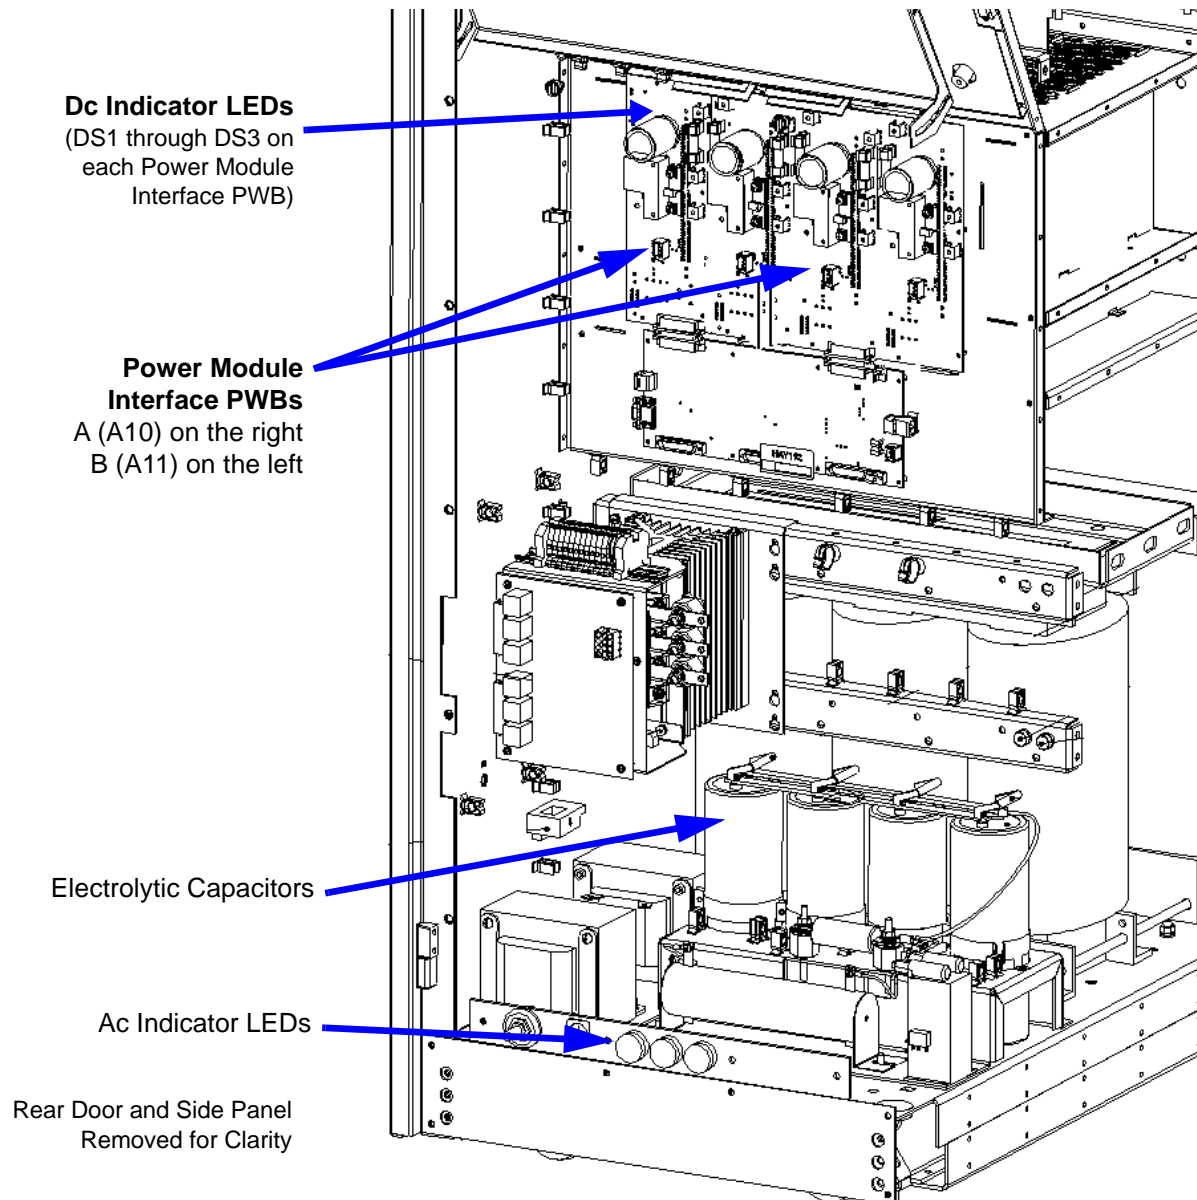


See [Figure 4.1.20 on page 4.1.77](#).

1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Disconnect all wiring and cables attached to the suspect power module interface PWB (A10 or A11), taking note of the connector labels on the cables and the PWB. Pay particular attention to the difference in shrink-wrap colour on the wires connected to E4/E8 and E6/E10.
3. From the front of the transmitter, remove the two RF power modules and two fan trays associated with the suspect power module interface PWB.
4. Remove the two gas discharge PWBs and two relays from the suspect power module interface PWB as detailed in ["Gas Discharge PWB and Relay Replacement" on page 4.1.79](#).
5. Carefully remove and retain the 16 sets of mounting hardware from the suspect power module interface PWB (A10 or A11) and remove the power module interface PWB from the transmitter.
NOTE: There are more than 16 screws in each power module interface PWB. The mounting hardware is located on the square pads of the PWB.
6. Obtain a replacement power module interface PWB (Nautel Part # NAPI174).
7. Install the new PWB by reversing [Step 2](#) through [Step 5](#), including the re-installation of the two gas discharge PWBs and relays. Ensure all connections are tight, noting that connections to terminals E1, E2, E4, E6, E8 and E10 have special torque requirements. Torque these wires to 20 in-lbs (2.2 N-m).
8. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation. Ensure any previously present alarms have cleared.

Gas Discharge PWB and Relay Replacement


WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.21: Location of Gas Discharge PWB and Relays

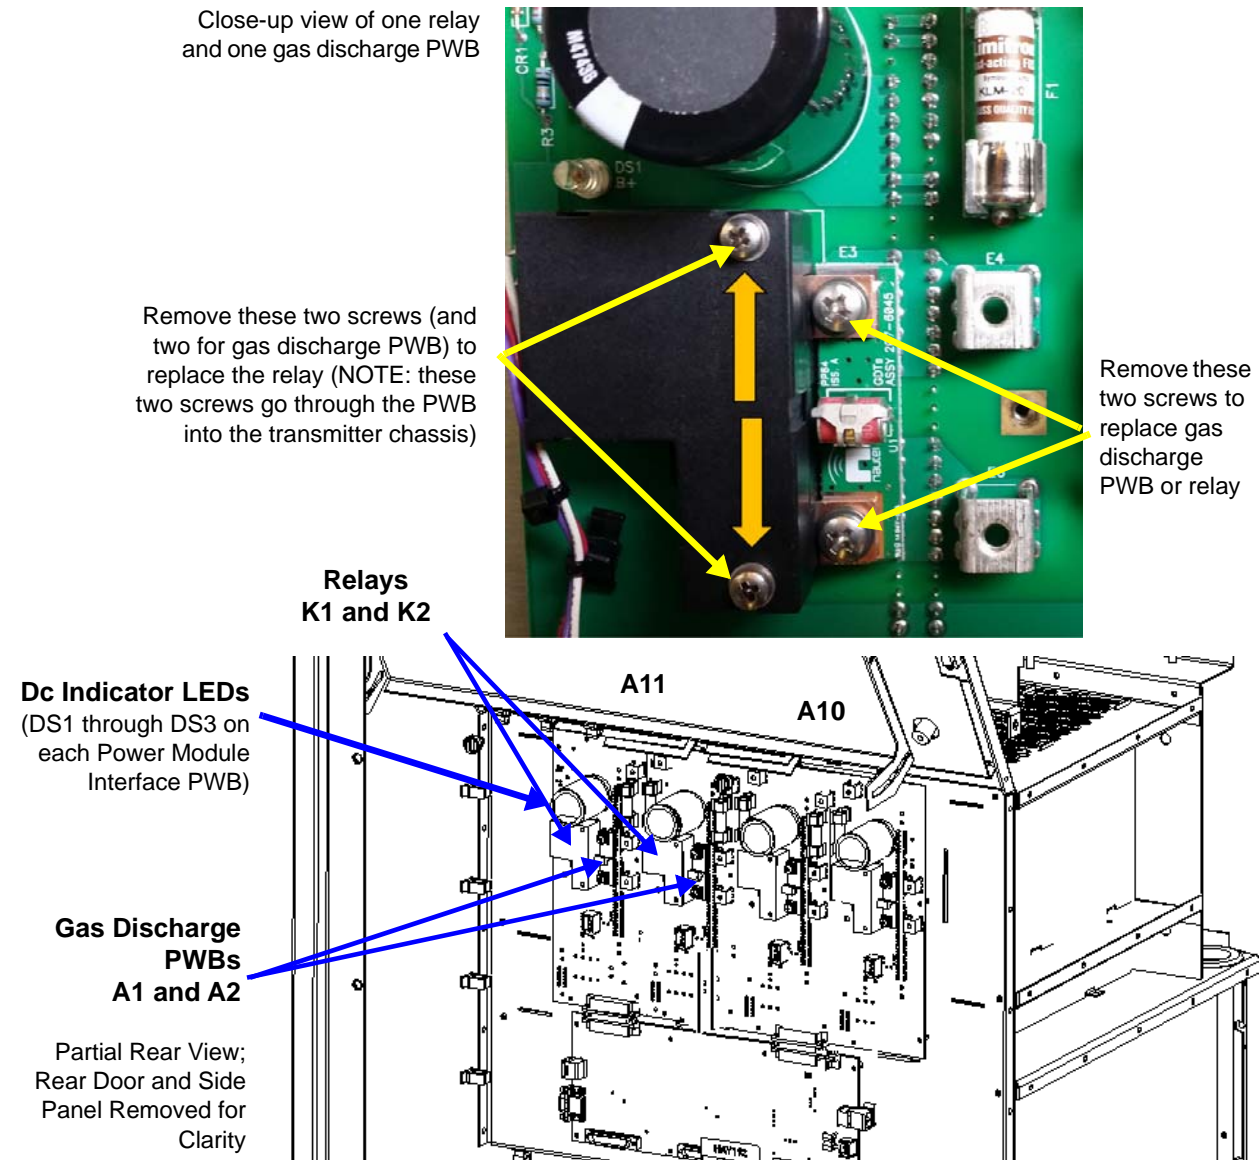

1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Remove and retain the two sets of mounting hardware from the suspect gas discharge PWB (A10A1, A10A2, A11A1 or A11A2) or four sets of mounting hardware from the suspect relay (A10K1, A10K2, A11K1 or A11K2). See [Figure 4.1.21 on page 4.1.79](#) and Figure MD-9 in the Mechanical Drawings section of this manual. Note the orientation of the Belleville washers that secure the relay and gas discharge PWB to the power module interface PWB terminals (see [Figure 4.1.22 on page 4.1.80](#)).
3. Remove the defective PWB(s) or relay(s).

Figure 4.1.22: Orientation of Belleville Washers

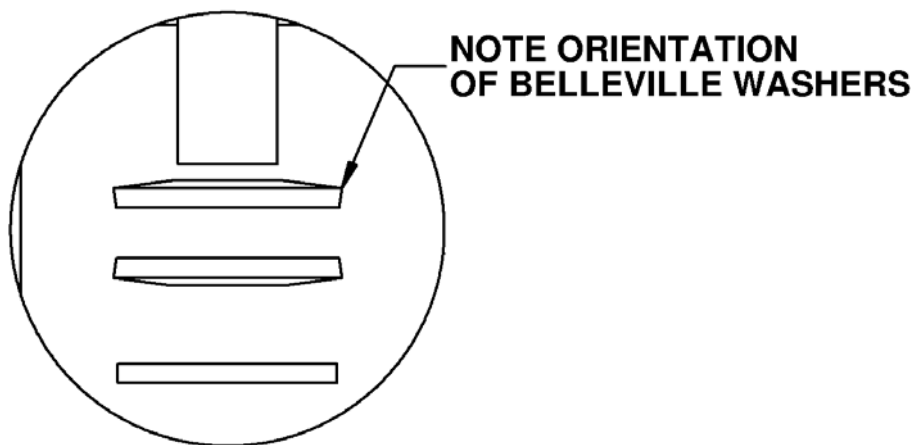


4. Install the new PWB or relay by reversing [Step 2](#) and [Step 3](#). Use new Belleville washers (Nautel Part # HM49) and torque to 12 in-lbs to secure the relays.
5. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation. Ensure the offending alarm has cleared.

Fan Tray Replacement

NOTE: Fan tray replacement can be performed with the transmitter 'on-air' (RF On).

Figure 4.1.23: Location of Fan Tray Assemblies

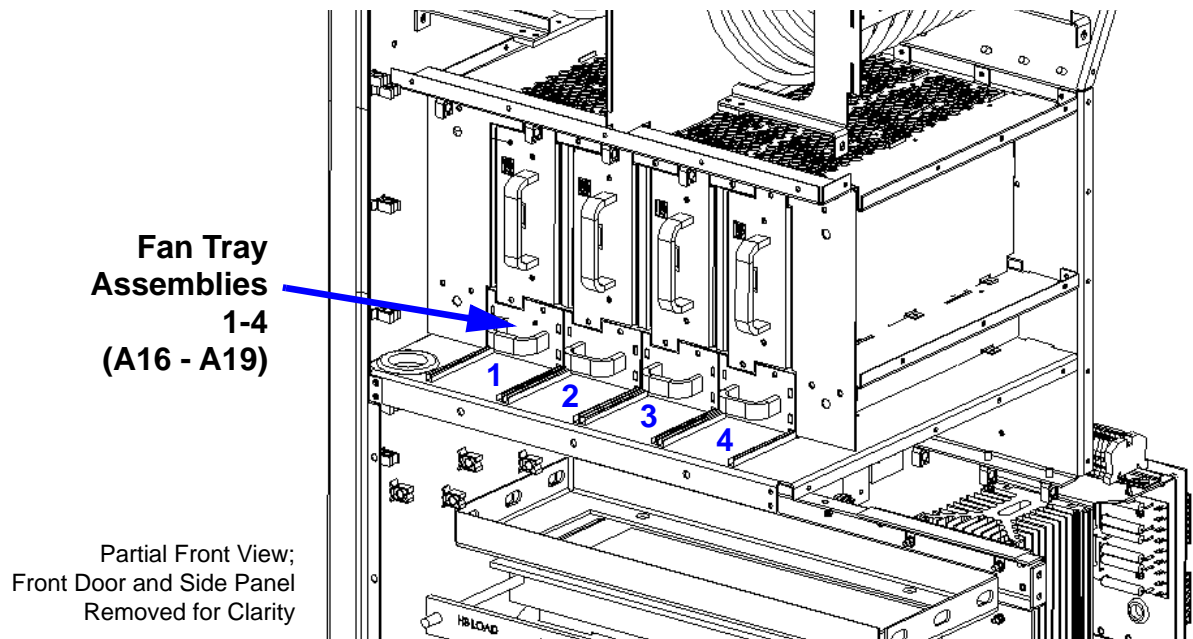

1. Open the front door.
2. Locate the suspect fan tray assembly [1 (A16) through 4 (A19)] associated with the RF Power Module 1-4 alarm(s) (see [Figure 4.1.23](#)).
3. Remove and retain the two sets of mounting hardware.

CAUTION! If one of the fans in the tray is still operational, its blades may still be rotating. Be careful to keep fingers away from fan blades.


4. Pull the fan tray assembly out of the transmitter.
5. Obtain a replacement fan tray (Nautel Part # NAX274).
6. Install the new fan tray in the transmitter and secure using retained screws. Ensure the offending alarm has cleared.

NOTE: You can also replace an individual fan of a fan tray assembly. See "[Fan Tray Cooling Fan Replacement](#)" on [page 4.1.82](#).

Fan Tray Cooling Fan Replacement

1. Remove the fan tray assembly [1 (A16) through 4 (A19)] that contains the suspect fan as detailed in ["Fan Tray Replacement" on page 4.1.81](#).
2. Disconnect the suspect fan's mating plug (B1P1 or B2P1) (see [Figure 4.1.24](#)).
3. Remove and retain the cooling fan's two M3 screws that secure the fan to the fan tray, along with the spacer sleeves that are installed between the two ears of the fan.
4. Obtain a replacement fan (Nautel Part # ZAP50) from the site spares kit, if purchased (vendor part # is Minebea Motor Mfg. Corp. 3115RL-07W-B79-E51).
5. Install the replacement fan using retained screws and spacers, ensuring correct orientation for proper air flow. Check the position of the other fan as a reference.
6. Reinstall the fan tray in the transmitter and secure using retained screws. Ensure the offending alarm has cleared.


Figure 4.1.24: Fan Tray Assembly Cooling Fans (B1 and B2)

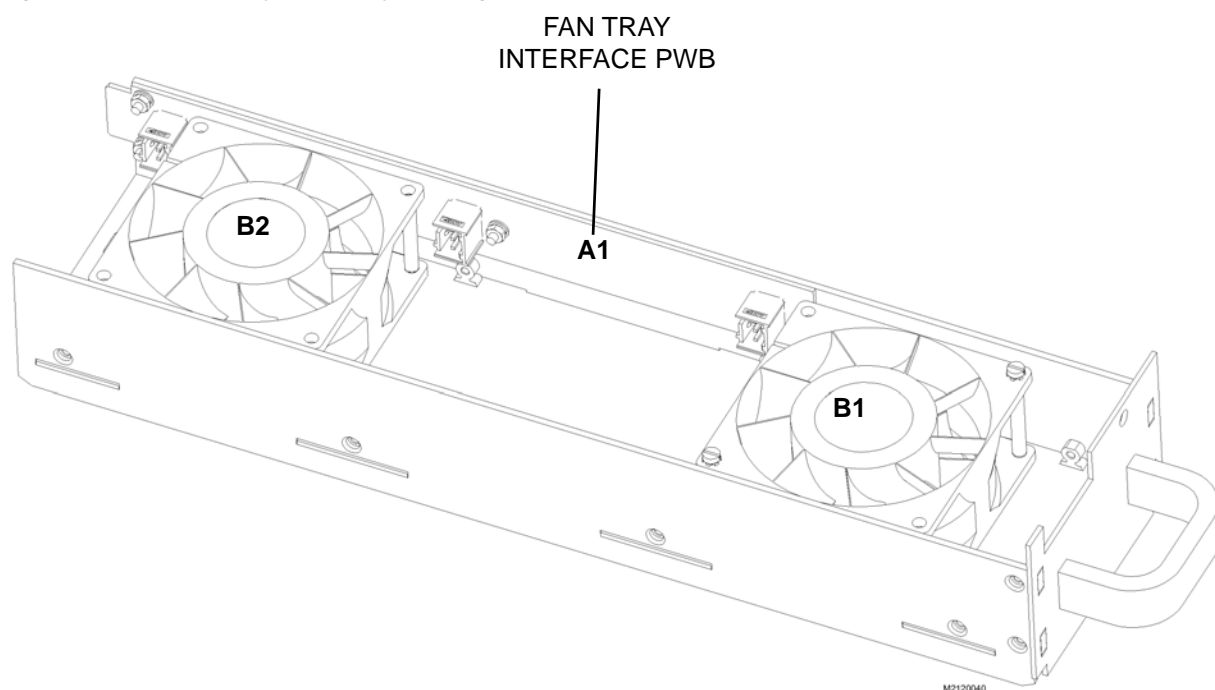

RF Voltage and Current Sample PWB Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.25: Location of RF Voltage and Current Sample PWB

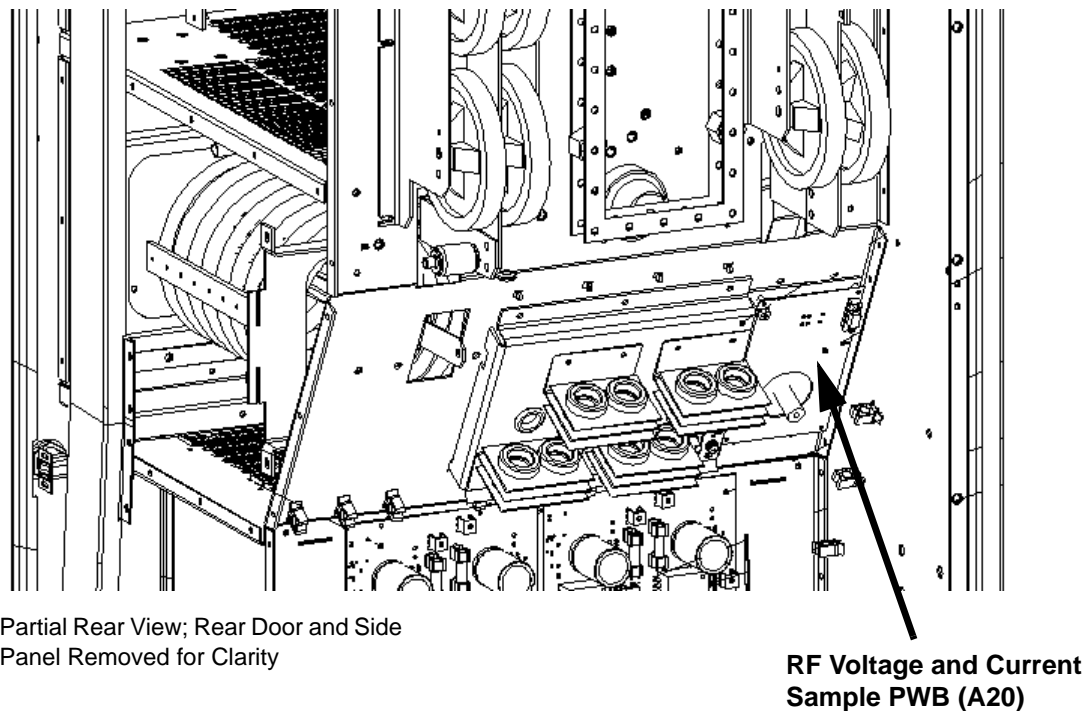

1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Disconnect all cables attached to the RF voltage and current sample PWB (A20) (see [Figure 4.1.25](#)), taking note of the connector labels on the cables and the PWB.
3. Remove the four (4) sets of hardware that secure the cover plate for the RF voltage and current sample PWB.

4. Carefully remove and retain the four (4) sets of mounting hardware from the RF voltage and current sample PWB and remove the PWB from the transmitter.
5. Obtain a replacement RF voltage and current sample PWB (Nautel Part # NAPP11/02A).
6. Install the new PWB by reversing [Step 2](#) through [Step 4](#). Ensure all connections are tight, noting that the connection to terminal E1 has a special torque requirement. Torque this wire to 10 in-lbs (1.1 N-m).
7. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation.
8. Perform a re-calibration of the transmitter (see ["Re-Calibrating the Transmitter"](#)).

Re-Calibrating the Transmitter

You will need the following test equipment to perform the re-calibration:

- ❖ Calibration values from Nautel Customer Service: 1st Inductor Value, Filter Lag and Ideal PA Impedance
 - ❖ 50-ohm test load, rated for full power including modulation
 - ❖ Impedance measuring device capable of measuring impedance (both resistive and reactive)
 - ❖ RF current probe with RMS meter
1. Disable and lock out the ac power source for the transmitter. Terminate the transmitter's RF output into the test load.
 2. Measure and record the test load impedance at the transmitter's RF output (include the hardline between the transmitter and test load in the measurement), at the transmitter's carrier frequency.

NOTE: If the current probe is not in line at the output of the transmitter, measure the test load impedance seen at both the output of the transmitter ($Z_{\text{Transmitter_Output}}$) and the position of the current probe ($Z_{\text{Position of Current Probe}}$).

3. Calculate the rated RF current as follows:

$$I_{\text{Rated}} = \sqrt{\frac{P_{\text{Rated}}}{R_{\text{Position of RF Current Probe}}}}$$

Figure 4.1.26: Forward/Reflected Power Screen on Remote AUI

4. Enable the ac power source for the transmitter.
5. Set the RF output power to 5% of rated power. In the remote AUI's Menu -> Factory Settings -> Forward/Reflected Power screen (see [Figure 4.1.26 on page 4.1.85](#)), set SWR Protection to Off. Press RF On. Measure the RF current on the RF current probe.
6. Calculate the transmitter output current as follows:

$$I_{\text{Transmitter Output}} = \sqrt{\frac{(I_{\text{Measured}})^2 \times R_{\text{Position of RF Current Probe}}}{R_{\text{Transmitter Output}}}}$$

NOTE: I_{measured} is the RF current probe measurement

7. In the remote AUI's Menu -> Factory Settings -> Forward/Reflected Power screen (see [Figure 4.1.26](#)), enter the test load impedance measurement from [Step 2](#) in the Output Impedance field. Enter the transmitter output current calculated in [Step 4](#) in the RF Current field. Press Calibrate to begin calibrating.

NOTE: On the Forward/Reflected Power screen, the 1st Inductor Value, Filter Lag and Ideal PA Impedance fields should already contain values. Contact Nautel Customer Service to ensure the values are correct.

8. When the calibration routine is complete (indicated at the bottom of the Forward/Reflected Power screen), set SWR Protection to On.
9. Verify the RF current probe reads 22.5% \pm 5% of the rated RF current calculated in [Step 3](#).

10. Ensure the RMS Envelope Magnitude meter in the upper, right corner of the remote AUI reads within $\pm 1\%$ of the ideal value, noting the ideal value is calculated as follows:

$$\text{Ideal Value} = \frac{163 \text{ V} \times \% \text{ Volts}}{\sqrt{\frac{50}{\text{Exciter Carrier Impedance}}}} / \text{Exciter B+ Sample} \times 100\%$$


NOTE:

- ❖ % Volts = 22.5%/100
 - ❖ Exciter Carrier Impedance (see meters) displays in rectangular form; convert to polar form and use only the magnitude
 - ❖ Exciter B+ Sample (see meters)
11. Increase the RF output power to 10% of rated power. Measure the RF current on the RF current probe. The RF current should be $31.5\% \pm 5\%$ of the rated RF current in [Step 3](#). Use the formula from [Step 10](#) ($\% \text{ Volts} = 31.5\%/100$) to ensure the RMS Envelope Magnitude meter is within $\pm 1\%$ of the ideal value. If not, enter the test load impedance measurement from [Step 2](#) in the Output Impedance field. Use the RF current measurement in this step to calculate the transmitter output current (see [Step 4](#)) and enter the calculated result in the RF Current field. Press Calibrate. When the calibration routine is complete (indicated at the bottom of the Forward/Reflected Power screen), verify the new RF Current and RMS Envelope Magnitude values are correct.
 12. Increase the RF output power to 50% of rated power. Measure the RF current on the RF current probe. The RF current should be $71\% \pm 5\%$ of the rated RF current in [Step 3](#). Use the formula from [Step 10](#) ($\% \text{ Volts} = 71\%/100$) to ensure the RMS Envelope Magnitude meter is within $\pm 1\%$ of the ideal value. If not, enter the test load impedance measurement from [Step 2](#) in the Output Impedance field. Use the RF current measurement in this step to calculate the transmitter output current (see [Step 4](#)) and enter the calculated result in the RF Current field. Press Calibrate. When the calibration routine is complete (indicated at the bottom of the Forward/Reflected Power screen), verify the new RF Current and RMS Envelope Magnitude values are correct.
 13. Increase the RF output power to 100% of rated power. Measure the RF current on the RF current probe. The RF current should be $100\% \pm 5\%$ of the rated RF current in [Step 3](#). Use the formula from [Step 10](#) ($\% \text{ Volts} = 100\%/100$) to ensure the RMS Envelope Magnitude meter is within $\pm 1\%$ of the ideal value. If not, enter the test load impedance measurement from [Step 2](#) in the Output Impedance field. Use the RF current measurement in this step to calculate the transmitter output current (see [Step 4](#)) and enter the calculated result in the RF Current field. Press Calibrate. When the calibration routine is complete (indicated at the bottom of the Forward/Reflected Power screen), verify the new RF Current and RMS Envelope Magnitude values are correct.
 14. Verify VSWR Protection is enabled (set to On).
 15. Select exciter B, if applicable, and repeat [Step 5](#) through [Step 14](#).
 16. Return the transmitter to normal operation.

Directional Coupler Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.27: Location of Directional Coupler Assembly

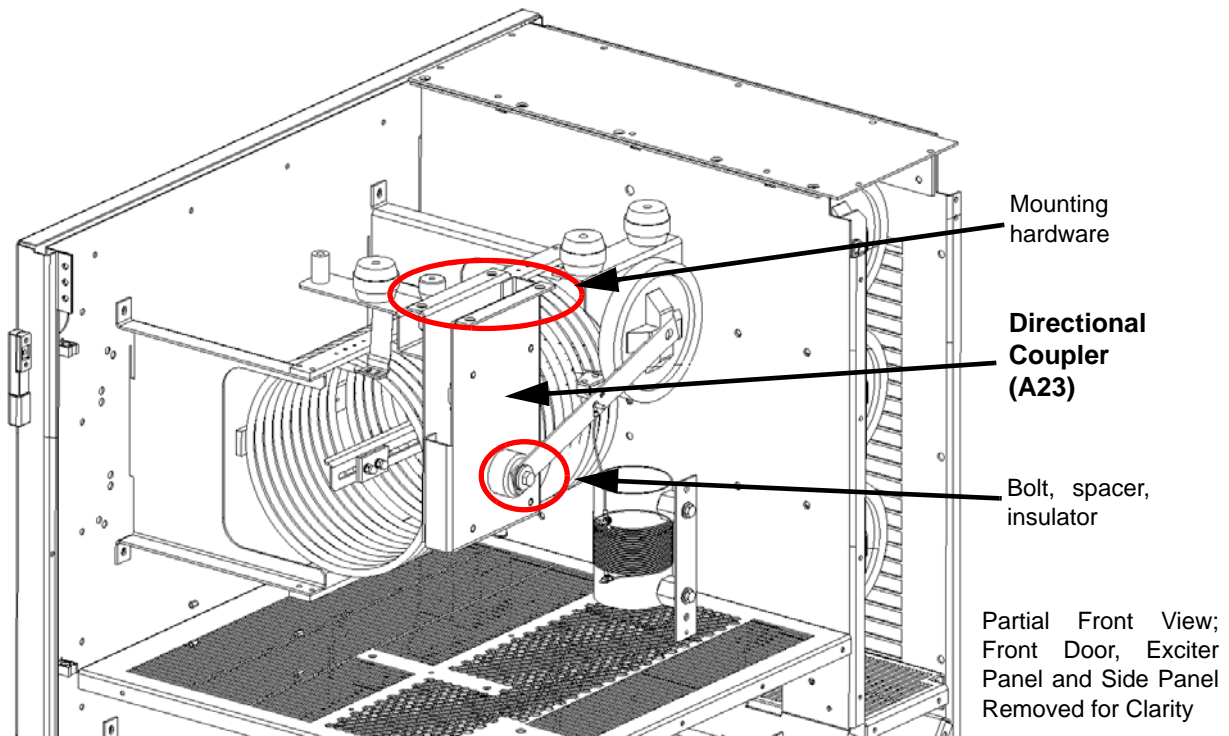


1. Set the transmitter to its RF Off state. Turn off (disable and lock out) the ac power at the source. Open the front door to gain access to the exciter panel. Remove 16 screws that secure the exciter panel and open the exciter panel to gain access to the directional coupler (A23) (see [Figure 4.1.27](#)).
2. Disconnect all cables attached to the directional coupler, taking note of the connector labels on the cables and the assembly.
3. Remove the bolt, spacer and associated hardware from inside the insulator on the directional coupler.
4. Carefully remove and retain the four (4) sets of mounting hardware at the top of the cabinet and remove the directional coupler from the transmitter.

-
5. Obtain a replacement directional coupler (Nautel Part # NAFP112).
 6. Install the new directional coupler by reversing [Step 2](#) through [Step 4](#), noting that a new bolt, sleeve and associated hardware are supplied with the directional coupler. Torque the center conductor bolt to 292 in-lbs (32.7 N-m). For wiring and connector mating assistance, refer to [Section 4.3, "Wiring/Connector lists" on page 4.3.1](#).
 7. Close and secure the exciter panel. Turn on (enable) the ac power source.
 8. Using the front panel UI, go to the User Settings -> RF Monitor -> RF Mon Select menu and select Reflected Power. Use a digital multimeter to measure the RMS voltage on the control/interface PWB's RF MONITOR BNC connector (J1).
 - ❖ If the measurement is less than 156 mV RMS, no further adjustment is required. Proceed to [Step 10](#).
 - ❖ If the measurement is greater than 156 mV RMS, you will need to null the directional coupler as detailed in [Step 9](#).
 9. If necessary, null the directional coupler as follows:
 - ❖ Turn off (disable) the ac power source. Disconnect the transmitter from the antenna system and connect the transmitter's RF output to a suitably rated 50-ohm test load.
 - ❖ Remove the 0.5-inch diameter black hole-plug from the exciter panel, noting it is located above the upper, right-hand corner of the control/interface PWB (A4). **NOTE:** This allows access to the directional coupler's variable resistor.
 - ❖ Turn on (enable) the ac power source. Set the forward power to 1.6 kW and press RF On.
 - ❖ Connect an oscilloscope to the reflected power sample test point (TP24) on the control/interface PWB (A4). Use a tuning tool or insulated screwdriver (available for purchase from Nautel, Part # HAS48) to adjust the directional coupler's variable resistor, through the hole in the exciter panel, to achieve the lowest possible rms voltage on the oscilloscope. If you cannot achieve 156 mV or less, contact Nautel.
 - ❖ Re-install the hole plug in the exciter panel. Close the front door.
 - ❖ Press RF Off and turn off (disable) the ac power source.
 - ❖ Reconnect the transmitter's RF output to the antenna system.
 10. Turn on (enable) the ac power source and press RF On. Ensure the offending alarm has cleared.

Arc Detector UV Sensor Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.28: Location of Arc Detector Assembly


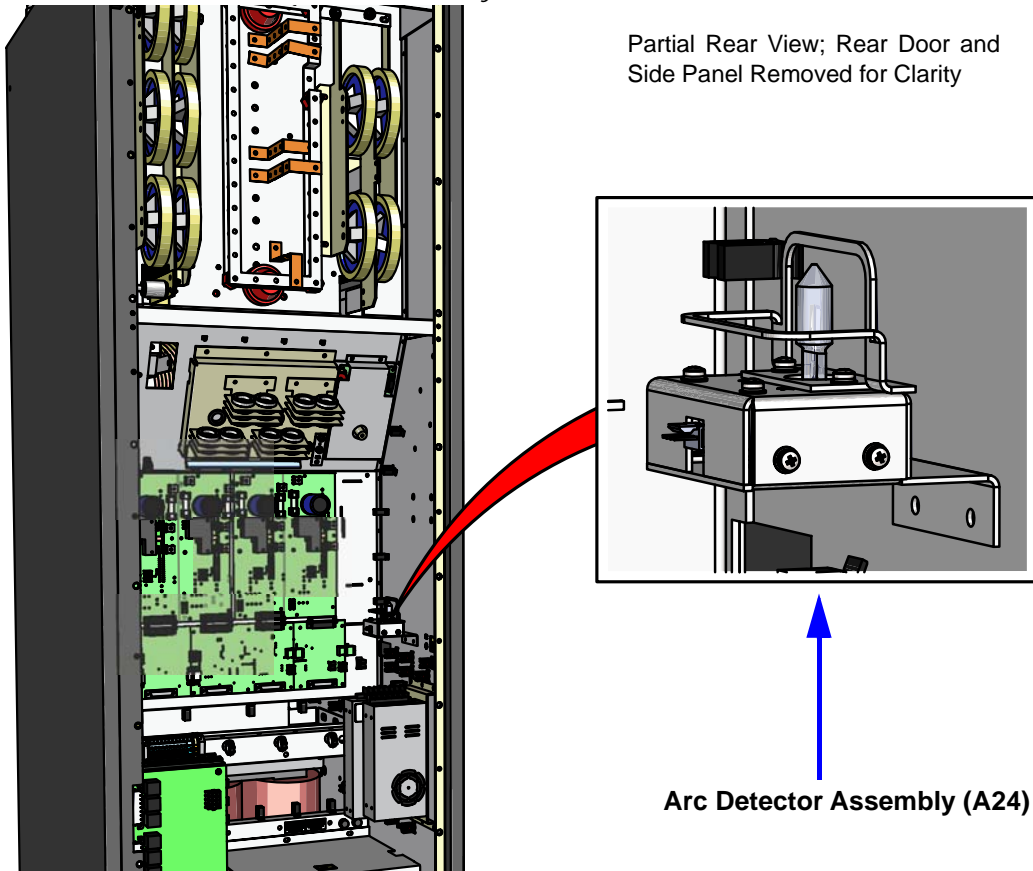


1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
2. Disconnect the cable attached to the arc detector assembly (see [Figure 4.1.28](#)), taking note of the connector label on the cable and the assembly.

3. Carefully remove and retain the two (2) sets of mounting hardware and remove the arc detector assembly from the transmitter chassis. Remove the UV sensor (U2) from the arc detector assembly's driver PWB (U1) through the hole on top of the enclosure (see [Figure 4.1.29 on page 4.1.91](#)).
4. Obtain a replacement UV sensor (Nautel Part # UB89).

WARNING! TAKE SPECIAL CARE WHEN HANDLING THE UV SENSOR AFTER REMOVING IT FROM THE PACKAGING SO IT DOES NOT RECEIVE IMPACT SHOCK. DO NOT ALLOW SKIN CONTACT WITH THE GLASS FACE. WEAR CLEAN GLOVES TO ENSURE NO OILS FROM YOUR SKIN CONTACT THE SURFACE OF THE GLASS.


5. Cut the anode lead of the UV sensor to the same length as the cathode, noting the anode/cathode orientation and taking care not to bend the leads. Install the UV sensor on the arc detector assembly's driver PWB (U1), ensuring proper orientation (see [Figure 4.1.29 on page 4.1.91](#) and [Figure 4.1.30 on page 4.1.91](#)).
6. Complete the replacement procedure by reversing [Step 2](#) and [Step 3](#).
7. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation. Ensure the offending alarm has cleared.

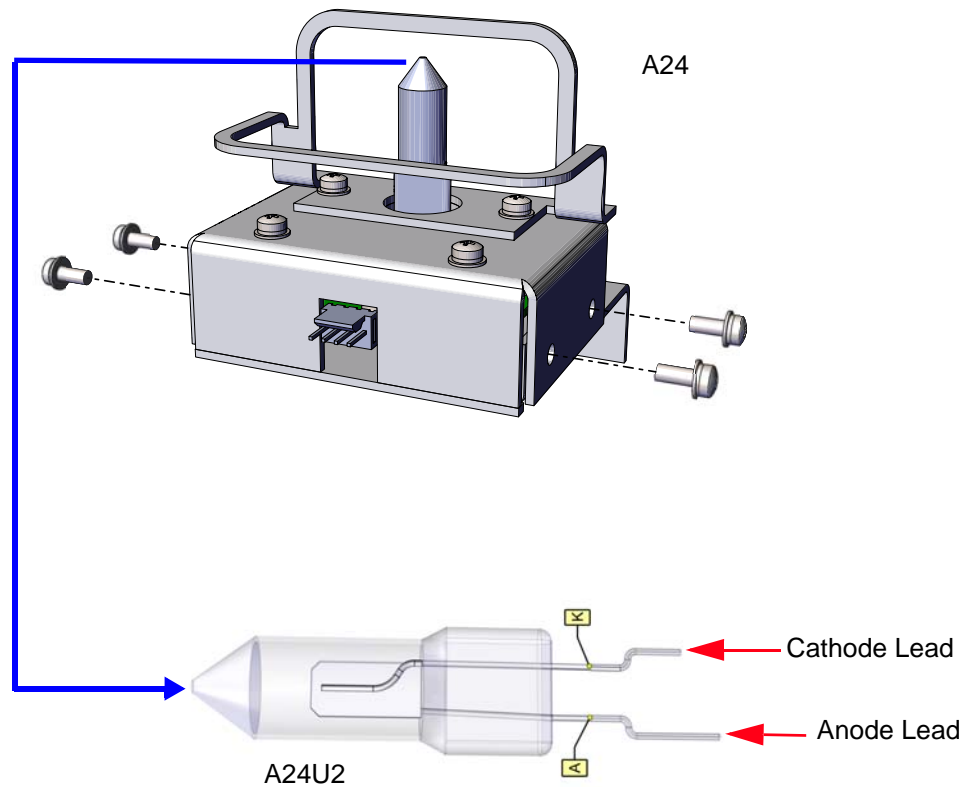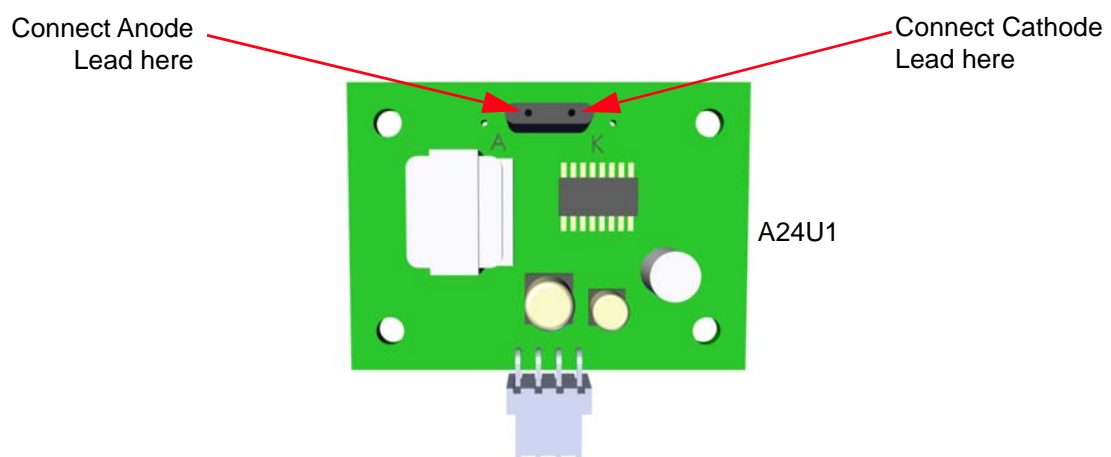Figure 4.1.29: Arc Detector Assembly UV Photo Tube Sensor (UB89)*Figure 4.1.30: UB89 Orientation on Driver PWB (UB88)*

+15 V or +48 V Power Supply Replacement

WARNING! LETHAL VOLTAGES EXIST INSIDE THE TRANSMITTER WHEN THE POWER IS TURNED ON. TURN OFF AND LOCK OUT THE POWER AT THE SOURCE AND WAIT UNTIL THE THREE AMBER LEDS IN THE BACK OF THE TRANSMITTER ARE OFF BEFORE REMOVING CONNECTIONS OR ASSEMBLIES.

Figure 4.1.31: Location of +15 V and +48 V Low Voltage Power Supplies

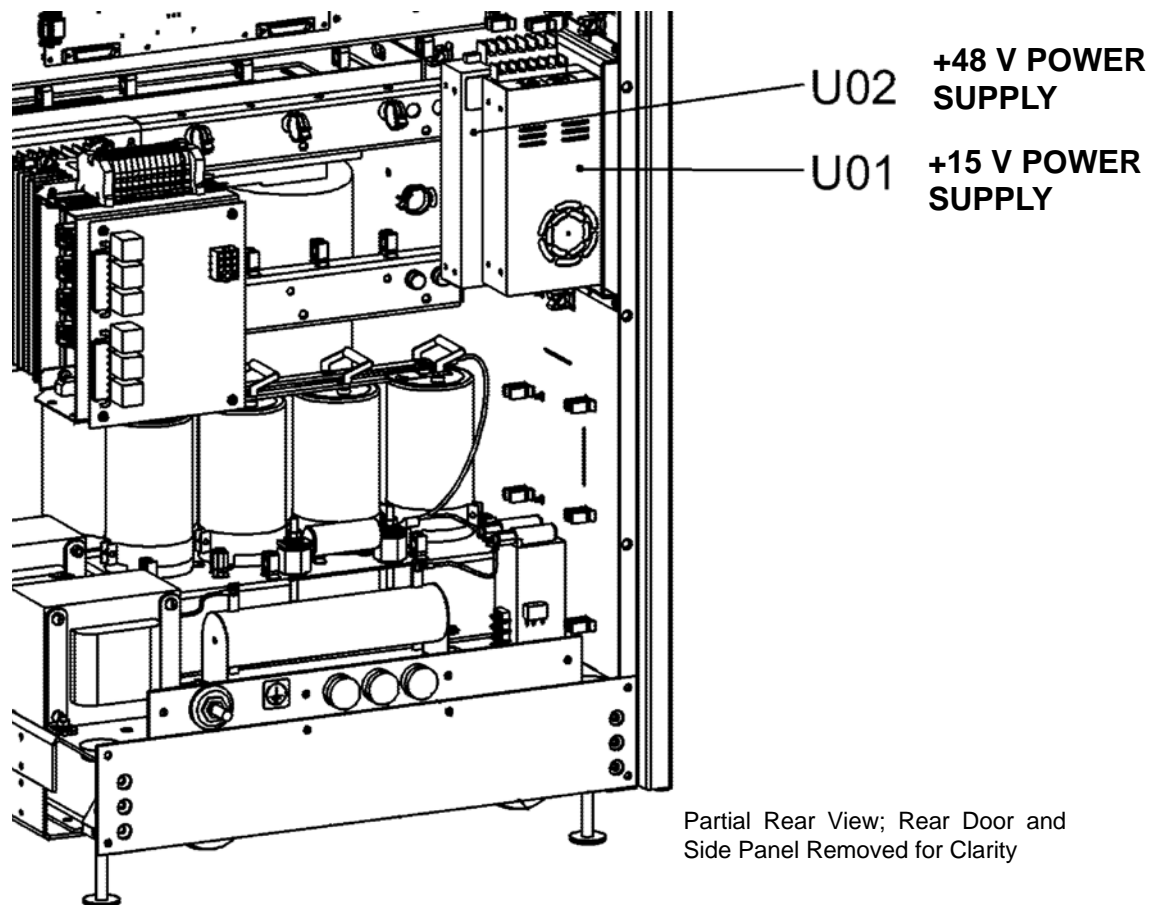

NOTE: Both the +15 V (U1) and +48 V (U2) power supply modules must be removed to allow the replacement of either module.


-
1. Turn off (disable and lock out) the ac power at the source. When the three ac indicator LEDs are off (amber when on), open the rear door. Verify the three dc indicator LEDs on each power module interface PWB are off (amber when on). For additional safety, measure the dc voltage across the + and - terminals of any of the four, electrolytic capacitors. Open the lower, front panel to access the power transformer's terminals and measure all line-to-line and line-to-neutral ac voltages. There should be little or no ac or dc voltage. **DO NOT PROCEED** if the dc voltage is greater than 5 V.
 2. Disconnect all wiring attached to the +15 V power supply module (U1) and +48 V power supply module (U2) (see [Figure 4.1.31 on page 4.1.92](#)), taking note of the wiring labels.
 3. Carefully remove and retain the six (6) sets of mounting hardware that secure the power supply mounting bracket to the transmitter. Remove the screws that secure the suspect power supply to the mounting bracket.
 4. Obtain a replacement power supply module, noting:
 - ❖ the +15 V power supply module is Nautel Part # UG102
 - ❖ the +48 V power supply module is Nautel Part # UG103
 5. Install the new power supply module by reversing [Step 2](#) and [Step 3](#). Ensure all connections are tight, noting there are special torque requirements for the L, N, G, V+ and V- terminals for each supply.
 - ❖ For the +15 V power supply module, torque the wiring connections to 9.7 in-lbs (1.1 N-m).
 - ❖ For the +48 V power supply module, torque the L, N and G wiring connections to 15 in-lbs (1.7 N-m) and torque the V+ and V- connections to 16 in-lbs (1.8 N-m)..
 6. Re-install the lower, front panel over the power transformer. Close and secure the rear door. Turn on (enable) the ac power source and resume transmitter operation. Ensure the offending alarm has cleared.

Graphic User Interface Display and UI Interface PWB Replacement

Graphic User Interface (GUI) Display Replacement

See [Figure 4.1.32](#).

1. Turn off (disable) the ac power source for the transmitter.
2. Open the front door to access the GUI display (U3) on the back of the door.
3. Disconnect the cable attached to the GUI display, noting its orientation.
4. Carefully remove the four (4) sets of mounting hardware that secure the GUI display and remove the GUI display from the transmitter.
5. Obtain a replacement GUI display (Nautel Part # UW146).
6. Reverse [Step 3](#) through [Step 4](#) to reinstall the GUI display. Reconnect all wiring.
7. Turn on (enable) the ac power source for the transmitter.

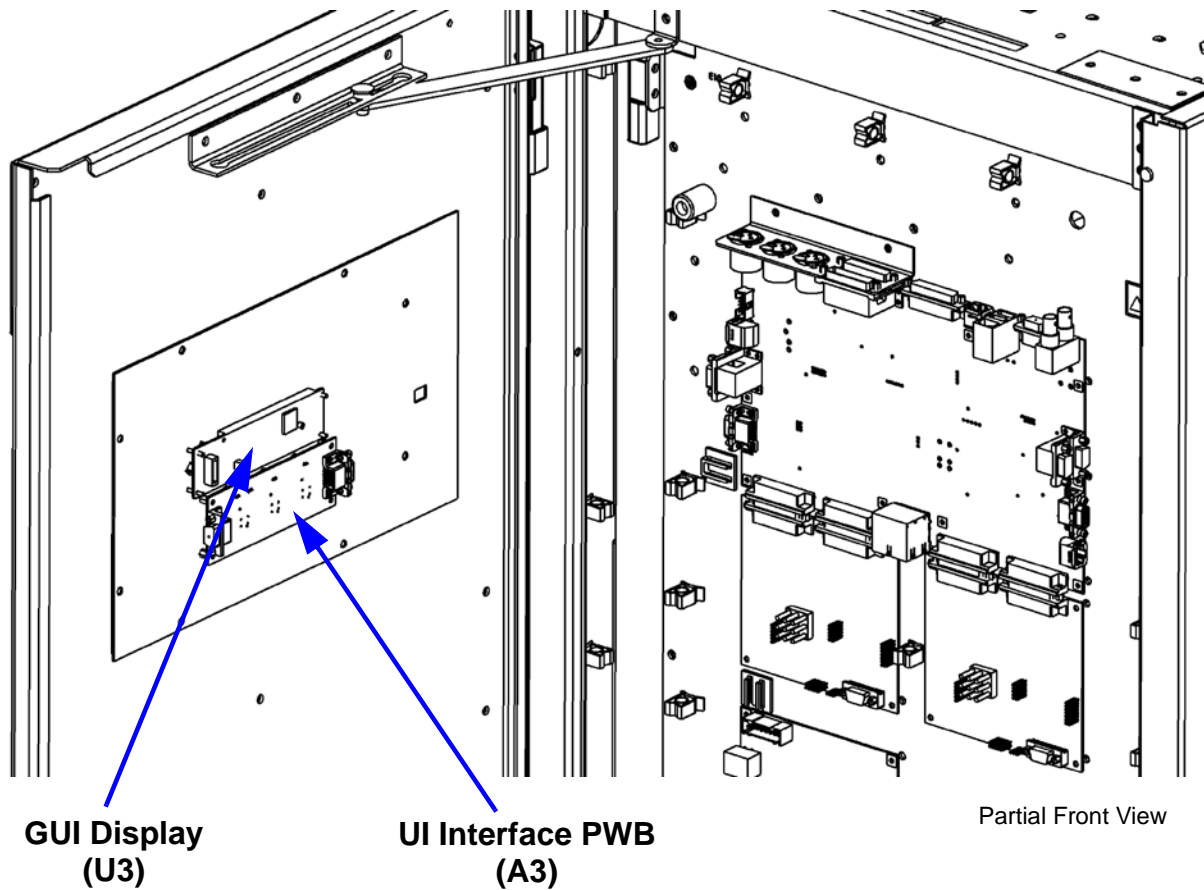Figure 4.1.32: Graphic User Interface and UI Interface PWB Location

UI Interface PWB Replacement

See [Figure 4.1.32](#).

1. Turn off (disable) the ac power at the source.
2. Open the front door to access the UI interface PWB (A3) on the back of the door.
3. Disconnect the cables attached to the UI interface PWB, noting their orientation.
4. Remove and retain the four (4) M4 mounting screws that secure the PWB and remove the PWB from the transmitter.
5. Obtain a replacement UI interface PWB (Nautel Part # NAPI142A).
6. Reverse [Step 3](#) and [Step 4](#) to reinstall the GUI display. Reconnect all wiring.
7. Turn on (enable) the ac power source and resume transmitter operation.

SECTION 4.2: PARTS LISTS

This section contains reference designation lists that provide descriptive and provisioning information for all electrical and mechanical parts that have an assigned reference designation and form a part of the subject equipment.

Topics in this section include

- [Family Tree](#)
- [How to Locate Information About a Specific Part](#)
- [Column Content on page 4.2.2](#)
- [Common Abbreviations/Acronyms on page 4.2.4](#)

Family Tree

[Figure 4.2.1 on page 4.2.5](#) depicts the family tree for the subject equipment. It is based on the descending order of the reference designation hierarchy and identifies all assemblies that have an assigned Nautel configuration control number.

How to Locate Information About a Specific Part

To locate the information for a specific part, the assigned reference designation for the part must be known. In addition, the Nautel nomenclature (e.g., NAP39C) assigned to the assembly containing the part or the full reference designation, including the reference designation of all higher assemblies, must be known.

When the Nautel Nomenclature is Known:

- Refer to the family tree ([Figure 4.2.1 on page 4.2.5](#)) and identify the block(s) associated with the Nautel nomenclature. Locate the part's reference designation in the identified reference designation list in this section, noting they are sorted alphanumerically.

When the Reference Designation is Known:

- Refer to the family tree depicted in [Figure 4.2.1 on page 4.2.5](#) with the full reference designation.
- Follow the family tree branches to the block that represents the lowest level assembly assigned a Nautel configuration control number. Then locate the reference designation information for that Nautel configuration control number.
- Locate the part's reference designation and associated Nautel Part # in the list provided at the end of this section. In a PDF manual, use Ctrl-F (find) to quickly locate the reference designation.

Reference Designation Lists

Reference designation lists are provided for:

- assemblies with an alpha-prefixed Nautel nomenclature (e.g., NAP39C)
- cable harnesses with a numbered Nautel part (e.g., 212-8003)
- optional kits with a numbered Nautel part

To obtain the full reference designation for a specific part the Nautel configuration control number must be located in the family tree ([Figure 4.2.1 on page 4.2.5](#)) to include the reference designation of all higher level assemblies. The reference designation lists are presented in alphanumeric order - for each component level of the transmitter - and divided into columns to aid in locating specific information.

Column Content

The following paragraphs provide an explanation of the purpose and contents of each column in the part number indexes.

Component Level, Stock Code Column

This column contains the *Component Level* number (01 through 10, as required) and the Nautel *Stock Code* (part number) assigned to each part.

Component Level

This number represents the level of a component in relation to the highest level parts list. In this case the highest level parts list is the NX10's overall parts list, or the top block in the family tree shown in ([Figure 4.2.1 on page 4.2.5](#)) to determine where to locate its part information.

Components that are directly descended from the highest level parts list are component level 01. The associated stock code and description for level 01 items appear in bold text in the reference designation list, followed by their sub-assembly components, as applicable. Level 01 items are sorted alphanumerically.

Components that are directly descended from component level 01 items are component level 02. The associated stock code and description for level 02 items appear below their associated level 01 component, slightly indented, followed by their sub-assembly components, as applicable. Level 02 items are sorted alphanumerically.

Component level 03 through 10 items, as applicable, descend similarly to component level 02 items, with continuing indentations to identify each new level.

Stock Code

This number is Nautel's drawing number for Nautel manufactured parts, Nautel's configuration control number for assemblies that are under configuration control management, or Nautel's inventory management number for purchased parts. When a Nautel configuration control number (e.g. NAPC*) is shown in this column, its sub-assembly reference designation items are listed below it.

Note: This section includes Nautel part numbers only. It does not include original equipment manufacturer (OEM) information (i.e., vendor part numbers). Some vendor information is provided in the Responding to Alarms section of this manual, otherwise contact Nautel to order a replacement part or to request assistance to find a suitable replacement.

Description Column

This column contains the name and descriptive information for each part. The key word is presented first, followed by the adjective identifiers.

Reference Designation Column


This column contains the reference designation(s) for a specific part. When multiple reference designations apply to a part, they are sorted alphanumerically. These designations are assigned in accordance with the requirements of IPC-2612-2010 - Sectional Requirements for Electronic Diagramming Documentation (Schematic and Logic Descriptions).

Common Abbreviations/Acronyms

The following abbreviations/acronyms may appear in the Description of Part column:

- SMT
Denotes item is designed to be installed using Surface Mount Technology.
- MTA
Denotes item is a Mass Termination Assembly connector.
- SIP
Single In-line Package
- DIP
Dual In-line Package
- IDC
Denotes item is an Insulation Displacement connector for ribbon cable.

Figure 4.2.1: NX10 Family Tree

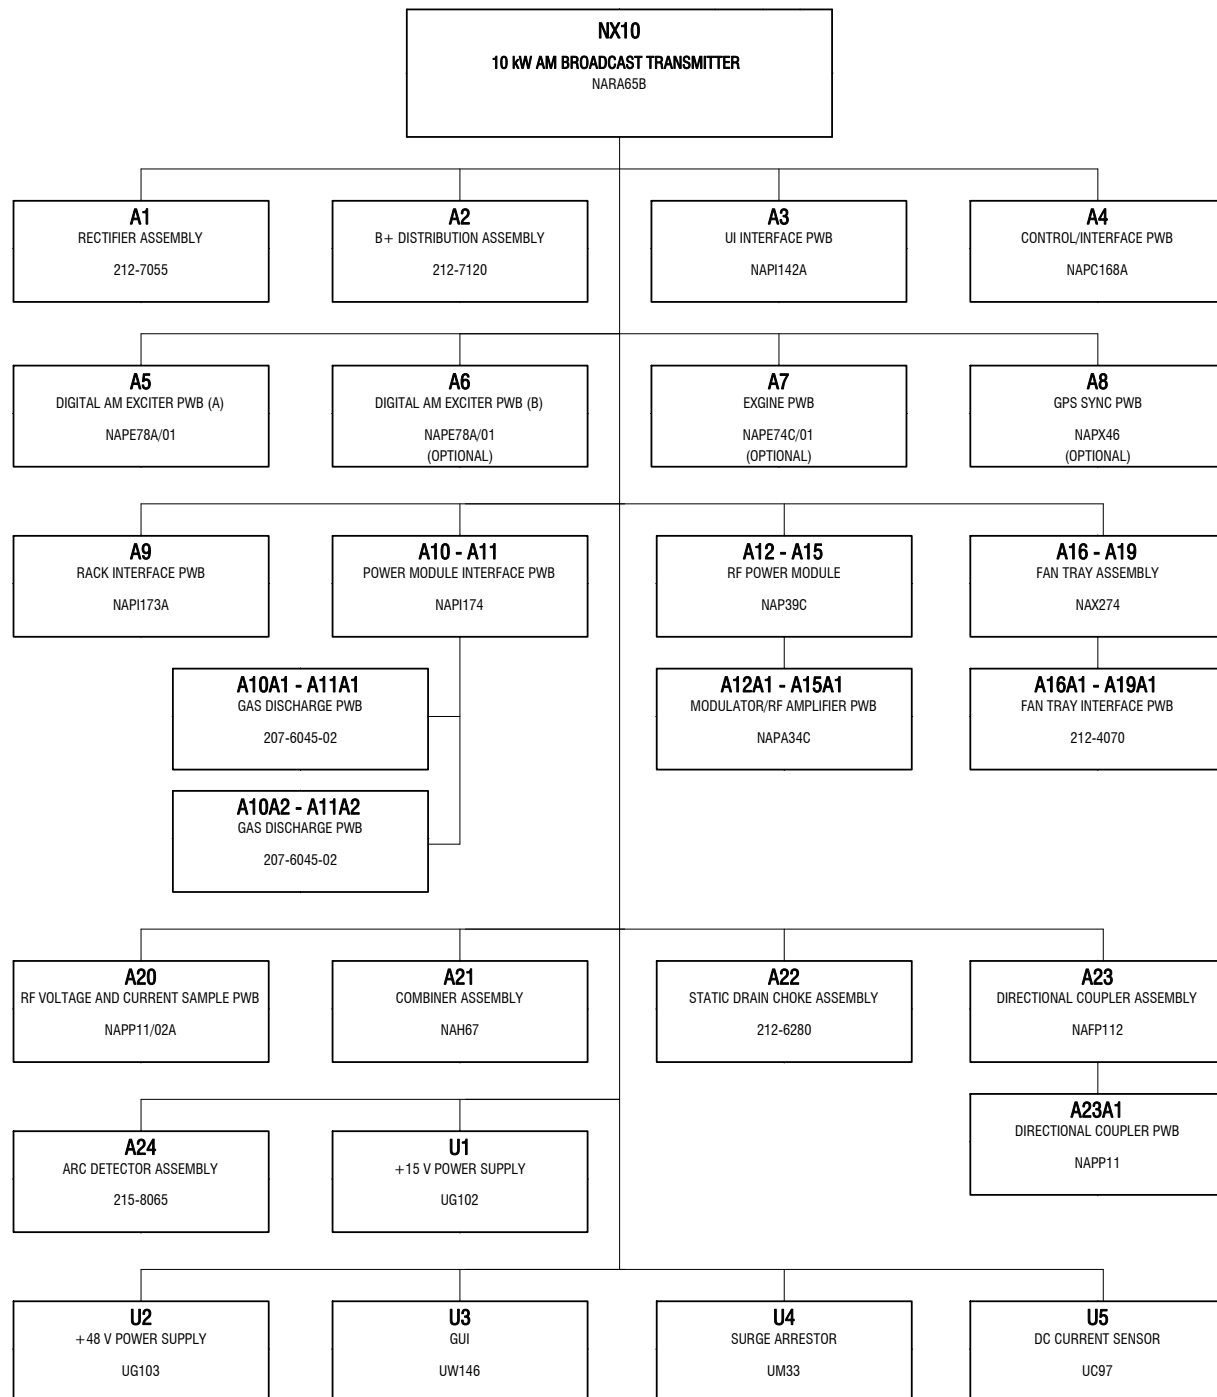

212-8000-02-FAM01 VB

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 1 of 19

Component Lvl, StockCode	Description	Reference Designation
01 207-6045-01	Gas Discharge PWB Assy	A10A1, A10A2, A11A1, A11A2
02 UM98	Gas Discharge Tube, 600V, Fail Short	U01
01 212-1036-01	RF Relay Mod, NX5 & NX10	A10K1, A10K2, A11K1, A11K2
02 JU02	MTA, Standard Dust Cover, 4 pi n	P01
02 JU27	MTA, Keyed Closed End Housing, 4 pin,22AWG	P01
01 212-7055	Rectifier Assy, NX5 & NX10	A01
02 CCG07	Capacitor, Ceramic, 0.1uF 10% 100V	C02
02 CS68	Capacitor, Non-Polarized, 10uf , +/-20%, 35V	C01
02 UR110	Rectifer, (BeO), SCR, 3-PH, 400VDC, 55A, Full CTRL	U01
01 212-7120	B+ Distribution Assy, NX10	A02
02 212-7125	Cableform, NX10 B+ Capacitor Assy	
02 212-8611	Discharge Relay Mod NX5 & NX10	K01
03 HAM05	Connector, Quick-Dis, F, 1/4 Tab	P02
03 HAM06	Connector, Quick-Dis, M, 1/4 Tab	P01
03 KC76	Relay, 12KV, NC, 180V, AUX SW, Ext Range	K01
02 CT54	Capacitor,Elect.,10,000uf,450V dc	C01, C02, C03, C04
02 FD24	Fuse, 70A, 600V, Class J, Open Indicator	F01
02 RC44	Resistor,Cap Discharge,27Komhs 5%,13W	R02, R03
02 RX53	Resistor, Wirewound, HL, 50 oh ms/350W/5% c/w mt f	R05
01 212-8004-01	Cablesset, NX10, RLS 2	
02 HAM05	Connector, Quick-Dis, F, 1/4 Tab	P05
02 HAM06	Connector, Quick-Dis, M, 1/4 Tab	P06
02 HAM13	Connector, Quick-Dis, F, 1/4 Tab 14-16	P01, P03
02 HAM67	Connector,Quick-dis,F,1/4Tab, 10-12	P02, P04
02 JN61	Conn, 16 Pin, Dual Row Crimp	P10
02 JQ17	Conn, Contact, Pin, HDP-20 Strip	P09, P11, P13, P17, P18
02 JQ18	Conn, Contact, Socket, HDP-20 Strip	P12, P14
02 JQ48	Contact, Pin, 22-30AWG (Crimp)	P07
02 JQ87	Contact, MTA, SL-156 LID	P16
02 JQ88	Conn, ferrule, 10mm, non insul for 10AWG	P15
02 JR27	Conn, Socket, D-Sub, 9 pin	P12
02 JR28	Conn, Plug, D-Sub, 9 pin	P09, P11, P17, P18
02 JR38	Conn, Socket, D-Sub, HDP-20, 2 5 pin	P14
02 JR39	Conn, Plug, D-Sub, 25 pin, HDP -20	P13

StockCode: NARA65B

Page 2 of 19

Description: Final Assy, NX10 (RLS 3),

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	JS33	Conn, Shell, D-Sub, 9 pin	P09, P17
02	JS35	Conn, Shell, D-Sub, 25 pin	P13, P14
02	JT149	Connector, Plug, 2 pos, Socket, 20A, 600V, 7.62mm,	P15
02	JT16	Conn, Lock Screw, D-Sub, Male, Kit	P09, P11, P12, P13, P14, P17, P18
02	JT182	Connector, MTA-5051, 4-Pin, Term Housing, Accepts	P07
02	JT55	Connector, MTA-100, 4-Pin, 22 AWG	P19
02	JT56	Cover, Dust, 4-Pin Used with JT55	P19
02	JU57	Conn, HRS, DF11, 2mm, Dual Socket 8, Crimp	P08
02	JU58	Conn, Contact for Socket DF11, 22AWG	P08, P10
02	JU81	MTA, Housing, SL-156 LID, 3-pin, Locking	P16
02	UA200	Cable, Ethernet, 40", Shld, Bl ack, 28AWG, 80degC,	W04
02	UA204	Cable, Ethernet, 36", Shld, Bl ack, 28AWG, 80degC,	W02, W03
02	UA229	Cable, Ethernet, 45", Shld, Bl ack, 28AWG, 80degC,	W05
02	UA258	Cable 2.5ft, D-Sub 15 HD, M/M	W01
02	UA272	Cable 10ft, D-Sub 15 HD, M/M	W06
02	UA273	Cable, Ethernet, 96" Shld, Black, 28AWG, 80degC, with	W07
<hr/>			
01	212-8137	AC Ferrite Assy	
<hr/>			
01	215-8065	Arc Detector Shielded Assy	A24
02	CCF06	Capacitor, Tantalum, Epoxy, 1u F 10% 35V	U01CX
02	JT157	Header, 4-pin, Square, Pol, 0.1", Rt Angle, PCB mo	U01J1
02	UB88	Board, UV TRON DRVR Pwb, PS 12 -24Vdc, Out OC 10ms	U01
<hr/>			
01	BAP44	LED, Pilot Light, Amber, 230 Vac	DS1, DS2, DS3
<hr/>			
01	BAP48	Fuseholder, Panel, 10A, 250V, Type 5 x 20mm	XF01, XF02
<hr/>			
01	CCG54	Capacitor, Ceramic, 25pF, +/-10%, 5000V	C12
<hr/>			
01	FB44	Fuse, 5A, 250V, Slow, 5 x 20mm	F01, F02
<hr/>			
01	NAFP112	Directional Coupler Assy, NX10	A23
02	CCG54	Capacitor, Ceramic, 25pF, +/-10%, 5000V	C01
02	NAPP11	RF Sample PWB Assy - Direction al Coupler, NX10	A01
03	CCFS07	Cap, SMT, Ceramic, 0.1uF, 10%, 50V, X7R, 0805	C13, C15
03	CCFS10	Cap, SMT, Ceramic, 1uF, 10%, 25V, X7R, 1206	C04, C07, C08, C11, C14, C18
03	CCFS32	Cap, SMT, Ceramic, 100pF, 2%, 50V, C0G, 0603	C24
03	CCFS34	Cap, SMT, Ceramic, 220pF, 2%, 50V, C0G, 0603	C23
03	CCFS42	Cap, SMT, Ceramic, 1000pF, 2%, 50V, C0G, 0805	C02, C03

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 3 of 19

Component Lvl, StockCode		Description	Reference Designation
03	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C01, C05, C06, C09, C10, C12, C16, C17
03	CCFS72	Cap, SMT, Ceramic, 10uF, 10%, 50V, 2220	C19, C29
03	CCFS82	Cap,SMT,Ceramic,10000pF,5%,50V ,COG, 1206	C20, C25
03	HR08	Terminal, PWB, 6-32, Vert	E01
03	JQ34	Conn, Socket, D-Sub, 9 pin, PW B Mt	J01
03	LS18	Inductor,SMT.2.2uH,600ma,1210	L01, L02
03	QDSS01	Diode,SMT,Schottky,30V,0.2A, SOD-323	CR01, CR02, CR03, CR04
03	QR70	Suppressor, Transient Voltage, SMT 60V Clamp	CR05, CR06
03	RAD52	Resistor,2512 SMT,100 ohms, 1%,1W,	R27
03	RAD76	Resistor, SMT, 1000 Ohms, 5%, 1W, 2512	R05
03	RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R01, R03, R07, R09, R11, R20
03	RFFS26	Resistor,SMT,MF,100ohms,1%, 1/10W,0603	R28
03	RFFS29	Resistor,SMT,MF,182ohms,1%, 1/10W,0603	R14
03	RFFS32	Resistor,SMT,MF,332ohms,1%, 1/10W,0603	R18
03	RFFS34	Resistor,SMT,MF,475ohms,1%, 1/10W,0603	R17, R26
03	RFFS37	Resistor,SMT,MF,825ohms,1%, 1/10W,0603	R06
03	RFFS38	Resistor,SMT,MF,1000ohms,1%, 1/10W,0603	R13, R15, R25
03	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R08, R16, R19, R24
03	RW45	Resistor,Variable,Film,10kohm, 1/2W, 25 turn	R10
03	TZ74	Transformer, Gate Drive, High Freq	T01
03	UT90	IC,SMT,Amp,35MHz,Current Feedback 1.1A,TO263-7	U01, U02, U03
01	NAH67	Combiner Assy, NX10	A21
02	212-6050	Combiner Toroid Assy, NX10	
02	JDP26	Conn, Coax, BNC, Recept, 50ohm	J01
01	NAP39C	RF Power Module Assy,NX Series	A12, A13, A14, A15
02	NAPA34C	Modulator/RF Amplifier PWB Assy, NX Series	A01
03	207-1053-01	Inductor Assy	L12, L13, L14
03	207-1053-03	Inductor Assy,	L10, L11
03	CCFS01	Cap,SMT,Ceramic,0.001uF,10%,50 V,X7R,0603	C059, C060
03	CCFS04	Cap,SMT,Ceramic,0.01uF,10%,50V ,X7R,0603	C091
03	CCFS07	Cap,SMT,Ceramic,0.1uF,10%,50V, X7R,0805	C001, C006, C007, C008, C011, C012, C013, C014, C017, C018, C022, C026, C027, C044, C049, C058,, C061, C062, C066, C068, C069, C072, C075, C078, C080, C082, C083, C084, C086, C088, C089, C090,, C092, C093, C094, C096, C097, C101, C106, C109, C135, C137, C139, C140
03	CCFS23	Cap,SMT,Ceramic,18pF,2%,50V, C0G,0603	C085, C087

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
03	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C030, C031, C032, C033, C034
03	CCFS60	Cap,SMT,Ceramic,1uF,10%,100V, X7R,1210	C002, C009, C010, C015, C019, C020, C023, C024, C028, C029, C050, C057, C065, C067, C070, C071,, C073, C074, C076, C077, C079, C081, C095, C098, C099, C100, C102, C103, C104, C105, C107, C108,, C110, C111, C112, C113, C114, C115, C118, C119, C120, C121, C122, C123, C124, C125, C126, C127,, C136, C138 C040, C041, C051, C055
03	CP31	Capacitor,Polyprop,0.15uF,5%, 600V	C129
03	CT57	Capacitor, SMT, Al Electroytic 330uF, 25VDC,ESR 0.	C133, C134
03	CT58	Capacitor, SMT, 0.47u, 630V, X7R, 20%, j-lead, MLC	C116, C117
03	CT88	Capacitor, SMT, 0.054u, NPO, 5%, J-lead, 4x2225, 1	C005, C016, C021, C025, C144, C145, C146, C147
03	CTFS03	Cap,SMT,Tantalum,10uF,10%,35V, 2917	F01
03	FA46	Fuse,SMT,Fuse Block,3A Very Fast Acting,Installed	J02
03	JF47	Conn, Header,Square Post,Gold, Dual,40-pin	J01
03	JM44	Conn, Modular Jack, RJ45, Shld , Side, PWB, 50u	T01, T02, T03, T04
03	LA39	Toroid, Ferrite, Uncoated, 22.1mmOD	L05, L07
03	LCFS01	Inductor, SMT, Choke, 600ohms, 2A, 0805	L06
03	LS16	Inductor,SMT,Pwr,Shielded Drum Core,P1167series, 2	L01, L02, L03, L04, L08, L09
03	LS22	Choke,SMT,Common Mode,2200 ohm ,200mA,1206	L15
03	LXP20	Bead, Ferrite, 3.5mm, B Mtl	DS01
03	QDLS04	Diode,SMT,LED,Bicolor,Red/ Green,1210	CR11, CR12, CR15, CR17
03	QDZS01	Diode,SMT,Zener,5.1V,5%,3W,SMB	CR19, CR20, CR21
03	QK50	Diode,Schottky,600V,10A,SIC	CR29
03	QM47	Diode,SMT,Ultrafast,200V,1A,SM B	CR13, CR14, CR16, CR18, CR27, CR28
03	QM55	Diode,SMT,Fast Switching,80V, 0.5A SOD-323	CR09
03	QM64	Diode, SMT, Ultra Fast, 1200V, 15A, D2PAK	CR38, CR39, CR40
03	QM71	Diode, SMT Ultrafast, 600V, 1A SMA	Q11, Q12, Q13
03	QR75	Transistor, FET, N, 500V, 30A, 0.165 Ohm	Q01, Q02, Q03, Q04, Q05, Q06
03	QS25	Transistor,SMT,MOSFET, N-Channel,100V,1.5A,SOT-223	R002, R003, R005, R006, R016, R017, R022, R023, R097, R100, R103, R104 R046, R047, R076, R094
03	RAD12	Resistor, SMT, MF, 82.5 Ohms, 1% 1/4W	R014, R015
03	RAD14	Resistor, SMT, MF, 121 Ohms, 1% 1/4W	R024, R043, R044, R045, R077, R115, R116, R117, R118
03	RAD17	Resistor, SMT, MF, 221 Ohms, 1% 1/4W	R101
03	RAD25	Resistor, SMT, MF, 1000 Ohms, 1% 1/4W	R124, R125
03	RAD29	Resistor, SMT, MF, 2210 Ohms, 1% 1/4W	R039, R112, R126
03	RAD33	Resistor, SMT, MF, 4750 Ohms, 1%, 1/4W	
03	RAD49Z	Resistor,SMT,MF,10ohms, 1%,2W	

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 5 of 19

Component Lvl, StockCode		Description	Reference Designation
03	RAD50Z	Resistor,SMT,MF,20ohms, 1%,2W	R040, R041, R042, R055, R056, R070, R071, R107
03	RAD79	Resistor, SMT, MF, 270 Ohms, 1%, 1W 2512	R091
03	RAD85Z	Resistor, SMT, 0 Ohms, 1%, 1W 2512	R026, R035, R123
03	RAE13	Resistor, SMT, MF, 1.0M Ohms, 1% 1/4W	R051, R052, R053, R057, R058, R059, R063, R067, R068
03	RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R030, R128
03	RFFS18	Resistor,SMT,MF,22.1ohms,1%, 1/10W,0603	R078
03	RFFS34	Resistor,SMT,MF,475ohms,1%, 1/10W,0603	R001, R004, R010, R011, R012, R013, R018, R019, R092, R096, R098, R099
03	RFFS40	Resistor,SMT,MF,1500ohms,1%, 1/10W,0603	R084, R087
03	RFFS44	Resistor,SMT,MF,3320ohms,1%, 1/10W,0603	R048, R049, R050, R060, R086
03	RFFS49	Resistor,SMT,MF,8250ohms,1%, 1/10W,0603	R082
03	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R007, R008, R009, R028, R032, R033, R034, R036, R061, R062, R064, R065, R072, R073, R079, R081., R083, R085, R088, R089, R090, R102, R105, R106, R108, R109, R122
03	RFFS55	Resistor,SMT,MF,27.4Kohms,1%, 1/10W,0603	R093
03	RFFS56	Resistor,SMT,MF,33.2Kohms,1%, 1/10W,0603	R020, R021, R025
03	RFFS62	Resistor,SMT,MF,100Kohms,1%, 1/10W,0603	R054, R074, R075
03	RFFS83	Resistor,SMT,MF,28.7K Ohms,1%, 1/10W,0603	R066, R069
03	RT76	Resistor, SMT, AIN, 10 Ohm, 2%, 30W, 3725	R027, R029, R037, R110, R111, R113, R114, R119
03	UD64	IC,SMT,Single,2 Input Exclusive OR,SOT23-5L	U25
03	UD81	IC, SMT, Delay Line, 5 Taps, 20-100nS, SOIC8 (150m	U30
03	UD82	IC, SMT, 2-Input Logic, UHS Univ Config SC70-6	U31, U32
03	UD93	IC, MOSFET, Gate Driver, 9A, 20Vpk IN	U03, U04, U05
03	UDTS03	IC,SMT,RS-485 Transceiver,Sgl ,SOIC-8	U20
03	ULAS02	IC,SMT,Opamp,Quad,Rail-To-Rail ,SOIC-14	U21
03	UP103	Current Sensor, Hall, 50A, AC/DC, Bi Direc	U17
03	UT136	IC, SMT, FET Driver, 14A, Non- inverting, TO-263	U23, U24, U26, U29
03	UT137	IC, SMT, Quad FET Driver, 2A, Non-inverting	U02
03	UT70	IC, SMT, High Speed Comparator , SOIC-8	U18
03	UT91	IC,SMT,Quad RS-422 Receiver, 16-SOIC	U01, U27
03	UT93	IC,SMT,Voltage Regulator,5V, 1A, D2PAK	U28
03	UX184	IC, SMT, Micro, ADC, PWM, TQFP-32, 16k Flash	U22
03	XFPS11	Crystal, SMT, Fund, 11.0592MHz	Y01
02	QR68	Transistor, FET, N Channel, 500V, 0.05ohm fast	Q07, Q08, Q09, Q10
02	RX49	Thermistor,-30/105°C,10Kohms@ 25°C,Neg,Bvalue 3435	R01
01	NAPC168A	Control/Interface PWB Assy, Low Power NX	A04

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Component Lvl, StockCode		Description	Reference Designation
02	BBHT01	Holder, 20mm Coin Cell, PWB Mt	XBT1
02	BBLT01	Battery, Lithium, 3V,20mm Coin Cell	BT1
02	CCFS01	Cap,SMT,Ceramic,0.001uF,10%,50 V,X7R,0603	C171
02	CCFS02	Cap,SMT,Ceramic,0.0022uF,10%, 50V,X7R,0603	C117
02	CCFS03	Cap,SMT,Ceramic,0.0047uF,10%, 50V,X7R,0603	C172
02	CCFS04	Cap,SMT,Ceramic,0.01uF,10%,50V ,X7R,0603	C016, C021, C024, C027, C030, C033, C035, C042, C043, C063, C064, C073, C074, C079, C080, C085,, C086, C087, C088, C093, C096, C099, C100, C104, C123, C127, C141, C175, C192, C193, C252, C269, C279
02	CCFS07	Cap,SMT,Ceramic,0.1uF,10%,50V, X7R,0805	C038, C039, C040, C041, C054, C055, C056, C057, C069, C070, C071, C072, C081, C082, C083, C084,, C176
02	CCFS10	Cap,SMT,Ceramic,1uF,10%,25V, ,X7R,1206	C009, C010, C017, C018, C022, C049, C050, C051, C068, C094, C106, C107, C119, C120, C121, C128,, C155, C165, C166, C173, C177, C182, C239, C249, C254, C255, C262, C265, C268, C272, C275, C280,, C291, C302
02	CCFS18	Cap,SMT,Ceramic,5.6±0.5pF,50V, C0G,0603	C149
02	CCFS23	Cap,SMT,Ceramic,18pF,2%,50V, C0G,0603	C026, C029, C065, C066, C110, C111, C137, C138, C213, C220, C221, C226
02	CCFS32	Cap,SMT,Ceramic,100pF,2%,50V, C0G,0603	C139
02	CCFS33	Cap,SMT,Ceramic,150pF,1%,50V, C0G,0603	C212
02	CCFS34	Cap,SMT,Ceramic,220pF,2%,50V, C0G,0603	C002, C004
02	CCFS47	Cap,SMT,Ceramic,3900pF,2%,50V, C0G,1206	C208
02	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C003, C005, C007, C008, C011, C012, C013, C014, C015, C019, C020, C023, C025, C028, C031, C032,, C034, C036, C037, C044, C045, C046, C047, C048, C052, C053, C058, C059, C060, C061, C076, C077,, C078, C089, C090, C091, C092, C095, C097, C098, C101, C102, C103, C108, C112, C113, C114, C115,, C116, C118, C122, C125, C126, C129, C131, C132, C135, C143, C151, C152, C153, C154, C156, C157,, C158, C159, C160, C161, C162, C163, C167, C168, C169, C170, C174, C178, C180, C181, C184, C186,, C191, C196, C197, C198, C199, C201, C202, C203, C204, C205, C206, C207, C209, C210, C211, C214,, C215, C216, C217, C218, C219, C222, C223, C224, C225, C227, C228, C229, C230, C231, C232, C233,, C234, C235, C236, C237, C238, C240, C241, C242, C243, C244, C247, C248, C250, C251, C253, C256,, C257, C258, C259, C260, C261, C263, C264, C266, C267, C270, C271, C273, C274, C276, C277, C278,, C281, C282, C283, C284, C285, C286, C287, C288, C289, C290, C292, C293, C294, C295, C296, C297,, C298, C299, C301
02	CCFS53	Cap, SMT, Ceramic,47uF,20%, 6.3V, 1210	C075, C105, C142, C179
02	CCFS57	Cap,SMT,Ceramic,10uF,20%,6.3V, X5R,0805	C134, C136, C144, C145, C146, C147, C200

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

<u>Component Lvl, StockCode</u>	<u>Description</u>	<u>Reference Designation</u>
02 CCFS60	Cap,SMT,Ceramic,1uF,10%,100V, X7R,1210	C246
02 CCFS62	Cap, SMT, Ceramic, 10uF, 10%, 25V	C001, C006, C062, C067, C164, C183, C185, C187, C188, C189, C190, C194, C195, C245, C300
02 CCFS73	Cap, SMT, Ceramic, 1uF, 10%, 16V, X5R, 0603	C140, C150
02 CT90	Capacitor, SMT, Ceramic, 25V, 47uF, 20%	C109, C130, C133
02 CT91	Capacitor, SMT, Ceramic, 50V, 22uF, 20%	C148
02 CX38	Cap,SMT,Ceramic,4.7uF,10%,10V, X5R, 1206	C124
02 HAJ66	Terminal, SMT, Test Point, PWB	TP01, TP02, TP06, TP07, TP09, TP11, TP12, TP13, TP14, TP15, TP16, TP20, TP21, TP22, TP23, TP24,, TP33, TP38, TP39, TP41, TP42, TP43, TP44, TP46, TP47
02 JF47	Conn, Header,Square Post,Gold, Dual,40-pin	J22, J23, J26
02 JM44	Conn, Modular Jack, RJ45, Shld , Side, PWB, 50u	J04, J16, J21
02 JM49	Conn, Socket, 1xMag RJ45 + 2x USB-A	J03
02 JQ15	Conn, Post Shunt, 2 Pos, .10 C entreline	E1
02 JQ16	Conn, Header, SIP,12 Pin Break away,.10 Ctr	J24, XE1
02 JQ34	Conn, Socket, D-Sub, 9 pin, PW B Mt	J02
02 JQ54	Conn, Header, Ribbon Cbl, 10- Pin	J15
02 JS12	Conn, Plug, D-Sub, 25 pin, PWB Mt	J11, J14
02 JS129	Conn, Socket, D-Sub, HD15pin, 90deg, PWB	J18, J20
02 JS13	Conn, Socket, D-Sub, 25 pin, P WB Mt	J05, J10, J13
02 JT100	Conn, Dual, BNC, PWB, Rt Angle	J01
02 JT121	Conn, Dual, D-Sub, F/M, 9 pin, Rt. Angle, PWB	J17, J19
02 JT179	Connector, Modular, 2x2, RJ45, Jack	J12
02 JT78	Connector,Dual,D-Sub,M/F, 25-pin,Rt Agl,PWB	J06
02 JT87	Conn,3-pin,PWB Mount, Fem, XLR	J07, J08, J09
02 LA16	Inductor, Choke, 2.5 Turns, J Mtl	L32, L33
02 LCFS01	Inductor, SMT, Choke, 600ohms, 2A, 0805	L14, L16, L17, L18, L19, L26
02 LCFS04	Bead, Ferrite SMT, 200 ohms @ 1MHz, 100mA, 1206	L04, L05, L07, L08, L21, L23, L24, L27, L28, L29, L30, L31
02 LS24	Inductor, SMT, 10uH, 2.4A, RMS	L15
02 LS45	Inductor, SMT, Shielded, 33uH, 3.3A RMS	L06, L22
02 LS50	Choke, SMT, Common Mode, 10k ohm @ 1MHz, 200mA	L01, L02, L03, L09, L10, L11, L12, L13, L25
02 LS56	Inductor, SMT, 3.3uH, 5.6A,RMS	L20
02 QDDS02	Diode, SMT, Schottky, 40V, 1A, SMA	CR40
02 QDLS01	Diode, SMT, LED, Green, (560nm), 0603	DS2
02 QDLS07	Diode, SMT, LED, Amber, (592nm), 0603	DS1

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 8 of 19

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	QDRS01	Diode,SMT,Switching,250V,0.2A, SOD-323	CR02, CR03, CR04, CR05, CR07, CR08, CR09, CR10, CR11, CR12, CR13, CR16, CR17, CR18, CR19, CR21,, CR25, CR29, CR34, CR36
02	QDSS01	Diode,SMT,Schottky,30V,0.2A, SOD-323	CR14, CR15, CR46
02	QK53	Diode, SMT, Shottky, 70V, 15mA , SOD-123	CR23, CR26, CR27, CR30, CR31
02	QM48	Diode,SMT,Transient Suppr,10V, SMB	CR01, CR06
02	QR70	Suppressor, Transient Voltage, SMT 60V Clamp	CR20, CR22, CR24, CR28, CR32, CR33, CR35, CR37, CR38, CR39, CR41, CR42, CR43, CR44, CR45
02	RAD17	Resistor, SMT, MF, 221 Ohms, 1% 1/4W	R020, R021
02	RAD25	Resistor, SMT, MF, 1000 Ohms, 1% 1/4W	R262, R276, R305, R306
02	RAD33	Resistor, SMT, MF, 4750 Ohms, 1%, 1/4W	R037, R047, R050, R054, R149, R155, R158, R161, R171, R174, R185, R189, R194
02	RAD49Z	Resistor,SMT,MF,10ohms, 1%,2W	R274
02	RAD50Z	Resistor,SMT,MF,20ohms, 1%,2W	R281, R283
02	RAD52	Resistor,2512 SMT,100 ohms, 1%,1W,	R192, R196
02	RAD55Z	Resistor,SMT,150 Ohms,, 1%,2W	R284
02	RAD69	Resistor, SMT, 590 Ohms, 1%, 1 W, 2512	R285, R307
02	RAE02	Resistor, SMT, MF, 121K Ohms, 1% 1/4W	R260, R261, R268, R269
02	RAE31	Resistor,SMT,MF,6.49K,1%,1/10W ,0603	R294
02	RAE34	Resistor,SMT,MF,49.9R,1%,1/10W 0603	R015, R024, R025, R026, R027, R140, R144, R145, R148, R167, R168, R169, R179, R184, R188, R198,, R199, R221, R222, R223, R232, R235, R237, R240
02	RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R226, R265, R286, R287, R288, R289, R320, R321, R322, R323
02	RFFS14	Resistor,SMT,MF,10.0ohms,1%, 1/10W,0603	R065, R066, R068, R069, R092, R093, R099, R100, R106, R107, R110, R111, R137, R138, R141, R146
02	RFFS15	Resistor,SMT,MF,12.1ohms,1%, 1/10W,0603	R081, R082, R083, R084, R102, R103, R104, R105, R128, R129, R130, R131, R151, R152, R153, R154
02	RFFS18	Resistor,SMT,MF,22.1ohms,1%, 1/10W,0603	R044, R045, R157, R225, R227, R233, R303
02	RFFS19	Resistor,SMT,MF,27.4ohms,1%, 1/10W,0603	R208, R209, R297, R298, R300, R302
02	RFFS21	Resistor,SMT,MF,39.2ohms,1%, 1/10W,0603	R299, R301
02	RFFS22	Resistor,SMT,MF,47.5ohms,1%, 1/10W,0603	R263
02	RFFS25	Resistor,SMT,MF,82.5ohms,1%, 1/10W,0603	R014
02	RFFS26	Resistor,SMT,MF,100ohms,1%, 1/10W,0603	R006, R007, R008, R254, R255, R257, R258, R267, R273
02	RFFS27	Resistor,SMT,MF,121ohms,1%, 1/10W,0603	R013, R031, R057
02	RFFS31	Resistor,SMT,MF,274ohms,1%, 1/10W,0603	R271
02	RFFS34	Resistor,SMT,MF,475ohms,1%, 1/10W,0603	R042, R245, R292, R295
02	RFFS35	Resistor,SMT,MF,562ohms,1%, 1/10W,0603	R003, R010
02	RFFS36	Resistor,SMT,MF,681ohms,1%, 1/10W,0603	R001, R002, R009, R019, R022, R028

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 9 of 19

Component Lvl, StockCode		Description	Reference Designation
02	RFFS37	Resistor,SMT,MF,825ohms,1%, 1/10W,0603	R030, R178, R213
02	RFFS38	Resistor,SMT,MF,1000ohms,1%, 1/10W,0603	R023, R029, R053, R142, R147, R176, R177, R212, R236, R238, R256, R278, R293, R304, R309, R310,, R311, R312, R314, R315, R316, R317 R032, R058, R250
02	RFFS39	Resistor,SMT,MF,1210ohms,1%, 1/10W,0603	R224
02	RFFS40	Resistor,SMT,MF,1500ohms,1%, 1/10W,0603	R005, R012, R201
02	RFFS42	Resistor,SMT,MF,2210ohms,1%, 1/10W,0603	R272, R280
02	RFFS44	Resistor,SMT,MF,3320ohms,1%, 1/10W,0603	R052, R055, R078, R095, R096, R097, R098, R108, R109, R163, R164, R165, R166, R180, R181, R182,, R183, R308 R279
02	RFFS46	Resistor,SMT,MF,4750ohms,1%, 1/10W,0603	R004, R011, R016, R017, R018, R033, R034, R035, R036, R038, R039, R040, R041, R043, R046, R048,, R049, R051, R056, R059, R060, R061, R062, R063, R064, R067, R070, R071, R072, R073, R074, R075,, R076, R077, R079, R085, R086, R087, R088, R089, R090, R091, R094, R101, R113, R114, R115, R116,, R117, R118, R119, R120, R121, R122, R123, R124, R126, R127, R132, R133, R134, R135, R136, R139,, R150, R156, R159, R160, R162, R172, R175, R186, R190, R195, R202, R203, R210, R216, R218, R219,, R220, R234, R239, R241, R242, R244, R246, R247, R248, R252, R253, R259, R264, R275, R277, R290,, R313, R318 R080
02	RFFS48	Resistor,SMT,MF,6810ohms,1%, 1/10W,0603	R206, R207, R214, R217, R228, R229, R230, R231
02	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R215, R249
02	RFFS51	Resistor,SMT,MF,12.1Kohms,1%, 1/10W,0603	R143
02	RFFS52	Resistor,SMT,MF,15.0Kohms,1%, 1/10W,0603	R204
02	RFFS54	Resistor,SMT,MF,22.1Kohms,1%, 1/10W,0603	R282
02	RFFS55	Resistor,SMT,MF,27.4Kohms,1%, 1/10W,0603	R251, R296
02	RFFS59	Resistor,SMT,MF,56.2Kohms,1%, 1/10W,0603	R211, R319
02	RFFS60	Resistor,SMT,MF,68.1Kohms,1%, 1/10W,0603	R125
02	RFFS63	Resistor,SMT,MF,121Kohms,1%, 1/10W,0603	R170, R173, R187, R191, R193, R197, R200, R205, R270
02	RFFS65	Resistor,SMT,MF,182Kohms,1%, 1/10W,0603	RT01, RT04, RT05, RT06, RT07, RT10
02	RFFS74	Resistor,SMT,MF,1.00Mohms,1%, 1/10W,0603	RT08
02	RT20	Resistor,SMT,49.9 Ohms, 1%	RT02, RT03, RT09
02	RX64	Thermistor, PTC, SMT, 2920, 500mA Hold	T01, T05
02	RX65	Thermistor, PTC, SMT, 2920, 750mA Hold, 60V	T04, T06
02	RX66	Thermistor, PTC, SMT, 2920 2A Hold, 24V	T02, T03
02	TE22	Transmformer RF, 4:1, 0.03 to 75 MHz, Gull Wing	U26, U30, U36, U41, U81
02	TZ74	Transformer, Gate Drive, High Freq	
02	TZ88	Transformer,SMT,50 ohms,0.03 to 125MHz	
02	UD66	IC,SMT,Quad RS-422 DIFF Line Driver	

StockCode: NARA65B

Page 10 of 19

Description: Final Assy, NX10 (RLS 3),

<u>Component Lvl, StockCode</u>	<u>Description</u>	<u>Reference Designation</u>
02 UD71	IC,SMT,OP-AMP,Dual,Current Feedback,SO-8	U83, U84
02 UD80	IC, SMT, Inverter, UHS, Dual, UnBFR, 6p SC70 1.2mm	U23
02 UD82	IC, SMT, 2-Input Logic, UHS Univ Config SC70-6	U57
02 UD89	IC, SMT, real Time Clock, 12C, SOIC-8	U12
02 UDLS02	IC, SMT, CMOS, Octal Latch, SOIC-20	U17
02 UDLS04	IC,SMT,CMOS,8-Bit Shift Reg,Par I/P, SOIC-16	U37
02 UDLS06	IC,SMT,CMOS,Quad Tri-State Buf fer, SOIC-14	U33
02 UDMS11	IC. SMT, NAND Flash 4Gb, x8, 1b ECC, TSOP-48	U45
02 UDMS17	IC, SMT, CMOS, Switch, SPDT , Latch-up proof, 40V,	U80
02 UDMS18	IC, SMT, SRAM 128kx8, SOIC-32	U18
02 UDOS01	IC,SMT,Dual Optocoupler,SOIC-8	U10, U13, U31, U32, U35, U39, U43
02 UDTS03	IC,SMT,RS-485 Transceiver,Sgl ,SOIC-8	U03, U38
02 UDTS05	IC,SMT,RS-232 Transceiver,3.3V ,SO-16	U48
02 UDTS06	IC, SMT, USB-OTG Transceiver, QFN-24	U58
02 UDTS07	IC, SMT, Full Duplex RS485 RxTx, SOIC-8	U04
02 UDTS08	IC,SMT,RS-232, Isolated Transc eiver, 5V	U77
02 ULAS01	IC,SMT,Opamp,Quad,Single Suppl y,SOIC-14	U15, U24
02 ULAS02	IC,SMT,Opamp,Quad,Rail-To-Rail ,SOIC-14	U62
02 UMDS01	IC,SMT,DAC,8-Bit,4-ch,SPI, SOIC-14	U16, U25
02 UP105	IC, SMT, DC-DC Converter, Boost/Inverting MSOP8	U46
02 UP108	IC, SMT, Quad USB Power Contro ller, SOIC-16	U54
02 UP117	IC, SMT, Backup Battery Super visor, 10-MSOP	U19
02 UP70	IC, SMT, Voltage Regulator, -5V, DPAK	U51
02 UP93	IC,SMT,Op Amp,Audio,Dual,SO-8	U01
02 US13	IC, SMT, SDRAM, 16Mx16, 3.3V, TSOP-54	U85, U86
02 US23	IC, SMT, Power Shift Register, SOIC-16	U20, U29
02 US30	IC, SMT, CMOS, Quad And Gate, SOIC-14	U05, U34
02 UT100	Oscillator,SMT,25MHz,3.3V	Y4
02 UT110	IC, Voltage Regulator, 1.5A, ADJ, Low Drop	U44, U75
02 UT115	IC, SMT, ARM Processor, 266MHz TFBGA296	U60
02 UT149	IC, SMT, Quad 422, Diff Line Receiver, 3.3V IN, Di	U09, U42
02 UT70	IC, SMT, High Speed Comparator , SOIC-8	U07, U40, U53
02 UT79	IC,Variable Gain Amp,SMT,90MHz ,SOIC-8	U78
02 UT83	IC,SMT,Ultrafast Single Supply Comparator,TSSOP	U27
02 UT90	IC,SMT,Amp,35MHz,Current Feedback 1.1A,TO263-7	U82

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 11 of 19

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	UT91	IC,SMT,Quad RS-422 Receiver, 16-SOIC	U72
02	UW109	IC, SMT, SPI Flash, 16Mbit, SOIC8W	U74
02	UW110	Res, SMT Network, 0402x8, 4.7K , 5%	U52, U59, U69, U70
02	UW172	IC, CMOS, EEPROM, 128kx8, 1.7V-5V, 8 SOIC	U14
02	UW181	Load switch, Adjustable current limit, IC, SMT, 8	U87
02	UW182	IC, SMT, Level Translator, 16-bit, 5V/3.3V, 48-TS	U88
02	UW63	Res,SMT Network,0402x8,39R	U49, U50, U55, U56, U61, U63, U64, U65, U66, U68, U71
02	UW82	IC,SMT,LDO,Voltage Regulator, +1.8V,SO-8	U89
02	UW90	IC,SMT,Quad 2 TO 1 DATA Sel/ Mux 3 States Output,3	U08, U73, U79
02	UW91	IC,SMT,SPI UART,3.3V	U06
02	UX100	IC,SMT,Micro,256K Flash,5V, TQFP-100	U11
02	UX123	IC, SMT, 4-port USB Hub, LQFP- 32	U47
02	UX162	IC, SMT, 5A Buck Converter, 8-SO, w/ pwr pad	U76
02	UX170	IC, SMT, CPLD, 1.8V, 128 Macro cell, 1.5-3.3V IO,	U28
02	UX76	IC,SMT,Quad LVDS Rxcvr,3.3V, SOIC-16	U02
02	UX83	IC,SMT,2.5V Reference,0.1%,SOT -23-6	U21
02	UX87	IC,SMT,Digital Pot,Quad,20K, TSSOP-24	U22
02	UX93Z	IC,SMT,Ethernet Phy,3.3V,LQFP 48	U67
02	XFPS07	Crystal, SMT, Fund, 12MHz	Y3
02	XFPS10	Crystal,SMT,Fund,ParRes,32.768 kHz, 20ppm, 12.5pF,	Y2, Y5
02	XFPS11	Crystal, SMT, Fund, 11.0592MHz	Y1
01	NAPE78A/01	Digital AM Exciter PWB Assy	A05
02	CCFS01	Cap,SMT,Ceramic,0.001uF,10%,50 V,X7R,0603	C007, C220
02	CCFS03	Cap,SMT,Ceramic,0.0047uF,10%, 50V,X7R,0603	C046, C050
02	CCFS04	Cap,SMT,Ceramic,0.01uF,10%,50V ,X7R,0603	C006, C012, C016, C020, C021, C030, C031, C041, C043, C044
02	CCFS06	Cap,SMT,Ceramic,0.047uF,10%,50 V,X7R,0603	C048
02	CCFS10	Cap,SMT,Ceramic,1uF,10%,25V, ,X7R,1206	C013, C017, C028, C029, C070, C074
02	CCFS23	Cap,SMT,Ceramic,18pF,2%,50V, C0G,0603	C069, C077
02	CCFS24	Cap,SMT,Ceramic,22pF,2%,50V, C0G,0603	C001, C004
02	CCFS32	Cap,SMT,Ceramic,100pF,2%,50V, C0G,0603	C002, C003, C018, C057, C058, C075, C076
02	CCFS34	Cap,SMT,Ceramic,220pF,2%,50V, C0G,0603	C049
02	CCFS42	Cap,SMT,Ceramic,1000pF,2%,50V, C0G,0805	C059, C065, C066, C067, C073
02	CCFS48	Cap,SMT,Ceramic,4700pF,2%,50V, C0G,1206	C015

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 12 of 19

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C008, C009, C014, C022, C026, C027, C032, C033, C034, C037, C038, C040, C042, C045, C051, C052,, C053, C054, C055, C056, C060, C061, C062, C063, C064, C068, C071, C072, C078, C079, C081, C082,, C086, C087, C088, C089, C090, C092, C093, C094, C095, C096, C097, C098, C099, C100, C101, C102,, C103, C104, C105, C106, C107, C108, C109, C110, C111, C112, C113, C114, C115, C116, C117, C118,, C119, C120, C121, C122, C125, C126, C127, C129, C130, C131, C132, C133, C134, C135, C136, C137,, C138, C139, C141, C142, C143, C144, C145, C146, C147, C148, C149, C150, C152, C153, C154, C155,, C156, C157, C158, C159, C160, C161, C162, C163, C164, C165, C166, C167, C168, C169, C170, C171,, C172, C173, C174, C175, C176, C178, C179, C180, C181, C182, C183, C184, C185, C186, C187, C188,, C190, C191, C192, C195, C196, C197, C198, C199, C200, C201, C202, C203, C204, C205, C207, C208,, C209, C210, C212, C213, C214, C215, C216, C217, C218, C219 C035, C036, C039
02	CCFS53	Cap, SMT, Ceramic, 47uF, 20%, 6.3V, 1210	C019, C080, C083, C084, C085, C091, C123, C124, C128, C140, C151, C177, C189, C193, C194, C206,, C211
02	CCFS57	Cap, SMT, Ceramic, 10uF, 20%, 6.3V, X5R, 0805	TP01, TP03, TP04, TP05, TP06, TP07, TP08, TP09, TP11, TP12, TP13, TP14, TP15
02	HAI66	Terminal, SMT, Test Point, PWB	J05, J06, J07
02	JF47	Conn, Header, Square Post, Gold, Dual, 40-pin	E01
02	JQ15	Conn, Post Shunt, 2 Pos, .10 C entreline	J04, XE01
02	JQ16	Conn, Header, SIP, 12 Pin Break away, .10 Ctr	J01
02	JS12	Conn, Plug, D-Sub, 25 pin, PWB Mt	J02
02	JS13	Conn, Socket, D-Sub, 25 pin, PWB Mt	J03
02	JS50	Conn, Socket, D-Sub, 9-Pin, Vertical PWB	L08, L10, L11, L13, L14, L15, L16
02	LCFS01	Inductor, SMT, Choke, 600ohms, 2A, 0805	L12
02	LS17	Inductor, SMT, Pwr, Shielded, P116 7 Series, 3.5A, 3.6uH	L02, L05
02	LS20	Inductor, SMT, 560nH, 325mA, 2520	L01, L03, L04, L06
02	LS21	Inductor, SMT, 390nH, 375mA, 2520	DS01, DS02, DS03, DS04
02	QDLS01	Diode, SMT, LED, Green, (560nm), 0603	R21, R23, R36, R38, R39, R40, R43, R54, R55, R56
02	RAE34	Resistor, SMT, MF, 49.9R, 1%, 1/10W 0603	R17, R20, R34, R35
02	RFFS02	Resistor, SMT, MF, 1.00ohms, 1%, 1/10W, 0603	R25, R42
02	RFFS14	Resistor, SMT, MF, 10.0ohms, 1%, 1/10W, 0603	R18, R22, R24, R37, R41, R81, R86, R97
02	RFFS18	Resistor, SMT, MF, 22.1ohms, 1%, 1/10W, 0603	R19, R31, R53
02	RFFS26	Resistor, SMT, MF, 100ohms, 1%, 1/10W, 0603	R30
02	RFFS27	Resistor, SMT, MF, 121ohms, 1%, 1/10W, 0603	R13, R14, R15, R16
02	RFFS28	Resistor, SMT, MF, 150ohms, 1%, 1/10W, 0603	

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 13 of 19

<u>Component Lvl, StockCode</u>	<u>Description</u>	<u>Reference Designation</u>
02 RFFS30	Resistor,SMT,MF,221ohms,1%, 1/10W,0603	R51
02 RFFS31	Resistor,SMT,MF,274ohms,1%, 1/10W,0603	R08, R49, R68
02 RFFS33	Resistor,SMT,MF,392ohms,1%, 1/10W,0603	R32
02 RFFS34	Resistor,SMT,MF,475ohms,1%, 1/10W,0603	R04, R48
02 RFFS35	Resistor,SMT,MF,562ohms,1%, 1/10W,0603	R69
02 RFFS38	Resistor,SMT,MF,1000ohms,1%, 1/10W,0603	R02, R26, R45, R74, R76
02 RFFS39	Resistor,SMT,MF,1210ohms,1%, 1/10W,0603	R72
02 RFFS40	Resistor,SMT,MF,1500ohms,1%, 1/10W,0603	R73
02 RFFS42	Resistor,SMT,MF,2210ohms,1%, 1/10W,0603	R11
02 RFFS45	Resistor,SMT,MF,3920ohms,1%, 1/10W,0603	R57, R87, R88
02 RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R06, R52, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R70, R71, R75, R77, R78, R79, R80, R82,, R83, R84, R85, R90, R91, R92, R93, R94, R95, R96, R98
02 RFFS51	Resistor,SMT,MF,12.1Kohms,1%, 1/10W,0603	R89
02 RFFS59	Resistor,SMT,MF,56.2Kohms,1%, 1/10W,0603	R12, R33
02 RFFS64	Resistor,SMT,MF,150Kohms,1%, 1/10W,0603	R10
02 RFFS83	Resistor,SMT,MF,28.7K Ohms,1%, 1/10W,0603	R50
02 RFFS87	Resistor, SMT, 200ohm, 1%, 1/10W, 0603	R01, R05
02 SA60	Switch,SMt,Mom.,1PSTNO	S01
02 TZ88	Transformer,SMT,50 ohms,0.03 to 125MHz	T02, T03
02 TZ93	Transformer, SMT,4:1,0.03 to 125MHz	T01
02 UD65	IC,SMT,Differential Line Receivr, 100dB CMR	U29
02 UD80	IC, SMT, Inverter, UHS, Dual, UnBFR, 6p SC70 1.2mm	U04
02 UDLS08	IC,SMT,CMOS,Phase Locked Loop, SO-16	U06
02 UDTS04	IC,SMT,RS-485 Transceiver,3.3V ,SO-8	U19
02 UDTS05	IC,SMT,RS-232 Transceiver,3.3V ,SO-16	U34
02 UP93	IC,SMT,Op Amp,Audio,Dual,SO-8	U31
02 UP95	IC,SMT,Stereo ADC,24bit,96kHz, TSSOP-28	U35
02 UT100	Oscillator,SMT,25MHz,3.3V	Y02
02 UT124	Oscilitor, SMT, VCXO,158.76MHz LVPECL, 3.3V, 9x14m	Y01
02 UT93	IC,SMT,Voltage Regulator,5V, 1A, D2PAK	U37
02 UT98	Oscillator,SMT,TCVCXO,10MHz, 3.3V,2ppm	U02
02 UW109	IC, SMT, SPI Flash, 16Mbit, SOIC8W	U17
02 UW115	IC, SMT, Spartan3-1600 FPGA, FG320	U13
02 UW63	Res,SMT Network,0402x8,39R	U24, U26, U28, U30, U32, U33
02 UW64	IC,SMT,DAC,16 Bit Serial,MSOP-9	U03

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 14 of 19

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	UW80	IC,SMT,SRC,Async,2-ch,TQFP-48	U20, U23
02	UW86	IC,SMT,DAC,400MSPS,14 bit TQFP-48	U01
02	UW88	IC,SMT,Blackfin DSP,500 MHz mBGA160	U25
02	UW89	IC,SMT,ADC,Serial, 12 bit	U15
02	UW90	IC,SMT,Quad 2 TO 1 DATA Sel/ Mux 3 States Output,3	U07, U18
02	UW91	IC,SMT,SPI UART,3.3V	U36
02	UW94	IC,SMT,ADC,RF,14 bit,TQFP-64	U08, U12
02	UX121	IC, SDRAM, 128Mbit, x16, TSOP- II, Ext Temp	U27
02	UX64	IC,SMT,Power Supervisor,Dual I/P,33/1.5V,MSOP	U22
02	UX65	IC,SMT,3A Sync Buck Converter, SO-20 w/pwr pad	U14
02	UX66	IC,SMT,Linear Regulator,150mA Adj.,MSOP-8	U10
02	UX67	IC,SMT,Linear Regulator,3A Adj ,Q-5 DD	U05, U16, U21
02	UX82	IC,SMT,ECL Clock Divider /2, SO-8	U11
02	UX97	IC,SMT,3.3V Voltage Reference, SOT23-3	U09
02	XFPS03	Crystal,SMT,Fund,Par Res, 3.6864MHz,Comm	Y03
<hr/>			
01	NAPI142A	UI Interface PWB Assy (NVLT)	A03
02	CCFS04	Cap,SMT,Ceramic,0.01uF,10%,50V ,X7R,0603	C22
02	CCFS09	Cap,SMT,Ceramic,0.47uF,10%,25V ,X7R,0805	C19, C20
02	CCFS24	Cap,SMT,Ceramic,22pF,2%,50V, C0G,0603	C01, C03, C04, C05, C06, C25
02	CCFS32	Cap,SMT,Ceramic,100pF,2%,50V, C0G,0603	C02, C21
02	CCFS38	Cap,SMT,Ceramic,470pF,2%,50V, C0G,0603	C07, C09, C10, C11, C12, C23
02	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C13, C14, C15, C16, C17
02	CCFS60	Cap,SMT,Ceramic,1uF,10%,100V, X7R,1210	C08, C24
02	CCFS62	Cap, SMT, Ceramic, 10uF, 10%, 25V	C18
02	HAJ66	Terminal, SMT, Test Point, PWB	TP01
02	JQ34	Conn, Socket, D-Sub, 9 pin, PW B Mt	J02
02	JS129	Conn, Socket, D-Sub, HD15pin, 90deg, PWB	J01
02	LCFS01	Inductor, SMT, Choke, 600ohms, 2A, 0805	L02, L08, L16, L17
02	LCFS02	Inductor, SMT, Choke, 2000 ohm s, 80mA, 0805	L01, L03, L04, L05, L06, L07, L09, L10, L11, L12, L15, L18
02	LS22	Choke,SMT,Common Mode,2200 ohm ,200mA,1206	L13, L14
02	QK14	Diode, LED, Amber	DS01, DS02, DS03, DS04
02	QR70	Suppressor, Transient Voltage, SMT 60V Clamp	CR01, CR02, CR03, CR04, CR05, CR06, CR07, CR08, CR09
02	RAD19	Resistor, SMT, MF, 332 Ohms, 1% 1/4W	R07, R08, R13, R23
02	RAD21	Resistor, SMT, MF, 475 Ohms, 1% 1/4W	R01, R02, R03, R04, R05, R17, R18, R24
02	RAD75	Resistor, SMT, 2 Ohms, 5%, 1/4 W, 1206	R06, R25

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 15 of 19

Component Lvl, StockCode		Description	Reference Designation
02	RAE34	Resistor,SMT,MF,49.9R,1%,1/10W 0603	R10, R11, R15, R16
02	RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R14, R20, R21, R22
02	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R09, R12, R19
02	SA70	Switch, MOM, SPDT, PB, Black, No LED	S01, S03
02	SA71	Switch, MOM, SPDT, PB, RED No LED	S02
02	UDTS03	IC,SMT,RS-485 Transceiver,Sgl ,SOIC-8	U01, U02
02	UG35	IC,CMOS,Hex Schmitt,Trigger Inverter, SOIC-14	U03
02	UT130	IC, SMT, Voltage Regulator,5V, 1.5A, 150C, D2PAK	U04
01	NAPI173A	Rack Interface PWB Assy, Low Power NX	A09
02	CCFS01	Cap,SMT,Ceramic,0.001uF,10%,50 V,X7R,0603	C031, C036, C094
02	CCFS02	Cap,SMT,Ceramic,0.0022uF,10%, 50V,X7R,0603	C027
02	CCFS04	Cap,SMT,Ceramic,0.01uF,10%,50V ,X7R,0603	C007, C028, C029, C059, C060, C061, C063, C092, C096
02	CCFS05	Cap,SMT,Ceramic,0.022uF,10%,50 V,X7R,0603	C001, C003, C019, C022, C074, C075, C076, C081, C116, C118
02	CCFS06	Cap,SMT,Ceramic,0.047uF,10%,50 V,X7R,0603	C002, C004, C013, C017, C021, C103, C107, C111, C117
02	CCFS07	Cap,SMT,Ceramic,0.1uF,10%,50V, X7R,0805	C005, C006
02	CCFS09	Cap,SMT,Ceramic,0.47uF,10%,25V ,X7R,0805	C071, C090, C091
02	CCFS10	Cap,SMT,Ceramic,1uF,10%,25V, ,X7R,1206	C010, C016
02	CCFS23	Cap,SMT,Ceramic,18pF,2%,50V, C0G,0603	C065, C082
02	CCFS26	Cap,SMT,Ceramic,33pF,2%,50V, C0G,0603	C072
02	CCFS32	Cap,SMT,Ceramic,100pF,2%,50V, C0G,0603	C041, C047
02	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C008, C009, C011, C012, C018, C030, C034, C035, C037, C038, C039, C040, C042, C044, C046, C048,, C049, C050, C051, C052, C053, C054, C055, C056, C057, C058, C067, C069, C073, C079, C080, C083,, C084, C087, C088, C093, C095, C101, C106, C109, C113
02	CCFS53	Cap, SMT, Ceramic,47uF,20%, 6.3V, 1210	C014, C114, C115
02	CCFS57	Cap,SMT,Ceramic,10uF,20%,6.3V, X5R,0805	C097
02	CCFS60	Cap,SMT,Ceramic,1uF,10%,100V, X7R,1210	C015, C024, C032, C033, C043, C045, C062, C064, C070, C085, C086, C089, C102, C110
02	CCFS62	Cap, SMT, Ceramic, 10uF, 10%, 25V	C099, C100
02	CCFS72	Cap, SMT, Ceramic, 10uF, 10%, 50V, 2220	C020, C023, C025, C068, C077
02	CCFS73	Cap, SMT, Ceramic, 1uF, 10%, 16V, X5R, 0603	C112
02	CT63	Capacitor, SMT, Ceramic, 0.039 uF, 50V, 10%	C066
02	CT64	Capacitor, SMT, Ceramic, 2.2uF 10%, 100V, X7R, 181	C105
02	CT72	Cap, SMT, Electrolytic, 1000uF , 20%, 50V	C104, C108
02	CT90	Capacitor, SMT, Ceramic, 25V, 47uF, 20%	C026, C078
02	HAJ66	Terminal, SMT, Test Point, PWB	TP01, TP03, TP11, TP12, TP15, TP40

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 16 of 19

<u>Component Lvl, StockCode</u>	<u>Description</u>	<u>Reference Designation</u>
02 JF47	Conn, Header,Square Post,Gold, Dual,40-pin	J9
02 JM44	Conn, Modular Jack, RJ45, Shld , Side, PWB, 50u	J3
02 JS129	Conn, Socket, D-Sub, HD15pin, 90deg, PWB	J4
02 JS13	Conn, Socket, D-Sub, 25 pin, P WB Mt	J1, J2
02 JS43	Conn, Plug, D-Sub, 25 pin, Ver t PWB	J6
02 JS53	Conn,Socket,D-Sub,25 pin,Vert PWB	J5
02 JT148	Connector, Header, 2 pos, 90 deg, PWB,20A, 600V, 7	J7
02 JU80	MTA, Square Post Header Assy, 3-pin, Locking	J8
02 LCFS04	Bead, Ferrite SMT, 200 ohms @ 1MHz, 100mA, 1206	L05, L10
02 LS24	Inductor, SMT, 10uH, 2.4A, RMS	L09
02 LS35	Inductor, SMT, Shielded, DR Series, 15uH, 4A RMS	L08, L11
02 LS45	Inductor, SMT, Shielded, 33uH, 3.3A RMS	L06, L12
02 LS50	Choke, SMT, Common Mode, 10k ohm @ 1MHz, 200mA	L01, L02, L03, L04, L07, L13, L14
02 QDDS02	Diode, SMT, Schottky, 40V, 1A, SMA	CR2
02 QDLS01	Diode, SMT, LED, Green, (560nm), 0603	DS2
02 QDLS07	Diode, SMT, LED, Amber, (592nm), 0603	DS1
02 QDSS01	Diode,SMT,Schottky,30V,0.2A, SOD-323	CR1
02 QDSS03	Diode, SMT, Shottky, 40V, 3A, SMA	CR3
02 QDZS04	Diode,SMT,Zener,39V,5%,3W,SMB	CR4
02 QM71	Diode, SMT Ultrafast, 600V, 1A SMA	CR7, CR8
02 QN53	Transistor,SMT,MOSFET,N-Channe l,60V,115mA,SOT-23	Q01
02 QR70	Suppressor, Transient Voltage, SMT 60V Clamp	CR5
02 RAD12	Resistor, SMT, MF, 82.5 Ohms, 1% 1/4W	R012, R013, R014, R015
02 RAD13	Resistor, SMT, MF, 100 Ohms, 1% 1/4W	R081, R095, R097, R100, R117, R119, R123, R130
02 RAD17	Resistor, SMT, MF, 221 Ohms, 1% 1/4W	R010, R017
02 RAD25	Resistor, SMT, MF, 1000 Ohms, 1% 1/4W	R020
02 RAD45	Resistor, SMT, MF, 47.5K Ohms, 1% 1/4W	R031
02 RAD49Z	Resistor,SMT,MF,10ohms, 1%,2W	R114, R116
02 RAD69	Resistor, SMT, 590 Ohms, 1%, 1 W, 2512	R032, R035
02 RAD72	Resisitor, SMT, MF, 0.0 Ohms, Jumper, 1206	R138
02 RAD75	Resistor, SMT, 2 Ohms, 5%, 1/4 W, 1206	R003, R011, R026, R027, R118, R120, R124, R131
02 RAE02	Resistor, SMT, MF, 121K Ohms, 1% 1/4W	R088
02 RAE03	Resistor, SMT, MF, 150K Ohms, 1% 1/4W	R127, R132, R133
02 RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R060
02 RFFS14	Resistor,SMT,MF,10.0ohms,1%, 1/10W,0603	R023, R109, R111

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 17 of 19

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	RFFS26	Resistor,SMT,MF,100ohms,1%, 1/10W,0603	R019, R022, R041, R073, R082, R106, R107
02	RFFS30	Resistor,SMT,MF,221ohms,1%, 1/10W,0603	R001, R004, R029, R034, R089, R090, R091, R129, R135
02	RFFS31	Resistor,SMT,MF,274ohms,1%, 1/10W,0603	R077, R078, R079
02	RFFS34	Resistor,SMT,MF,475ohms,1%, 1/10W,0603	R006, R007, R008, R009, R101, R115
02	RFFS36	Resistor,SMT,MF,681ohms,1%, 1/10W,0603	R016, R018
02	RFFS38	Resistor,SMT,MF,1000ohms,1%, 1/10W,0603	R002, R005, R028, R033, R050, R052, R053, R054, R057, R059, R063, R064, R083, R084, R085, R128,, R134, R136
02	RFFS39	Resistor,SMT,MF,1210ohms,1%, 1/10W,0603	R051
02	RFFS40	Resistor,SMT,MF,1500ohms,1%, 1/10W,0603	R043, R094, R102, R103
02	RFFS42	Resistor,SMT,MF,2210ohms,1%, 1/10W,0603	R072
02	RFFS44	Resistor,SMT,MF,3320ohms,1%, 1/10W,0603	R030, R086
02	RFFS45	Resistor,SMT,MF,3920ohms,1%, 1/10W,0603	R049
02	RFFS46	Resistor,SMT,MF,4750ohms,1%, 1/10W,0603	R021, R024, R025, R040, R047, R099, R104, R108, R110
02	RFFS47	Resistor,SMT,MF,5620ohms,1%, 1/10W,0603	R044
02	RFFS48	Resistor,SMT,MF,6810ohms,1%, 1/10W,0603	R065
02	RFFS49	Resistor,SMT,MF,8250ohms,1%, 1/10W,0603	R046
02	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R036, R056, R058, R061, R062, R067, R068, R074, R075, R076, R080, R092, R093, R096, R098, R105,, R112, R113, R121, R122, R125, R126, R137
02	RFFS51	Resistor,SMT,MF,12.1Kohms,1%, 1/10W,0603	R066
02	RFFS52	Resistor,SMT,MF,15.0Kohms,1%, 1/10W,0603	R048, R071
02	RFFS54	Resistor,SMT,MF,22.1Kohms,1%, 1/10W,0603	R038, R045
02	RFFS59	Resistor,SMT,MF,56.2Kohms,1%, 1/10W,0603	R039
02	RFFS62	Resistor,SMT,MF,100Kohms,1%, 1/10W,0603	R042
02	RFFS65	Resistor,SMT,MF,182Kohms,1%, 1/10W,0603	R037
02	RFFS66	Resistor,SMT,MF,221Kohms,1%, 1/10W,0603	R087
02	RFFS70	Resistor,SMT,MF,475Kohms,1%, 1/10W,0603	R055, R069, R070
02	RX64	Thermistor, PTC, SMT, 2920, 500mA Hold	RT03
02	RX66	Thermistor, PTC, SMT, 2920 2A Hold, 24V	RT01, RT02, RT05
02	UD66	IC,SMT,Quad RS-422 DIFF Line Driver	U01, U04
02	UD70	IC,SMT,Quad 2-input AND gate, SO-14	U18
02	UDAS01	IC,SMT,Trans Array, 7 Darl., SOIC-16	U21
02	UDLS02	IC, SMT, CMOS, Octal Latch, SOIC-20	U20
02	UDLS03	IC,SMT,CMOS,Hex Schm,Trig,Inv, SOIC-14	U16
02	UDMS01	IC, SMT, SRAM, 32Kx8, SOIC-28 (Wide)	U19
02	UDMS02	IC, SMT, Micro, ADC, PWM,Flash , TQFP-64	U13
02	UDOS01	IC,SMT,Dual Optocoupler,SOIC-8	U24

StockCode: NARA65B

Page 18 of 19

Description: Final Assy, NX10 (RLS 3),

<u>Component Lvl, StockCode</u>		<u>Description</u>	<u>Reference Designation</u>
02	UDTS03	IC,SMT,RS-485 Transceiver,Sgl ,SOIC-8	U03, U14, U17, U23, U27
02	ULAS01	IC,SMT,Opamp,Quad,Single Supply,SOIC-14	U10
02	ULAS02	IC,SMT,Opamp,Quad,Rail-To-Rail ,SOIC-14	U09
02	ULCS01	IC,SMT,Comparator,Quad,SOIC-14	U06
02	UMAS01	IC,SMT,ADC,10-Bit,11-ch,SPI, SOIC-20	U08
02	UMDS01	IC,SMT,DAC,8-Bit,4-ch,SPI, SOIC-14	U11
02	UP105	IC, SMT, DC-DC Converter, Boost/Inverting MSOP8	U05
02	UT113	IC, SMT, Voltage Reg, 9V, 1.5A , D2PAK	U22
02	UT144	Amplifier, Isolation, SMT, 1kV Unity Gain	U26
02	UT145	IC, SMT, DC-DC Converter,5V-5V Isolated, 2W, 1kVrm	U25
02	UT91	IC,SMT,Quad RS-422 Receiver, 16-SOIC	U02
02	UT93	IC,SMT,Voltage Regulator,5V, 1A, D2PAK	U28
02	UW90	IC,SMT,Quad 2 TO 1 DATA Sel/ Mux 3 States Output,3	U12
02	UX163	IC, SMT, 5A, Boost Converter, HTSSOP-14, w/ PowerP	U15
02	UX83	IC,SMT,2.5V Reference,0.1%,SOT -23-6	U07
02	XFPS11	Crystal, SMT, Fund, 11.0592MHz	Y01
01	NAPI174	Power Module Interface PWB Assy, Low Power NX	A10, A11
02	CAP81	Cap, Electrolytic, 1000uF, +/- 20%, 63V Radial Lea	C3, C4
02	CBP15	Capacitor, Electrolytic, 470uF 450V	C1, C5
02	CCG07	Capacitor, Ceramic, 0.1uF 10% 100V	C2, C6
02	FA34	Fuse, 20A, 500Vdc, Non Time Delay, KLM	F1, F2
02	FC27	Fuse Clip, 20A, 13/32 Dia Fuse, PWB Mt	XF1, XF2
02	HAC121	Terminal, PC Screw M4, 30 Amp	E03, E05, E07, E09
02	HAC55	Terminal,PC Screw 10-32,30 Amp	E01, E02, E04, E06, E08, E10
02	JN59	Conn,Edge Card,88 Contacts, Dual Row,30u Gold, M3	J4, J5
02	JN69	Conn, Edge Card, 3A, 12 Contacts, Dual Row, 30u G	J6, J7
02	JS12	Conn, Plug, D-Sub, 25 pin, PWB Mt	J3
02	JU25	MTA, Keyed Square Post Header Assy, 4 pin	J1, J2
02	QE28	Diode, General Purpose, 400V, 1A	CR2, CR3, CR5, CR6
02	QI10	Diode, Power Rectifier, 4A, Ultra Fast	CR4
02	QK54	Diode, Zener, 30V, 500mW, 5%,	CR1
02	QM75	Diode, LED, Ultrabright, Amber , 5mm	DS1, DS2, DS3
02	RAB01	Resistor, MF, 10.0 Ohms, 1PC 1/4W	R03, R05
02	RAB10	Resistor, MF, 56.2 Ohms, 1PC 1/4W	R11, R12, R16, R17
02	RAB43	Resistor, MF, 33.2K Ohms, 1PC 1/4W	R02

StockCode: NARA65B
Description: Final Assy, NX10 (RLS 3),

Page 19 of 19

Component Lvl, StockCode		Description	Reference Designation
02	RBP25	Resistor, Film, 100K Ohms, 5%, 2W	R06, R10, R18, R19
02	RD20	Resistor, Film, 120K Ohms, 2PC 1/2W	R01, R04
02	RX09	Thermistor, PTC, .12-.19 Ohms, 1.35A Hold	RT1, RT2
01	NAPP11/02A	RF Sample PWB Assy, RF Volt and Current Sample, NX	A20
02	CCFS07	Cap,SMT,Ceramic,0.1uF,10%,50V, X7R,0805	C13
02	CCFS10	Cap,SMT,Ceramic,1uF,10%,25V, ,X7R,1206	C07, C11
02	CCFS42	Cap,SMT,Ceramic,1000pF,2%,50V, C0G,0805	C02, C03
02	CCFS52	Cap, SMT, Ceramic, 0.1uF, 10% 25V X7R, 0603	C01, C09, C10
02	CCFS72	Cap, SMT, Ceramic, 10uF, 10%, 50V, 2220	C19, C29
02	CFS02	Cap, SMT, Ceramic, 4700pF, 5%, 50V,COG, 1206	C20, C21
02	HR08	Terminal, PWB, 6-32, Vert	E01
02	JS50	Conn, Socket, D-Sub, 9-Pin, Vertical PWB	J01
02	LS18	Inductor,SMT.2.2uH,600ma,1210	L01, L02
02	QR70	Suppressor, Transient Voltage, SMT 60V Clamp	CR05, CR06
02	RAD76	Resistor, SMT, 1000 Ohms, 5%, 1W, 2512	R05
02	RFFS01	Resistor,SMT,MF,0.0ohms,Jumper ,0603	R02, R04, R11, R22, R23, R28, R30
02	RFFS30	Resistor,SMT,MF,221ohms,1%, 1/10W,0603	R12
02	RFFS38	Resistor,SMT,MF,1000ohms,1%, 1/10W,0603	R15
02	RFFS50	Resistor,SMT,MF,10.0Kohms,1%, 1/10W,0603	R08, R19
02	UT90	IC,SMT,Amp,35MHz,Current Feedback 1.1A,TO263-7	U02
01	NAX274	Fan Tray Assy, NX5 & NX10	A16, A17, A18, A19
02	212-4070	Fan Interface PWB Assy, NX5 & NX10	A01
03	JU60	MTA, Keyed Square Post Header Assy, 3 pin	J01, J03
02	ZAP50	Fan, 80mm, Brushless, 48Vdc, EMI Caps, Tach w/conn	B01, B02
01	RC44	Resistor,Cap Discharge,27Komhs 5%,13W	A02R1, A02R4
01	TF45	Inductor, Choke, 10Mh, 30 ADC	L01, L02
01	UB89	Sensor, Flame UV photo tube, for UB88	A24U2
01	UC97	Current Sensor, Hall effect, 50A	U05
01	UG102	Power Supply, 15V, 240W, Univ. Input	U01
01	UG103	Power Supply, 48V, 336W, Univ. Input, PFC, Rem ON/	U02
01	UM33	Surge Arrester, 4000Vdc 10PC	U04
01	UW146	Display, 20x4 LCD, 3.3 - 5V, -20/+70	U03

SECTION 4.3: WIRING/CONNECTOR LISTS

This section contains the wiring information for the hard-wired assemblies of the transmitter, and applicable connector mating information.

Wiring Lists Provided

Wiring lists are provided in tabular format. [Table 4.3.1 on page 4.3.2](#) lists the tables containing wiring information. These tables provide non-printed wiring pattern, point-to-point (source and destination) interconnection information.

Wiring Lists Not Provided

Separate wiring lists are not provided for some assemblies, including:

- Assemblies that have a separate maintenance manual. Refer to the appropriate maintenance manual for detailed wiring information for these assemblies, if provided.
- Assemblies that have their wiring information shown in tables on their assembly detail drawing(s). Refer to the Mechanical Drawings section of this manual for detailed wiring information for these assemblies.

Connector Mating Information

Where applicable, a connector mating table is provided after the corresponding wiring list. [Table 4.3.2 on page 4.3.2](#) identifies all provided connector information.

Wire Colours

Every effort is made to manufacture assemblies using the wire colour shown in the **Color** column of the wiring list tables. Sometimes, a white wire will be substituted for the listed colour. In such cases, wires must be identified by their assigned numbers.

Printed Wiring Board Patterns

Printed wiring pattern information for printed wiring boards (PWBs) is beyond the scope of this manual, and therefore not provided.

Table 4.3.1: Wiring Lists Provided

TABLE #	Description
Table 4.3.3	Wiring List - NX10 Transmitter (page 4.3.2)
Table 4.3.5	Wiring List - B+ Distribution Assembly (Nautel Part # 211-7120) (page 4.3.7)

Table 4.3.2: Connector Mating Tables Provided

TABLE #	Description
Table 4.3.4	Connector Mating Information - NX10 Transmitter (page 4.3.6)
Table 4.3.6	Connector Mating Information - NAX274 Fan Tray Assembly (page 4.3.7)

Table 4.3.3: Wiring List - NX10 Transmitter

Source	Destination	Wire #	Color	Size	Remarks
T1 Load 0	P3	1	Grey	14	torque source 137 in-lb
T1 Load 1	A1U1-A	2	Grey	6	torque source 137 in-lb torque destination 60 in-lb
T1 Load 2	A1U1-B	3	Grey	6	torque source 137 in-lb torque destination 60 in-lb
T1 Load 3	A1U1-C	4	Grey	6	torque source 292 in-lb torque destination 60 in-lb
T1 Ground	E13	5	Grn/Yel	6	torque source 67 in-lb torque destination 60 in-lb
P1	A1U1-A	6	Grey	14	torque destination 60 in-lb
P2	A2K1-TB1-1	7	Grey	18	torque destination 6 in-lb
P2	U1-Line	8	Grey	18	torque destination 60 in-lb
T1 Load 0	DS1-X2	9	Grey	14	torque source 292 in-lb torque destination 7 in-lb
P4	A2K1-TB1-2	10	Grey	18	torque destination 6 in-lb
P4	U1-Neutral	11	Grey	18	torque destination 9.7 in-lb
DS1-X1	A1U1-A	12	Grey	14	torque source 7 in-lb torque destination 60 in-lb
DS1-X2	DS2-X2	13	Grey	14	torque source 7 in-lb torque destination 7 in-lb
DS2-X1	A1U1-B	14	Grey	14	torque source 7 in-lb torque destination 60 in-lb
DS2-X2	DS3-X2	15	Grey	14	torque source 7 in-lb torque destination 7 in-lb
DS3-X1	A1U1-C	16	Grey	14	torque source 7 in-lb torque destination 60 in-lb

Table 4.3.3: Wiring List - NX10 Transmitter

Source	Destination	Wire #	Color	Size	Remarks
A1U1-DC+	L1-E2	17	White	10	torque source 60 in-lb torque destination 19 in-lb
A1U1-DC+	L2-E1	18	White	10	torque source 60 in-lb torque destination 19 in-lb
A1U1-DC-	A2(C4-)	19	Black	6	torque source 60 in-lb torque destination 25 in-lb
A1U1-DC-	E1	20	Black	6	torque source 60 in-lb torque destination 137 in-lb
A1U1TB1-3	P13-23	21	White	20	
A1U1TB1-4	P6	22	White	22	
A1U1TB1-5	P13-19	23	White	22	
A1U1TB1-6	P14-12	24	White	22	
A1U1TB1-10	P13-3	25	Centre	22	1-Conductor
A1U1TB1-8	P13-11	25	Shield	-	Shielded
A1U1TB1-11	P13-15	26	Black	20	
A1U1TB1-13	P13-22	27	Centre	22	1-Conductor
A1U1TB1-14	P13-10	27	Shield	-	Shielded
A2F1E1	L1-E1	28	White	10	torque source 67 in-lb torque destination 19 in-lb
A2F1E1	L2-E2	29	White	10	torque source 67 in-lb torque destination 19 in-lb
A2(C1+)	A10E1	30	White	10	torque source 25 in-lb torque destination 20 in-lb
A2(C1-)	A10E2	31	Black	10	torque source 25 in-lb torque destination 20 in-lb
A2(C1+)	A11E1	32	White	10	torque source 25 in-lb torque destination 20 in-lb
A2(C1-)	A11E2	33	Black	10	torque source 25 in-lb torque destination 20 in-lb
P5	P14-11	34	White	22	
P7-1	P13-4	35	White	22	
P7-2	P13-16	36	White	22	
P7-3	P13-18	37	White	22	
P7-4	P13-6	38	Black	22	
U1-Line	U2-Line	39	Gray	18	torque source 9.7 in-lb torque destination 15 in-lb
U1-Neutral	U2-Neutral	40	Grey	18	torque source 9.7 in-lb torque destination 15 in-lb
U1-Gnd	E2	41	Grn/Yel	14	torque source 9.7 in-lb torque destination 19 in-lb

Table 4.3.3: Wiring List - NX10 Transmitter

Source	Destination	Wire #	Color	Size	Remarks
U1-V+	P15-1	42	White	10	torque source 9.7 in-lb
U1-V-	P15-2	43	Black	10	torque source 9.7 in-lb
U2-Line	P16-1	44	Grey	18	torque source 15 in-lb
U2-Neutral	P16-3	45	Grey	18	torque source 15 in-lb
U2-Gnd	E2	46	Grn/Yel	14	torque source 15 in-lb torque destination 19 in-lb
U2-V+	P14-3	47	White	20	torque source 16 in-lb
U2-V+	P14-16	48	White	20	torque source 16 in-lb
U2-V-	P14-1	49	Black	20	torque source 16 in-lb
U2-V-	P14-2	50	Black	20	torque source 16 in-lb
P8-6	P14-9	52	White	22	
P8-4	P14-5	53	White	22	
P9-1	P10-1	54	White	22	
P9-2	P10-2	55	White	22	
P9-3	P10-11	56	White	22	
P9-4	P10-12	57	White	22	
P9-5	P10-16	58	White	22	
P9-6	P10-15	59	Black	22	
P9-7	P10-10	60	White	22	
P9-8	P10-9	61	White	22	
P9-9	P10-13	62	White	22	
P11-1	P18-4	63	Centre	24	Coaxial Cable
P11-6	P18-1	63	Shield	-	
P11-2	P18-2	64	White	22	
P11-3	P18-7	65	Black	22	
P11-5	P18-6	66	White	22	
P11-7	P18-5	67	Centre	24	Coaxial Cable
P11-8	P18-8	67	Shield	-	
P12-5	P17-4	68	Centre	24	Coaxial Cable
P12-9	P17-1	68	Shield	-	
P12-4	P17-2	69	White	22	
P12-3	P17-7	70	Black	22	
P12-1	P17-6	71	White	22	
P12-8	P17-5	72	Centre	24	Coaxial Cable
P12-7	P17-8	72	Shield	-	
P14-18	P19-3	73	Centre	22	1-Conductor
P14-20	P19-1	73	Shield	-	Shielded

Table 4.3.3: Wiring List - NX10 Transmitter

Source	Destination	Wire #	Color	Size	Remarks
P14-21	P19-2	74	Centre	22	1-Conductor
P14-22	P19-1	74	Shield	-	Shielded
A20E1	C12E2	75	White	22	torque source 10 in-lb torque destination 2.5 in-lb
A22E1	E3	76	Yellow	14	torque source 5 in-lb torque destination 19 in-lb
A22E2	E4	77	Yellow	14	torque source 5 in-lb torque destination 19 in-lb
A23C1E1	E14	78	White	22	torque source 2.5 in-lb torque destination 19 in-lb
U4E2	E5	79	Yellow	18	torque destination 19 in-lb
E6	E7	80	Grn/Yel	2	torque source 170 in-lb torque destination 292 in-lb
E6	E12	81	Grn/Yel	2	torque source 170 in-lb torque destination 60 in-lb
E8	E9	82	Grn/Yel	14	torque source 19 in-lb torque destination 19 in-lb
E10	E11	83	Grn/Yel	14	torque source 19 in-lb torque destination 19 in-lb
E17	E16	84	Grn/Yel	14	torque source 19 in-lb torque destination 19 in-lb

Table 4.3.4: Connector Mating Information - NX10 Transmitter

Connector	Mate
P1	XF1-Line
P2	XF1-Load
P3	XF2-Line
P4	XF2-Load
P5	A2K1P1
P6	A2K1P2
P7	U5J1
P8	U2CN100
P9	A3J2
P10	U3H1
P11	A4J19A
P12	A4J19B
P13	A9J5
P14	A9J6
P15	A9J7
P16	A9J8
P17	A20J1
P18	A23A1J1
P19	A24U1J1
W1P1	A3J1
W1P2	A4J18
W2P1	A4J12A
W2P2	A12A1J1
W3P1	A4J12B
W3P2	A13A1J1
W4P1	A4J12C
W4P2	A14A1J1
W5P1	A4J12D
W5P2	A15A1J1
W6P1	A4J20
W6P2	A9J4
W7P1	A4J21
W7P2	A9J3

Table 4.3.5: Wiring List - B+ Distribution Assembly (Nautel Part # 212-7120)

Source	Destination	Wire #	Color	Size	Remarks
F1E2	C4+	-	White	10	torque source 67 in-lb torque destination 25 in-lb
F1E2	C4+	-	White	10	torque source 67 in-lb torque destination 25 in-lb
F1E2	K1-1	-	Yellow	14	torque source 67 in-lb torque destination 44 in-lb
K1-2	R5E1	-	Yellow	14	torque source 44 in-lb torque destination 20 in-lb
R5E2	A2E1	-	Yellow	14	torque source 20 in-lb torque destination 35 in-lb

Table 4.3.6: Connector Mating Information - NAX274 Fan Tray Assembly





Connector	Mate
B1P1	A1J1
B2P1	A1J3

SECTION 4.4: READING ELECTRICAL SCHEMATICS

This section contains electrical schematics and logic diagrams for the transmitter. Block diagrams, simplified electrical schematics, and logic diagrams may be included. Refer to [Table 4.4.1 on page 4.4.5](#) for an itemized listing.

Component Values

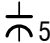Unless otherwise specified on the logic or schematic diagram, the following defaults apply:

-  5 Capacitor values are shown in microfarads (uF) (e.g. 5 uF)
-  10 Resistor values are shown in ohms (e.g. 10 ohms; K = 1,000 and M = 1,000,000)
Resistor power ratings are not shown when less than 0.5 W
-  Unidentified diodes are part number BAS21HT1 (Nautel Part # QDRS01)
-  24V Unidentified transient suppressors are part number 0603E SDA-TR1 (Nautel Part # QR70)

Graphic and Logic Symbols

The graphic symbols used on electrical schematics are in accordance with IPC-2612-2010 - Sectional Requirements for Electronic Diagramming Documentation (Schematic and Logic Descriptions).

The logic symbols used on electrical schematics and logic diagrams are in accordance with IPC-2612-2010.

Reference Designations

Reference designations were assigned in accordance with IPC-2612-2010.

Each electrical symbol is identified with its basic reference designation. To obtain the full reference designation for a specific part, prefix this basic identifier with the reference designation assigned to all higher assemblies. For example, the complete designation for a resistor (R1) on a printed wiring board (A1), that is part of a larger board (A2), would be A2A1R1.

Unique Symbols

Nautel uses unique symbols on electrical schematics to describe logic (two-state) signals. These signals differ from single-state signals or analog signals that may have multiple values.

Type of Inputs and Outputs

On electrical schematics, names used to describe logic (two-state) input and output signals are prefixed with a # symbol.

Logic Level Convention

The # prefix identifies an input or output signal that has two distinct states: high and low.

The suffix on an input or output signal name identifies the active (true) state of the signal. The high suffix (+) indicates the more positive of the two levels used to represent the logic states. The low suffix (-) indicates the less positive of the two levels.

Two types of logic, positive and negative, may be represented on a particular schematic. In positive logic, high represents the active (true) state, and low represents the inactive (false) state. In negative logic, low represents the active (true) state, and high represents the inactive (false) state.

Identifying Schematic Diagrams

Each electrical schematic in this section is identified by a number that is both the figure number and the page number. The numbers are assigned sequentially and are prefixed by the letters SD. The electrical schematics and logic diagrams included in this section are listed in [Table 4.4.1 on page 4.4.5](#).

Structure of Schematics

The electrical schematics are structured in a hierarchical format that is based on function and signal flow. Wherever practical, the signal flow is from left to right. Normally, inputs originate on the left-hand side and outputs extend to the right-hand side. Exceptions are shown by an arrow indicating the direction of signal flow.

NOTE: The physical location of a part or assembly was not necessarily a factor during creation of the schematic. The full reference designation assigned to a part or assembly, in conjunction with the family tree (see [Section 4.2, "Parts Lists" on page 4.2.1](#)) and the assembly detail drawings (see [Section 4.5, "Mechanical Drawings" on page 4.5.1](#)), will identify its location.

Figures SD-1 through SD-5 identify each major stage and its detailed interconnection. Each stage contains cross-references that identify which blocks are the signal sources for inputs, or the destinations for outputs.

When a sub-function is treated as a block in figures SD-1 through SD-5, its detailed circuit information is included in its own schematic drawing(s), which is also included in this section.

Locating Schematic Diagram(s) for a Functional Block

The text inside a functional block provides the key to locating its schematic diagram(s).

1. When a functional block is assigned a reference designation (e.g., A2A1), refer to the family trees in [Section 4.2, "Parts Lists" on page 4.2.1](#). Follow the family tree branches to the block that contains the desired reference designation, and associated Nautel nomenclature (e.g., NAPA34C Modulator/Power Amplifier PWB). Note the reference designations and Nautel nomenclatures of all higher assemblies in the path.
Example: A12 NAP39C RF Power Module > A12A1 NAPA34C Modulator/Power Amplifier PWB.
2. Refer to [Table 4.4.1 on page 4.4.5](#) and use the reference designation and Nautel nomenclature to identify the appropriate schematic diagram(s).
Example: NAPA34C Modulator/Power Amplifier PWB shown on schematics SD-21 and SD-22.
3. If necessary, refer to the referenced figure (e.g., SD-21 or SD-22) in the schematics at the end of this section and locate the next, lower-level assembly. Then, repeat this procedure until the desired schematic diagram is found.

Locating a Part or Assembly on a Schematic

The full reference designation assigned to a part or assembly is the key to physically locating that part or assembly.

NOTE: Full reference designations contain the assembly hierarchical coding. When the end item is divided into units (cabinets), the first coding is a unit number (1, 2, 3, etc.). When the end item is divided into assemblies, the first coding is an assembly number (A1, A2, A3, etc.). If a unit or an assembly is divided into sub-assemblies, assembly coding that identifies assembly relationship (1A1, A2A1, A2A1A1, etc.) is added.

1. Refer to the family trees in [Section 4.2, "Parts Lists" on page 4.2.1](#).
2. Follow the family tree branches to the block that contains the desired reference designation, while noting the Nautel nomenclatures and names of all higher assemblies in the path. Example: A12 NAP39C RF Power Module > A12A1 NAPA34C Modulator/Power Amplifier PWB.

NOTE: The drawings in the Mechanical Drawings section depict the assembly detail of the transmitter and its modules and assemblies

3. Refer to [Table 4.5.1 in Section 4.5, "Mechanical Drawings" on page 4.5.1](#). Use the Nautel nomenclature and name of each family tree block in the path, starting at the highest assembly – this is normally Figure MD-1 – to determine the figure number(s) for that assembly. Example: The NAPA34C Modulator/Power Amplifier PWB is shown on MD-11 and MD-12.
4. Refer to the referenced figure (e.g., MD-11 or MD-12) in [Section 4.5.1, "List of Mechanical Drawings" on page 4.5.2](#) to locate the desired part or assembly.

Table 4.4.1: List of Electrical Schematics

Figure #	Title
SD-1	NX10 Transmitter - Ac-Dc Power Stage
SD-2	NX10 Transmitter - Exciter Stage
SD-3	NX10 Transmitter - Control/Monitor Stage
SD-4	NX10 Transmitter - RF Power Stage (Sheet 1 of 2)
SD-5	NX10 Transmitter - RF Power Stage, RF Output Filter (Sheet 2 of 2)
SD-6	NAPI142A UI Interface PWB
SD-7	NAPC168A Control/Interface PWB (Sheet 1 of 9)
SD-8	NAPC168A Control/Interface PWB (Sheet 2 of 9)
SD-9	NAPC168A Control/Interface PWB (Sheet 3 of 9)
SD-10	NAPC168A Control/Interface PWB (Sheet 4 of 9)
SD-11	NAPC168A Control/Interface PWB (Sheet 5 of 9)
SD-12	NAPC168A Control/Interface PWB (Sheet 6 of 9)
SD-13	NAPC168A Control/Interface PWB (Sheet 7 of 9)
SD-14	NAPC168A Control/Interface PWB (Sheet 8 of 9)
SD-15	NAPC168A Control/Interface PWB (Sheet 9 of 9)
SD-16	NAPX46 GPS Sync PWB (Optional)
SD-17	NAPI173A Rack Interface PWB (Sheet 1 of 3)
SD-18	NAPI173A Rack Interface PWB (Sheet 2 of 3)
SD-19	NAPI173A Rack Interface PWB (Sheet 3 of 3)
SD-20	NAPI174 Power Module Interface PWB
SD-21	NAP39C RF Power Module and NAPA34B Modulator/Power Amplifier PWB (Sheet 1 of 2)
SD-22	NAP39C RF Power Module and NAPA34B Modulator/Power Amplifier PWB (Sheet 2 of 2)
SD-23	NAPP11/02A RF Voltage and Current Sample PWB
SD-24	NAPP11 Directional Coupler PWB


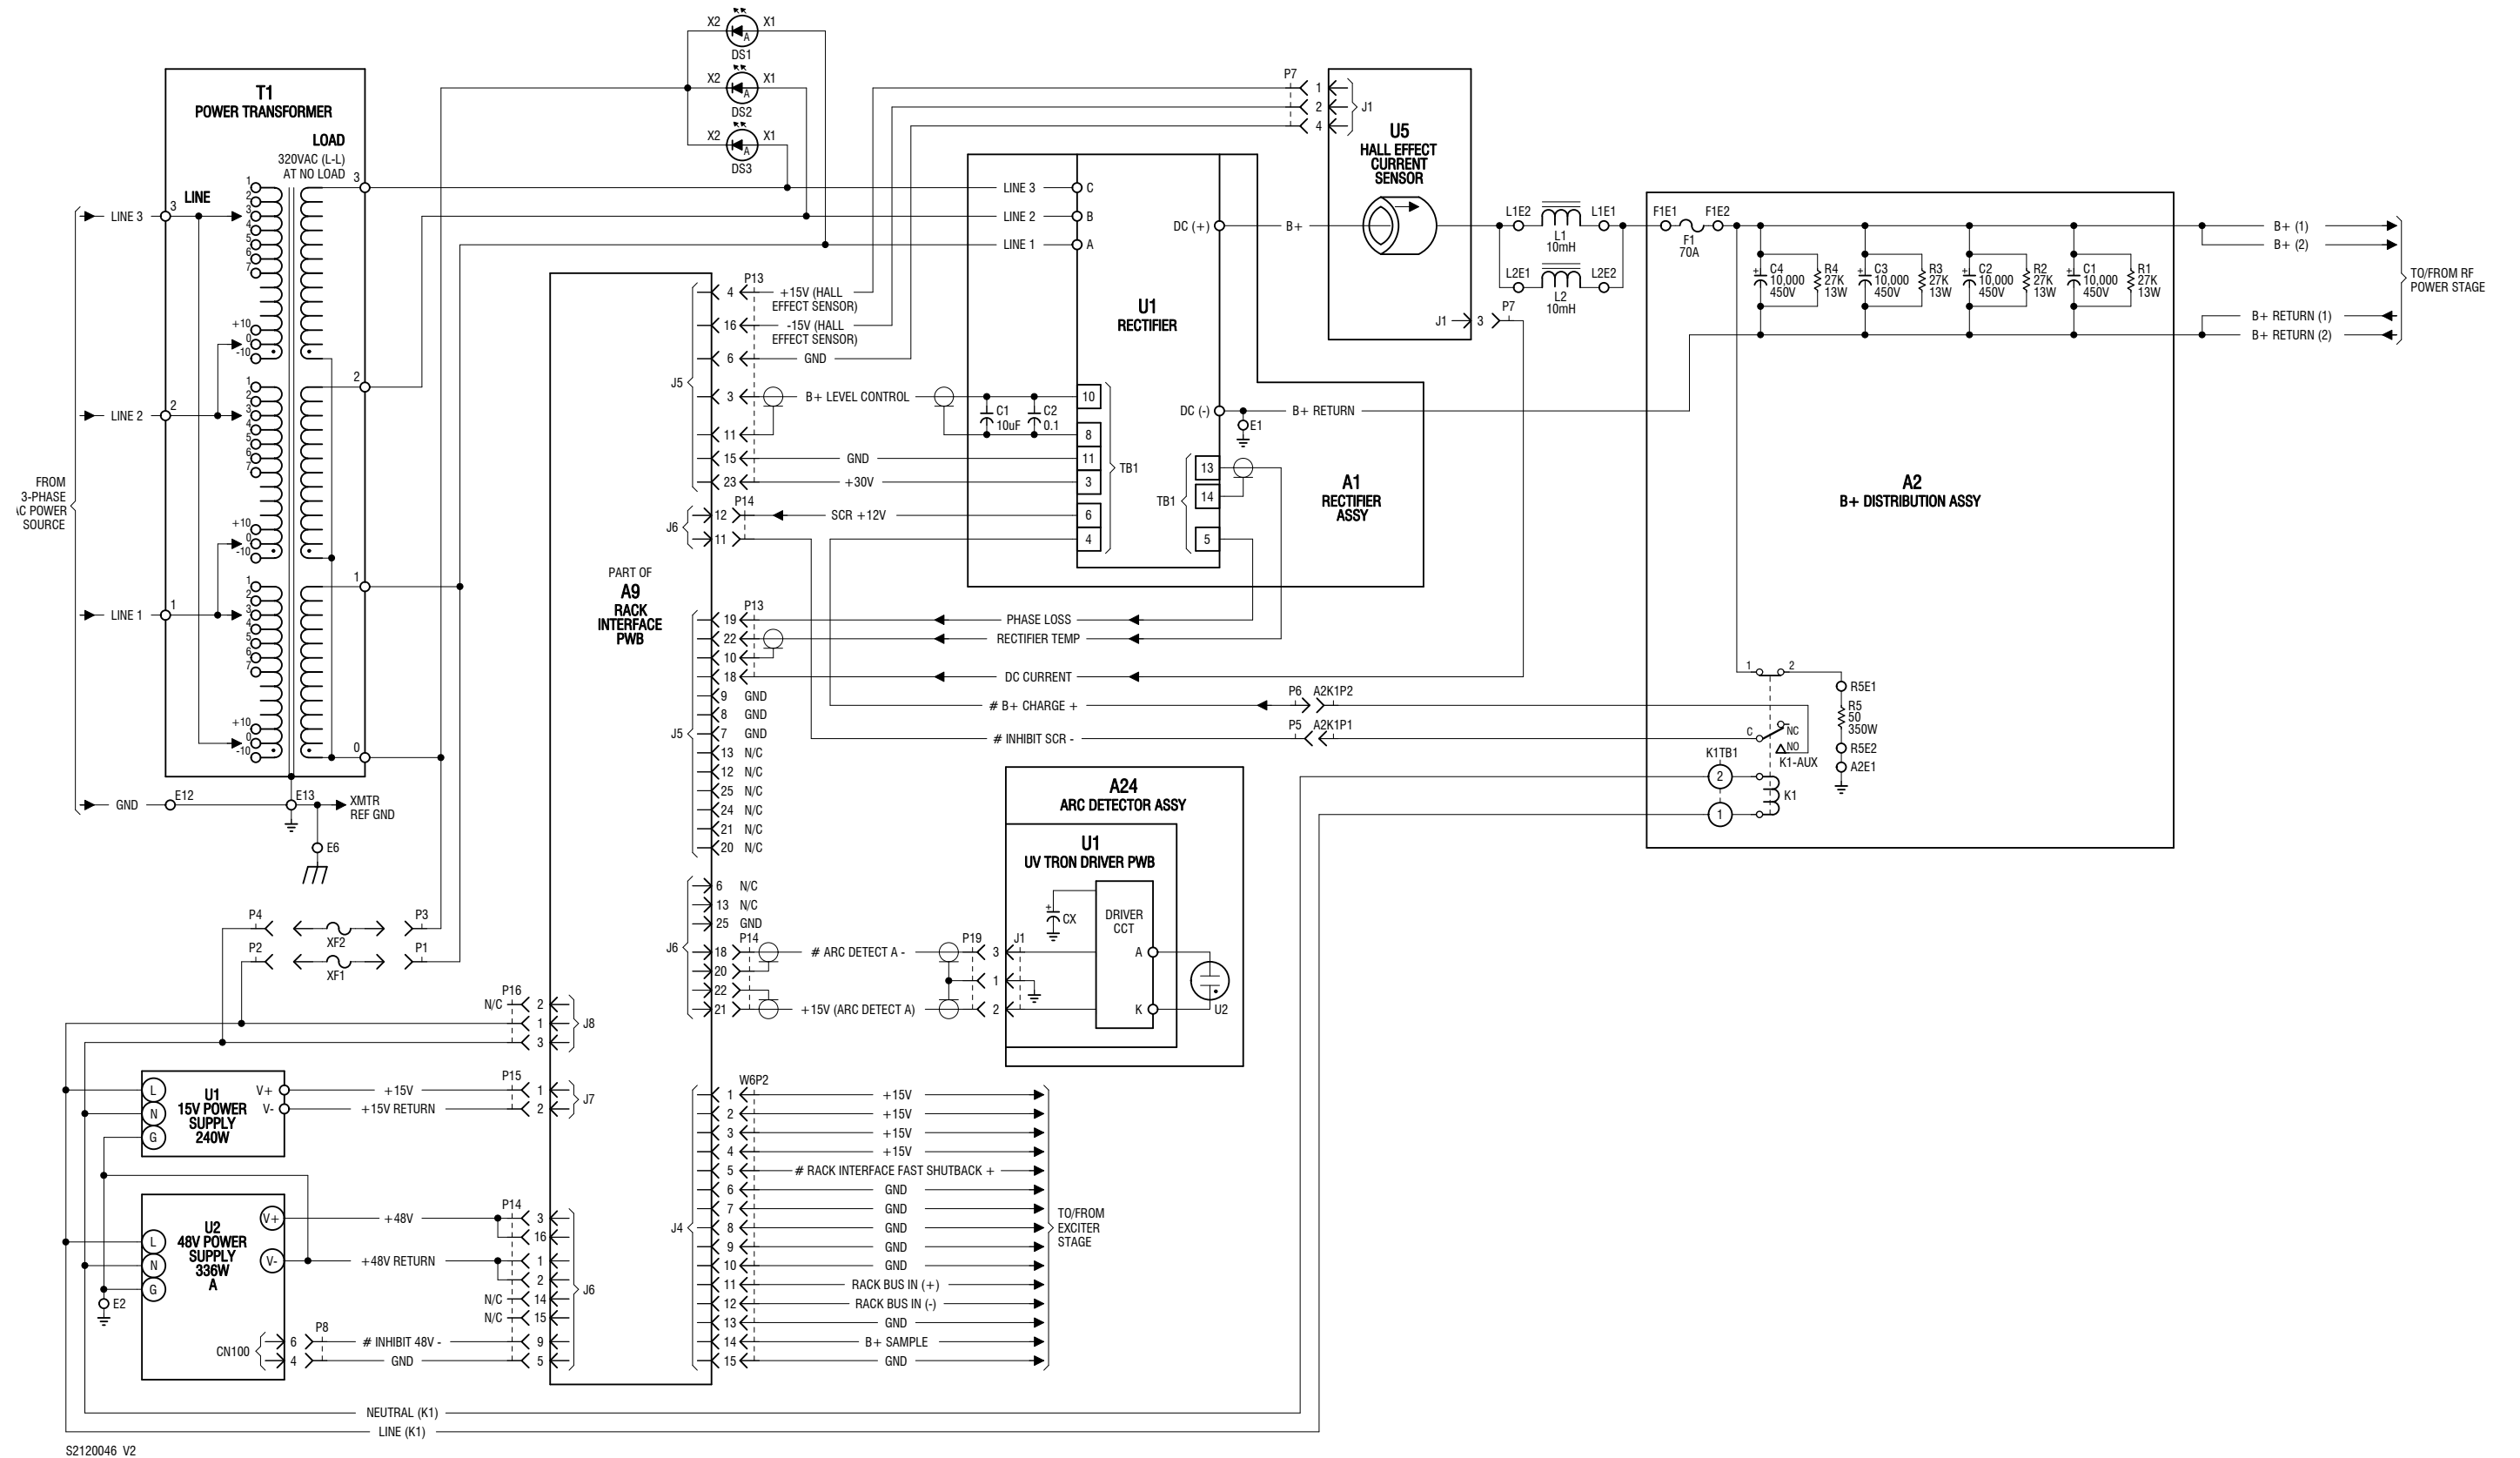


Figure SD-1: NX10 Transmitter - Ac-Dc Power Stage

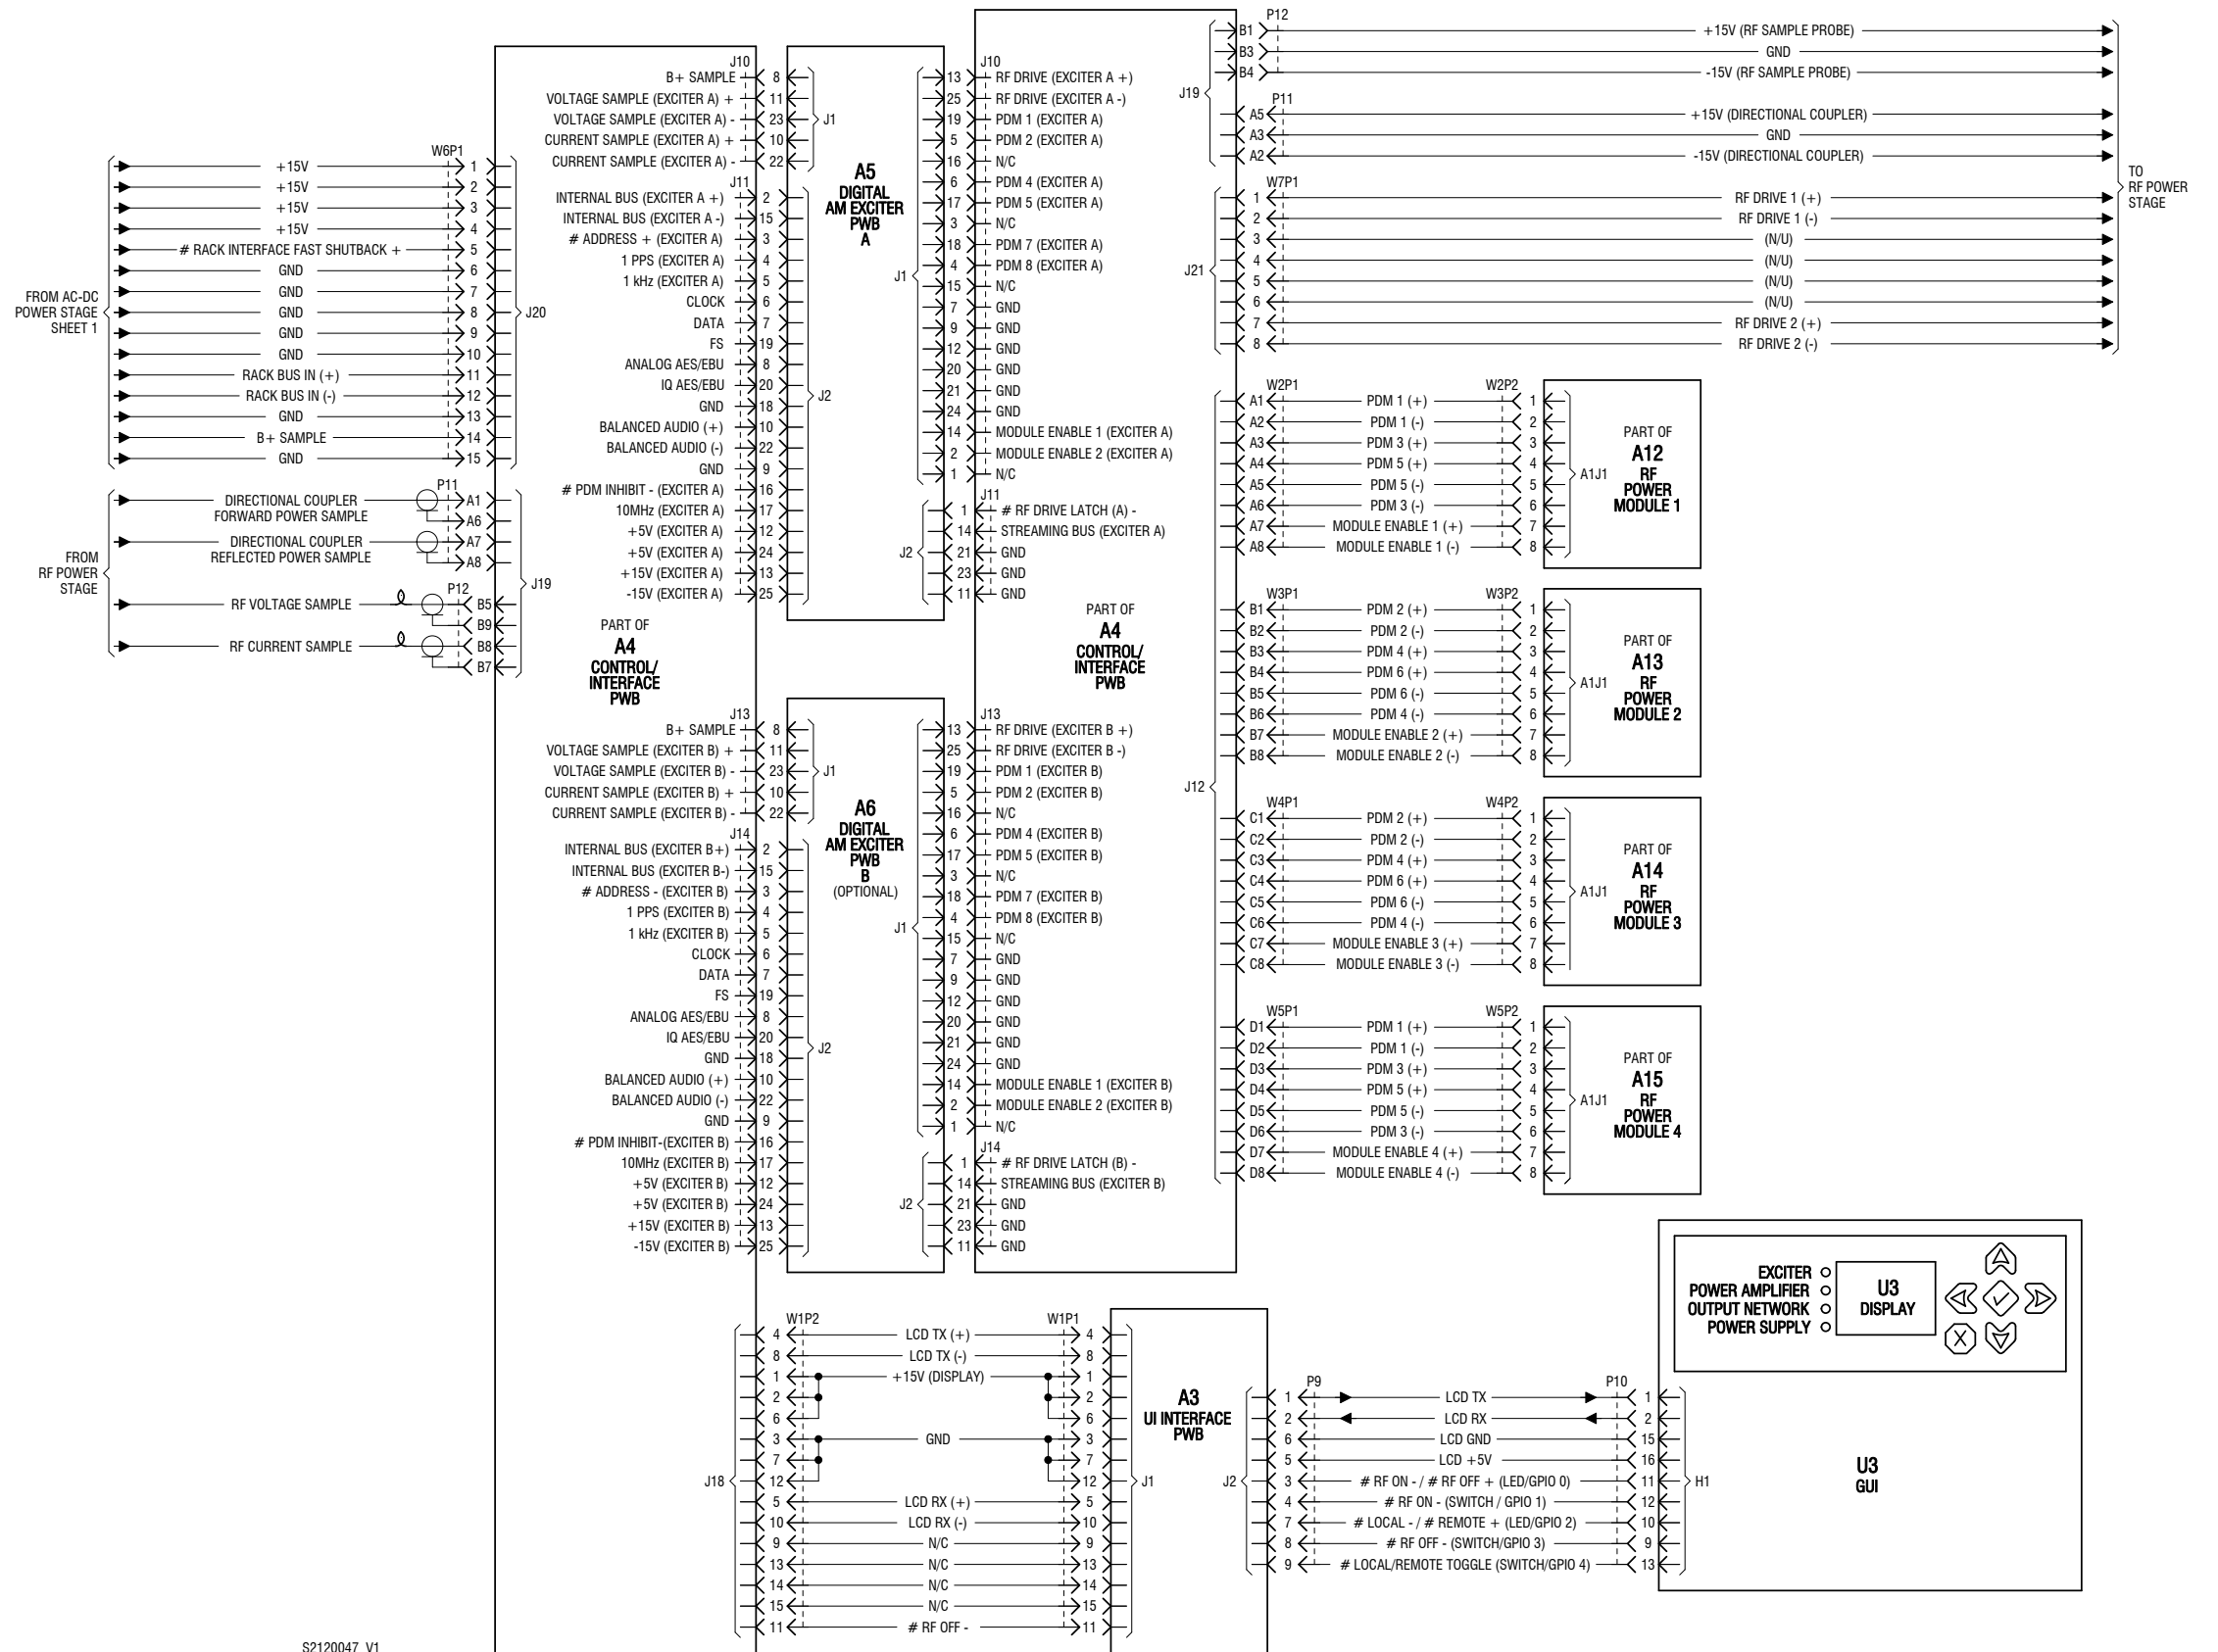

S2120047 V1

Figure SD-2: NX10 Transmitter - Exciter Stage



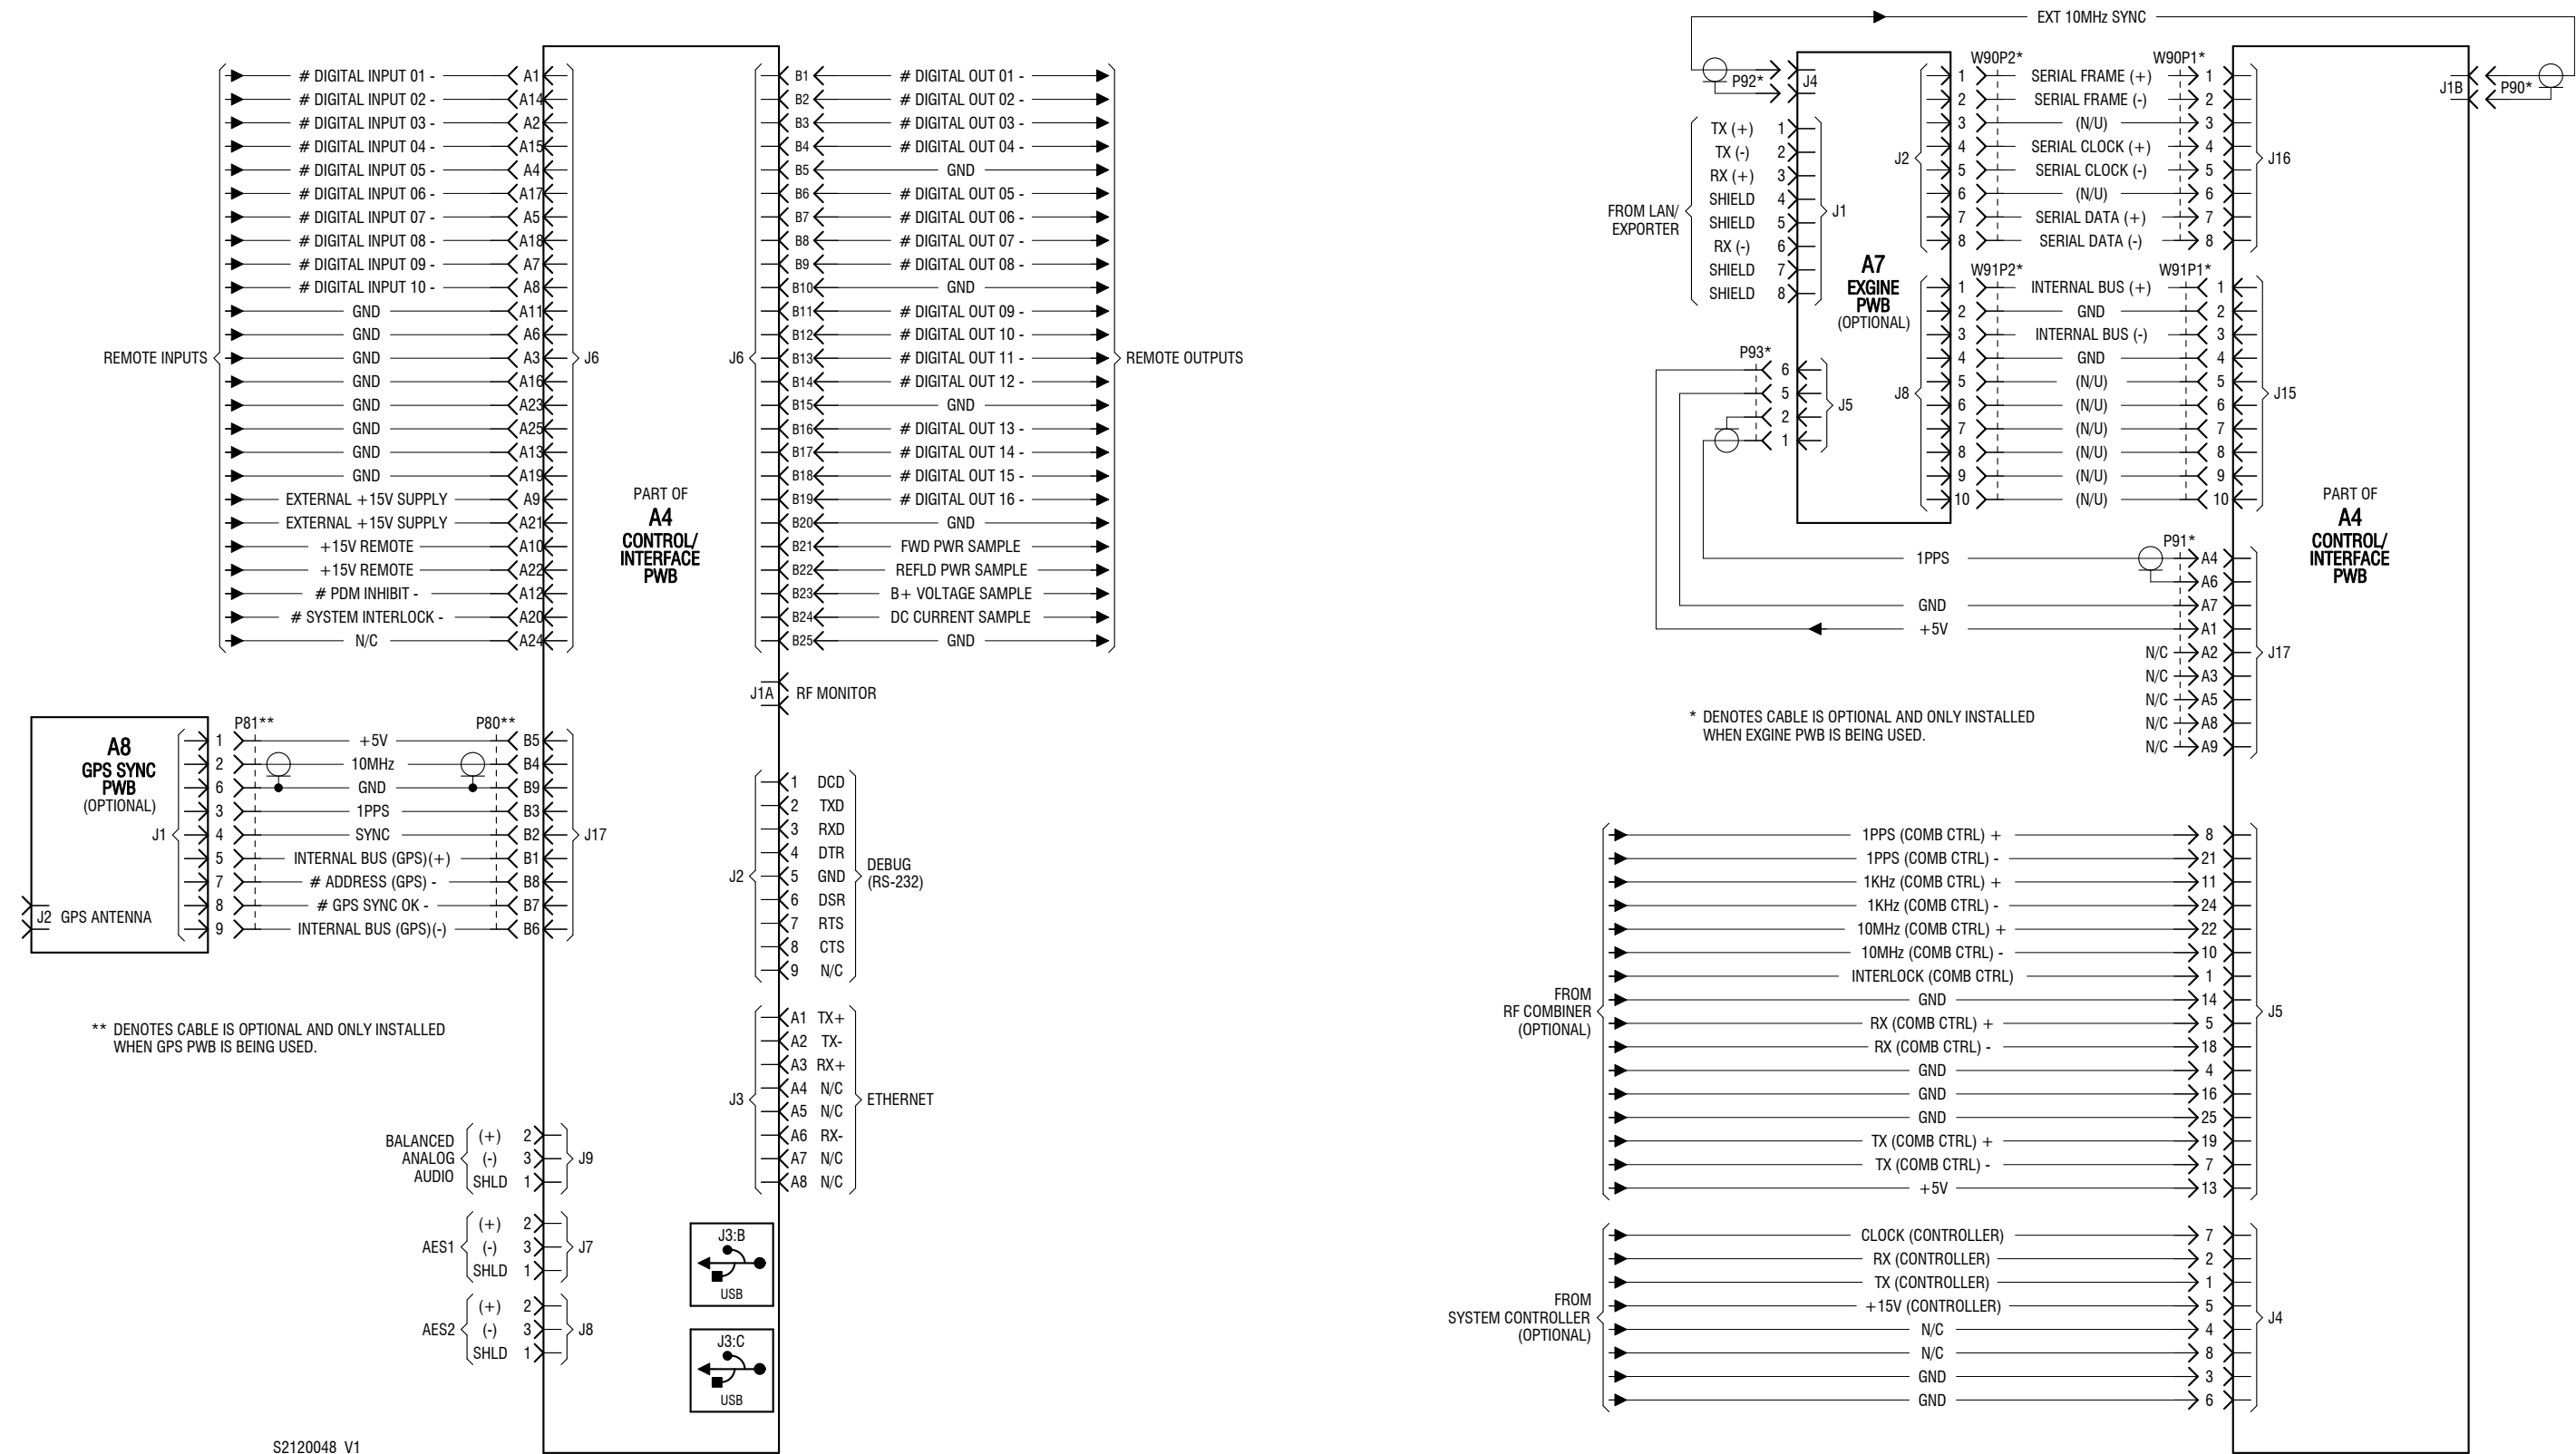


Figure SD-3: NX10 Transmitter - Control/Monitor Stage



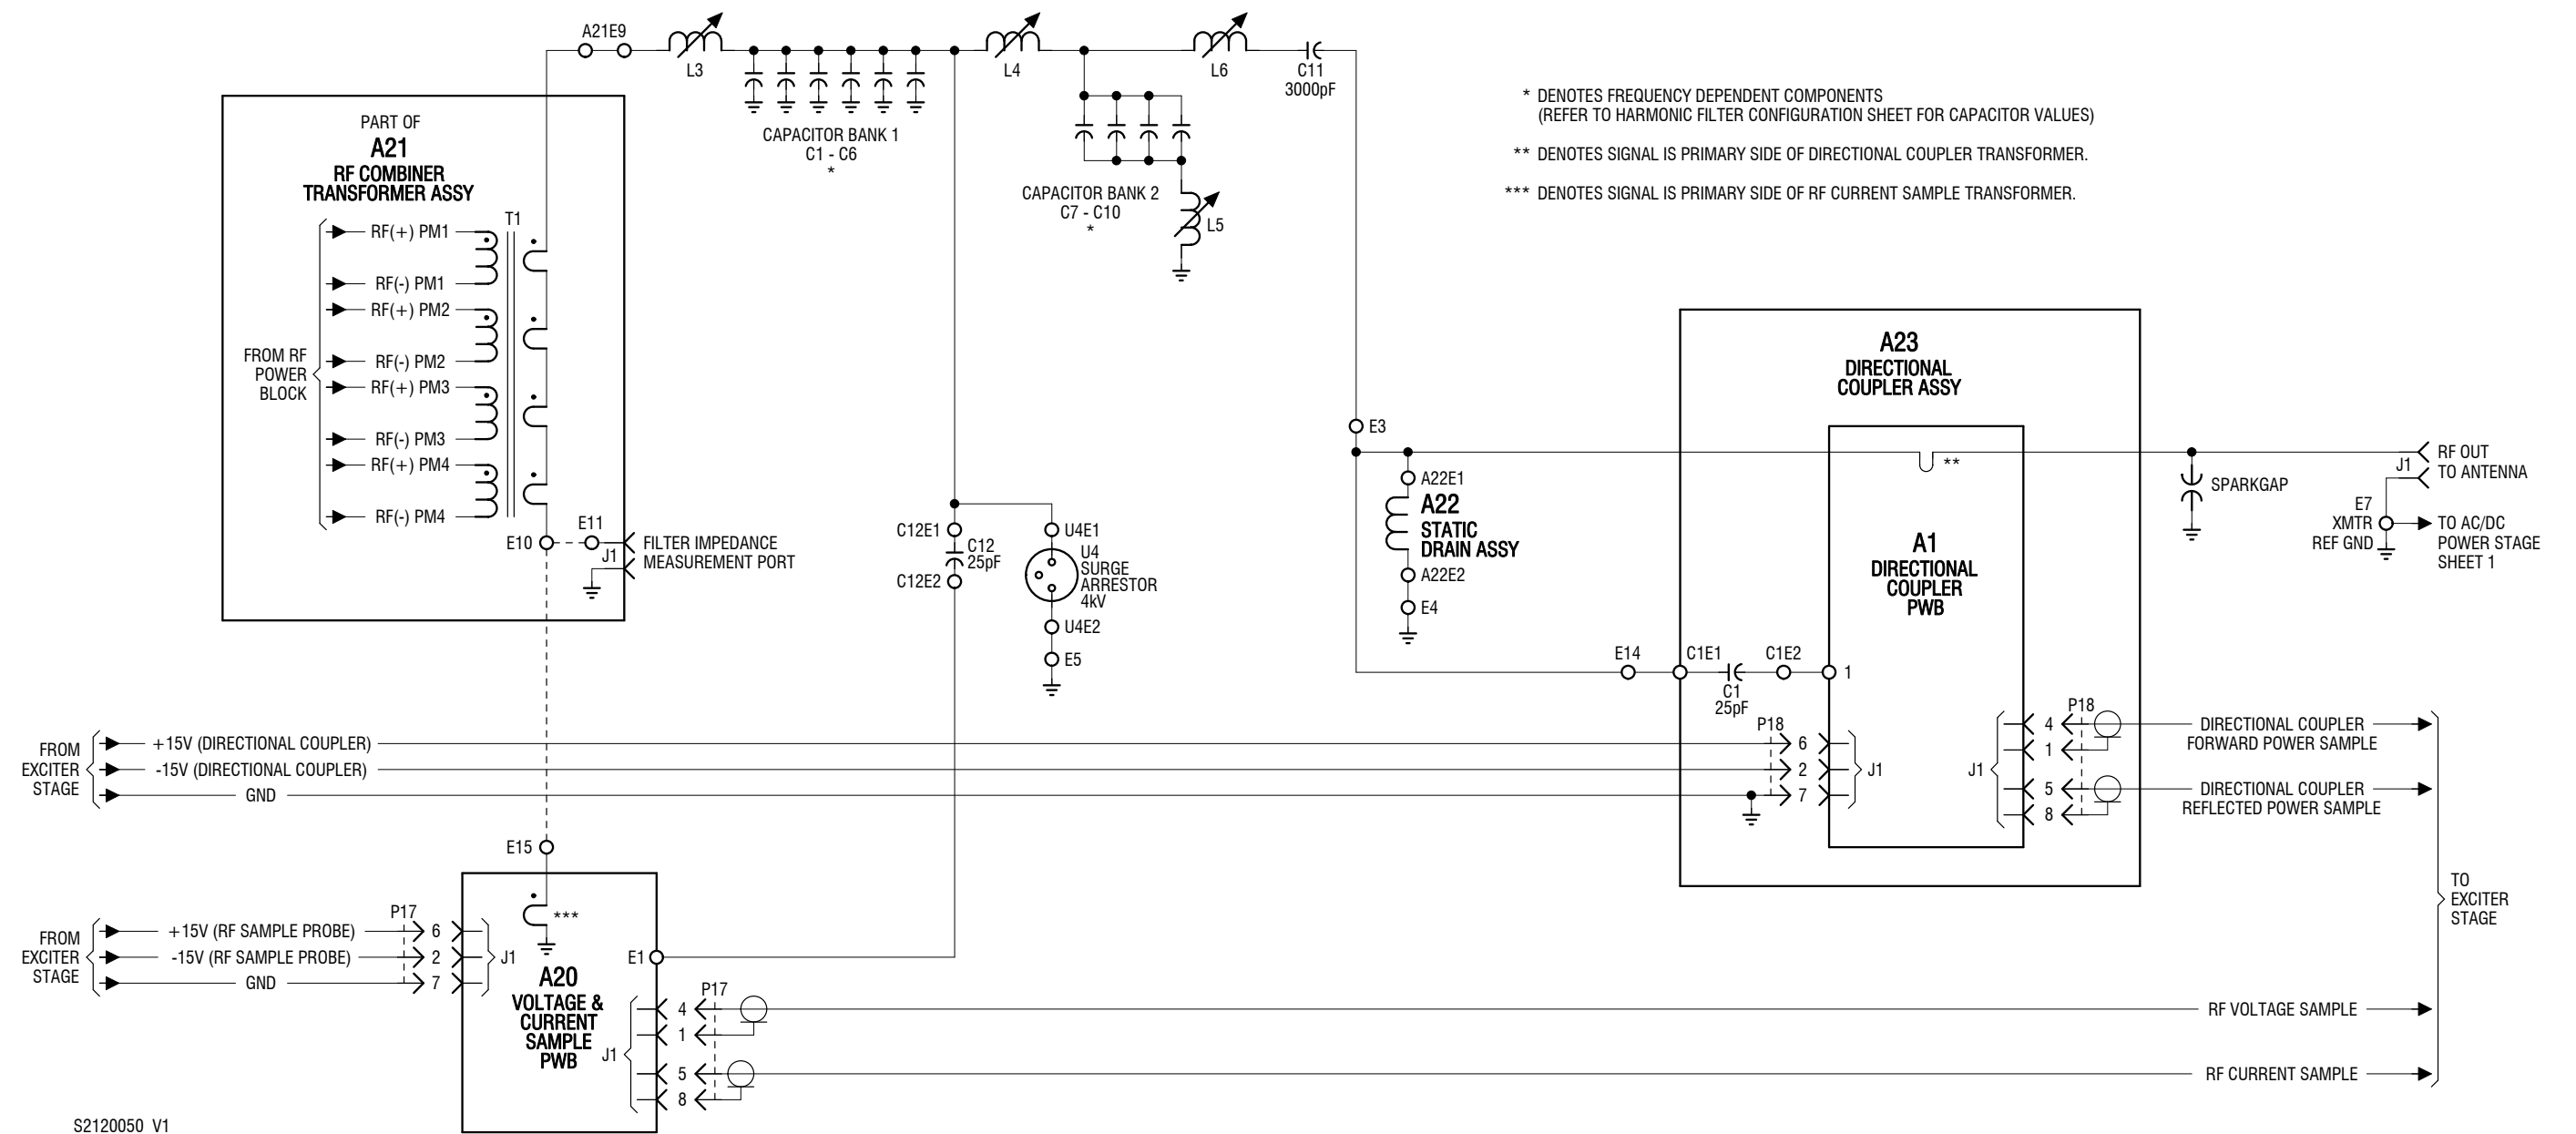

S2120050 V1

Figure SD-5: RF Power Stage, RF Output Filter (Sheet 2 of 2)

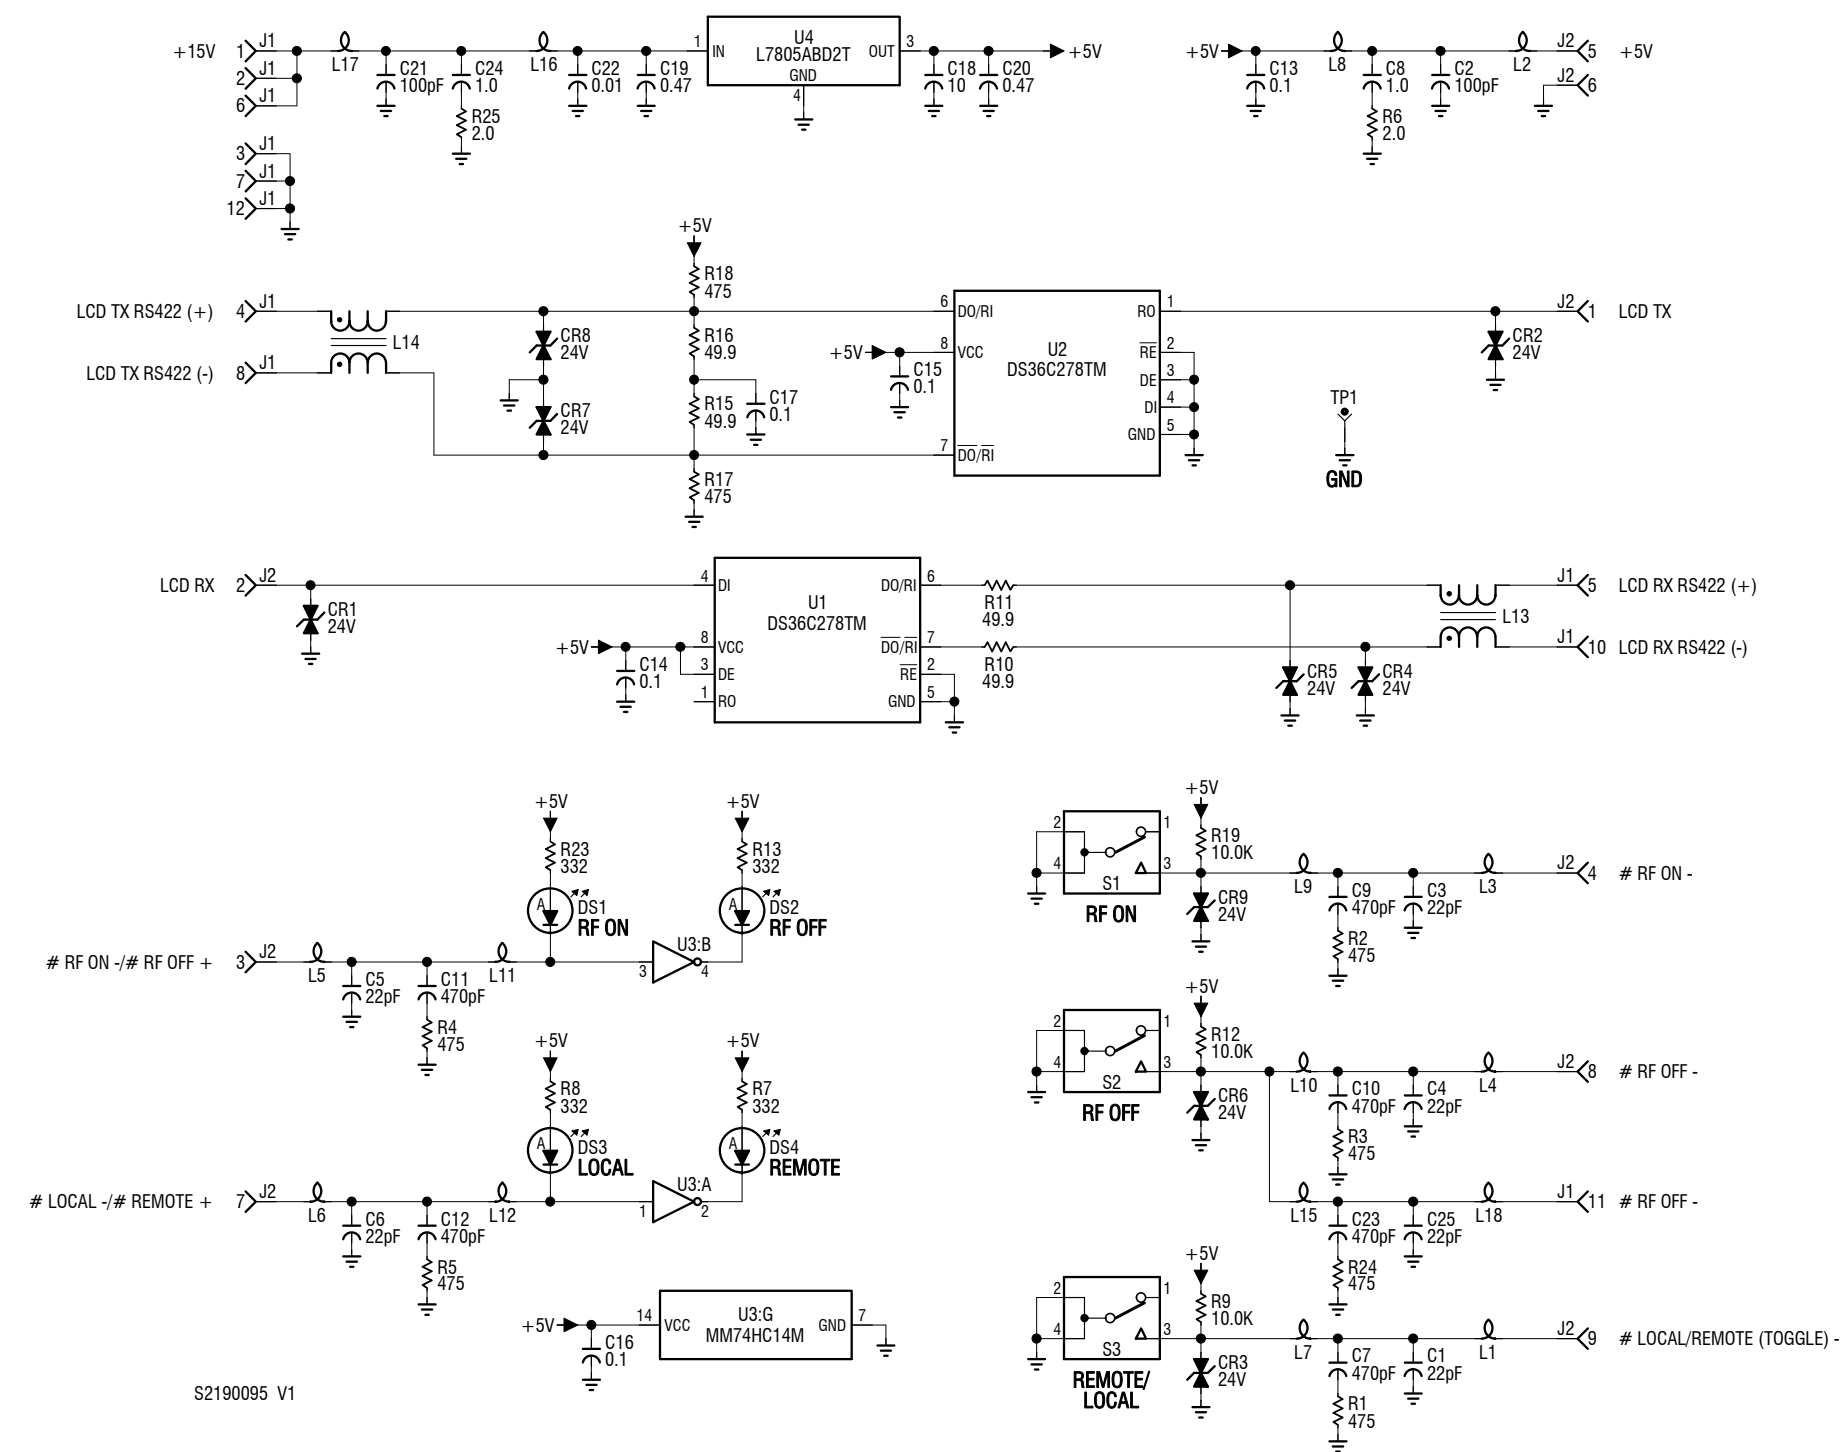


Figure SD-6: NAPI142A UI Interface PWB

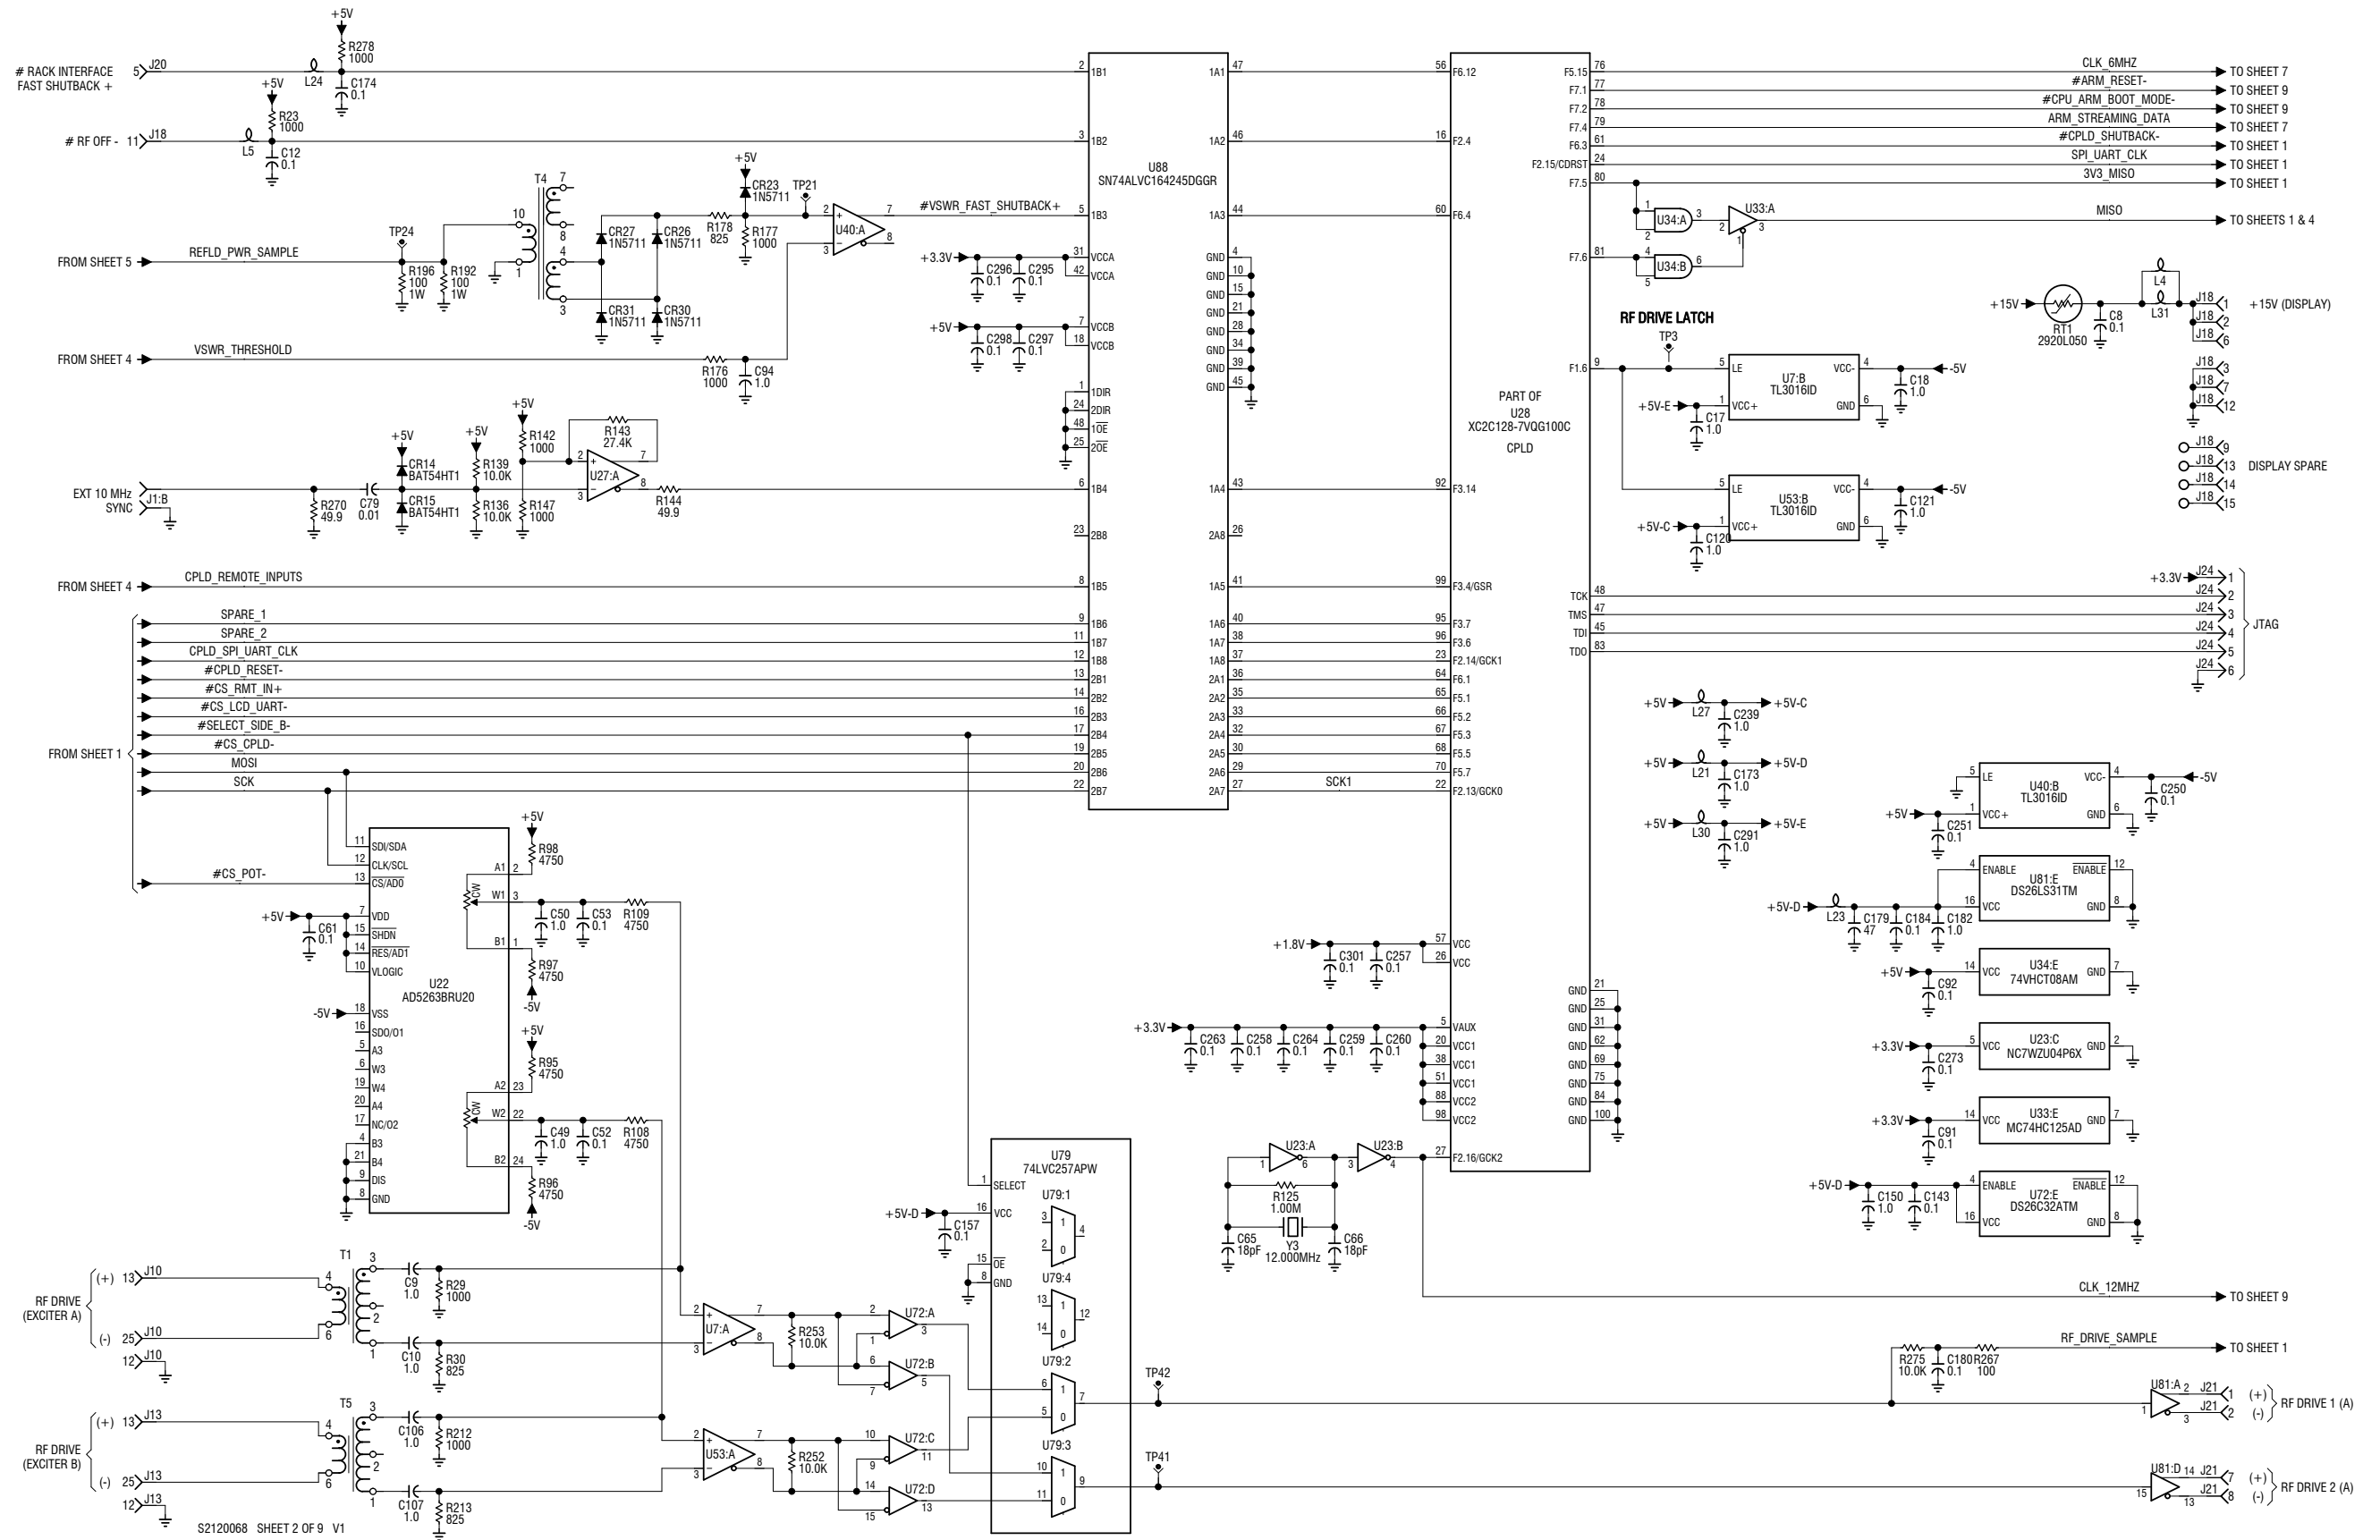


Figure SD-8: NAPC168A Control/Interface PWB (Sheet 2 of 9)



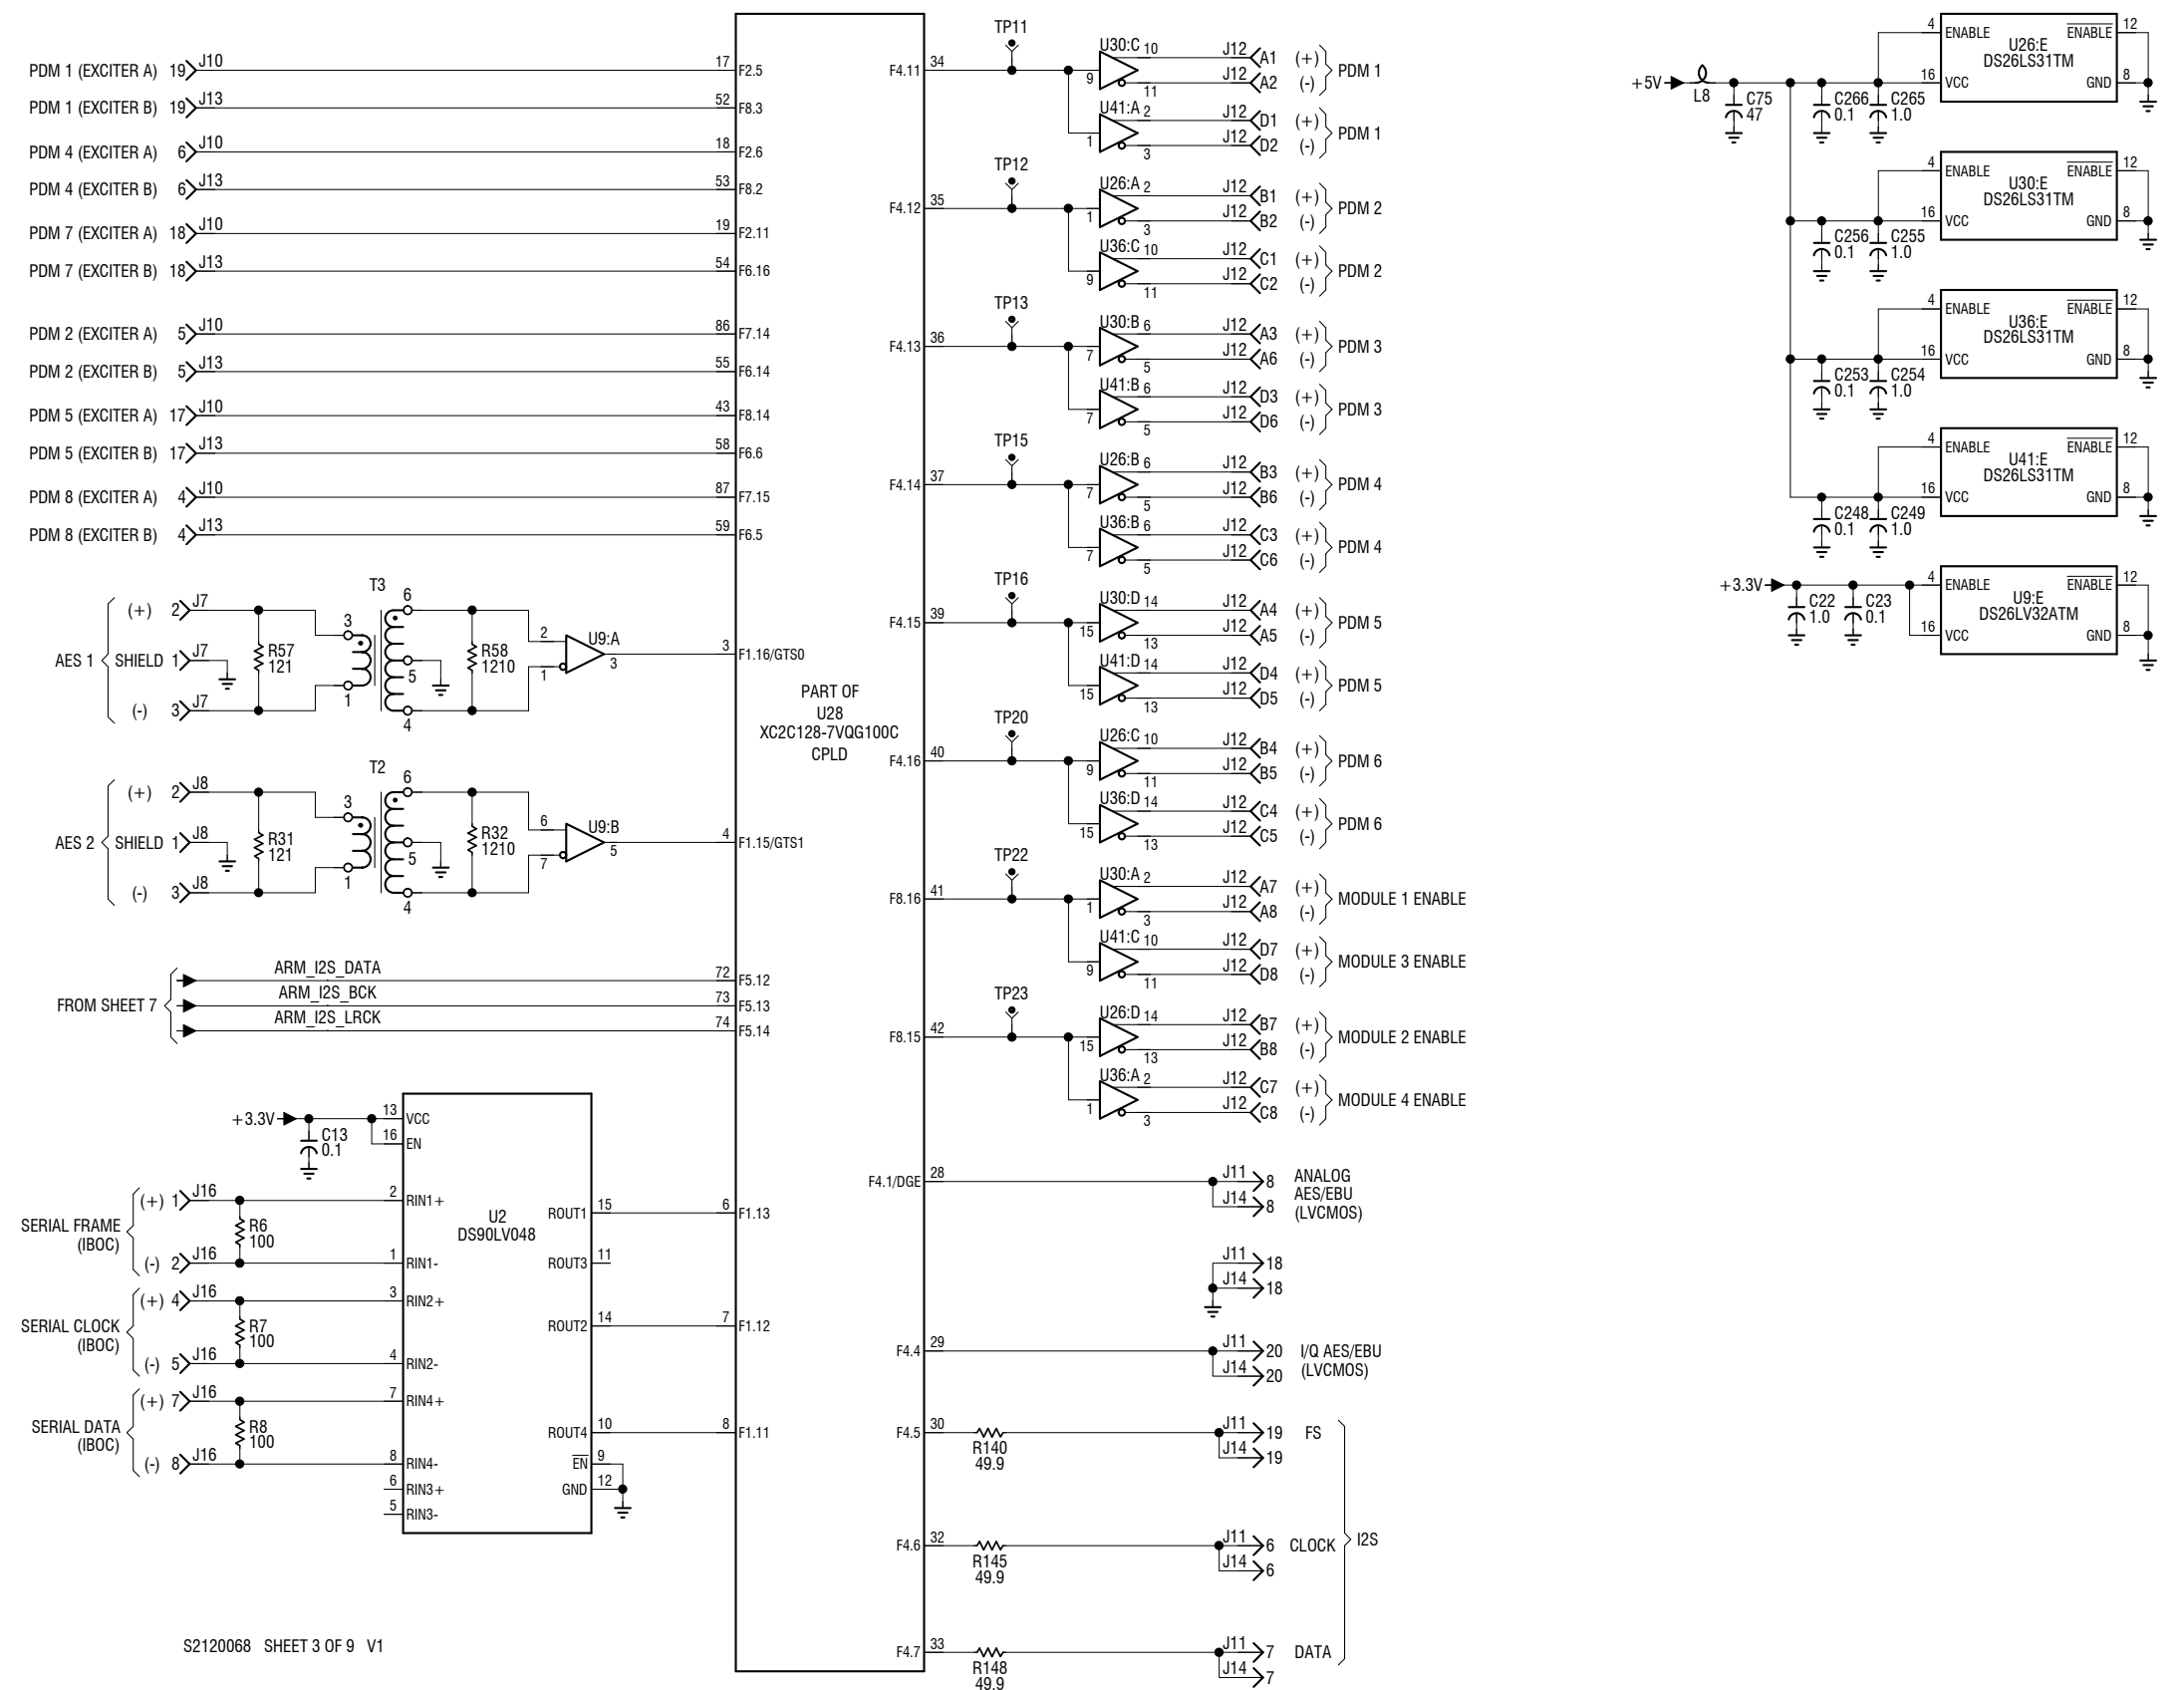


Figure SD-9: NAPC168A Control/Interface PWB (Sheet 3 of 9)

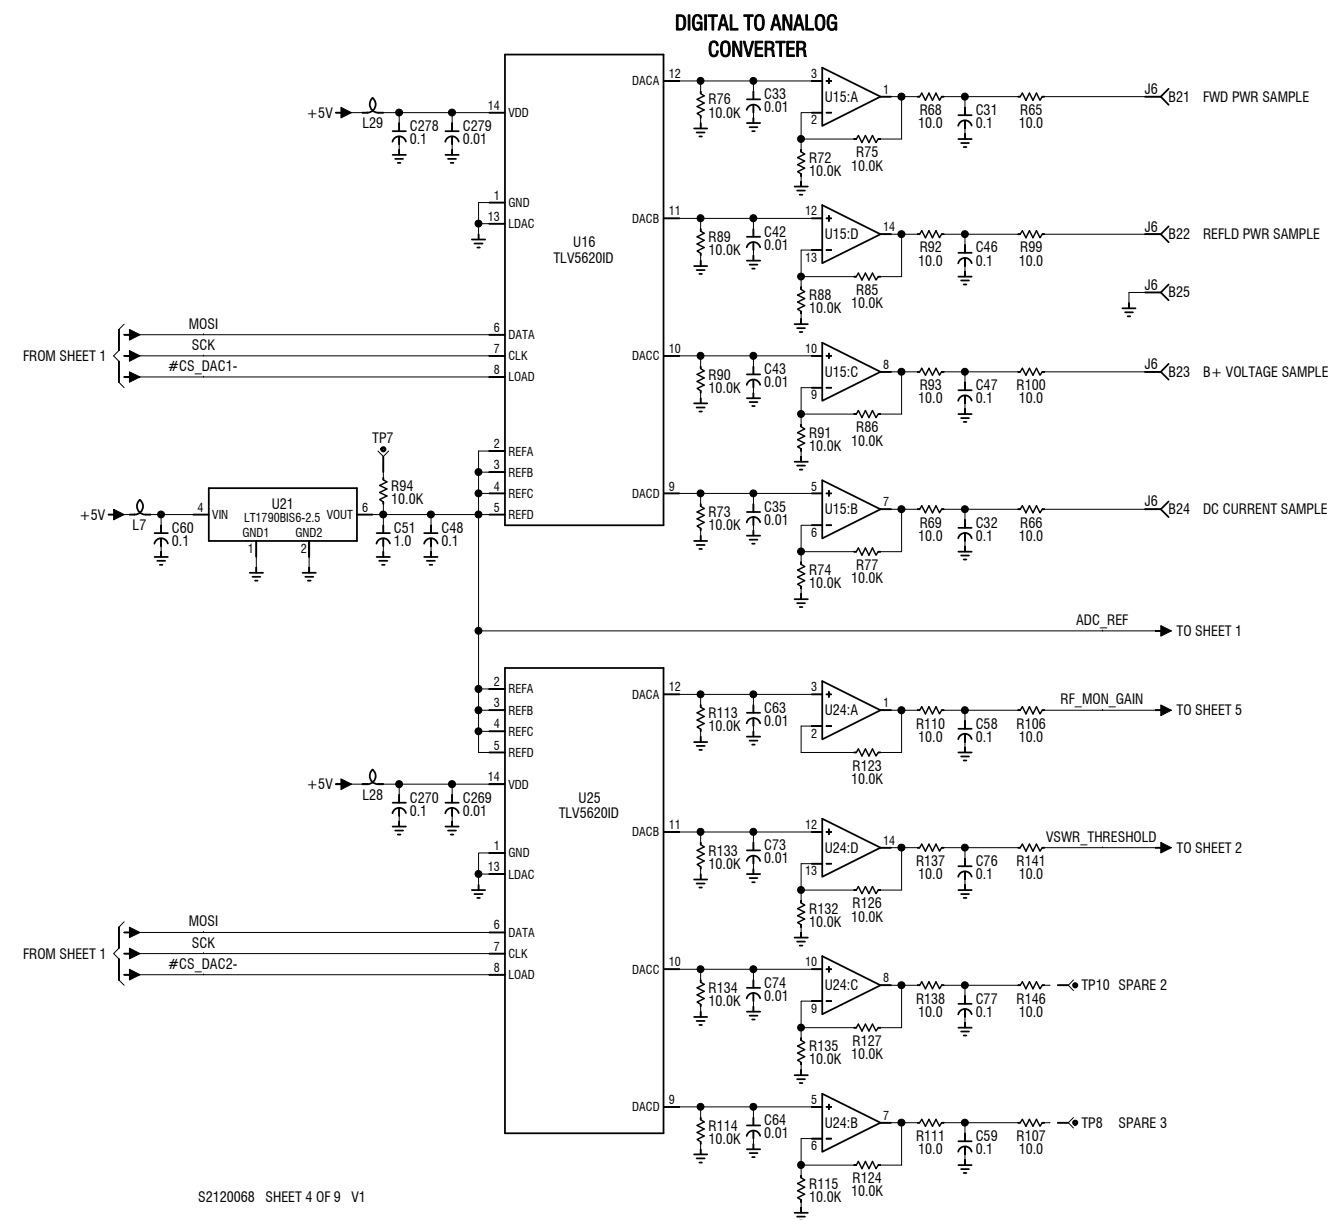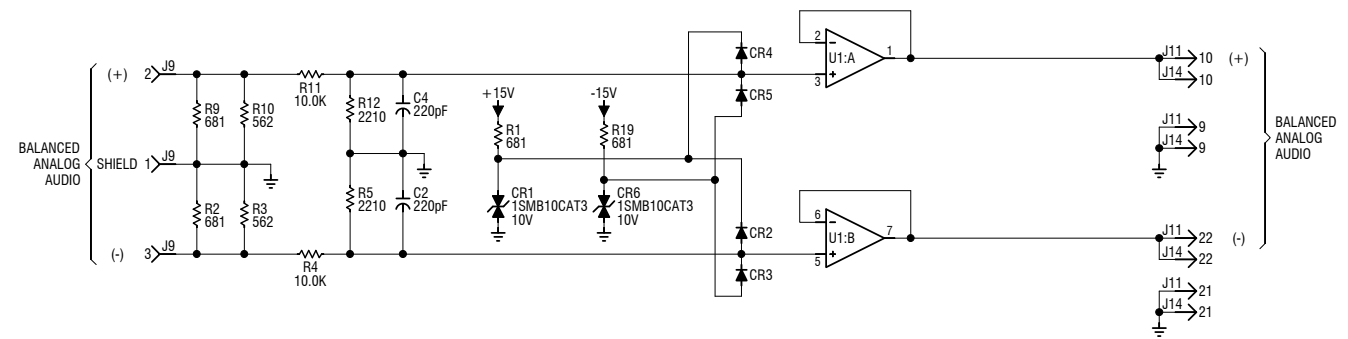

S2120068 SHEET 4 OF 9 V1

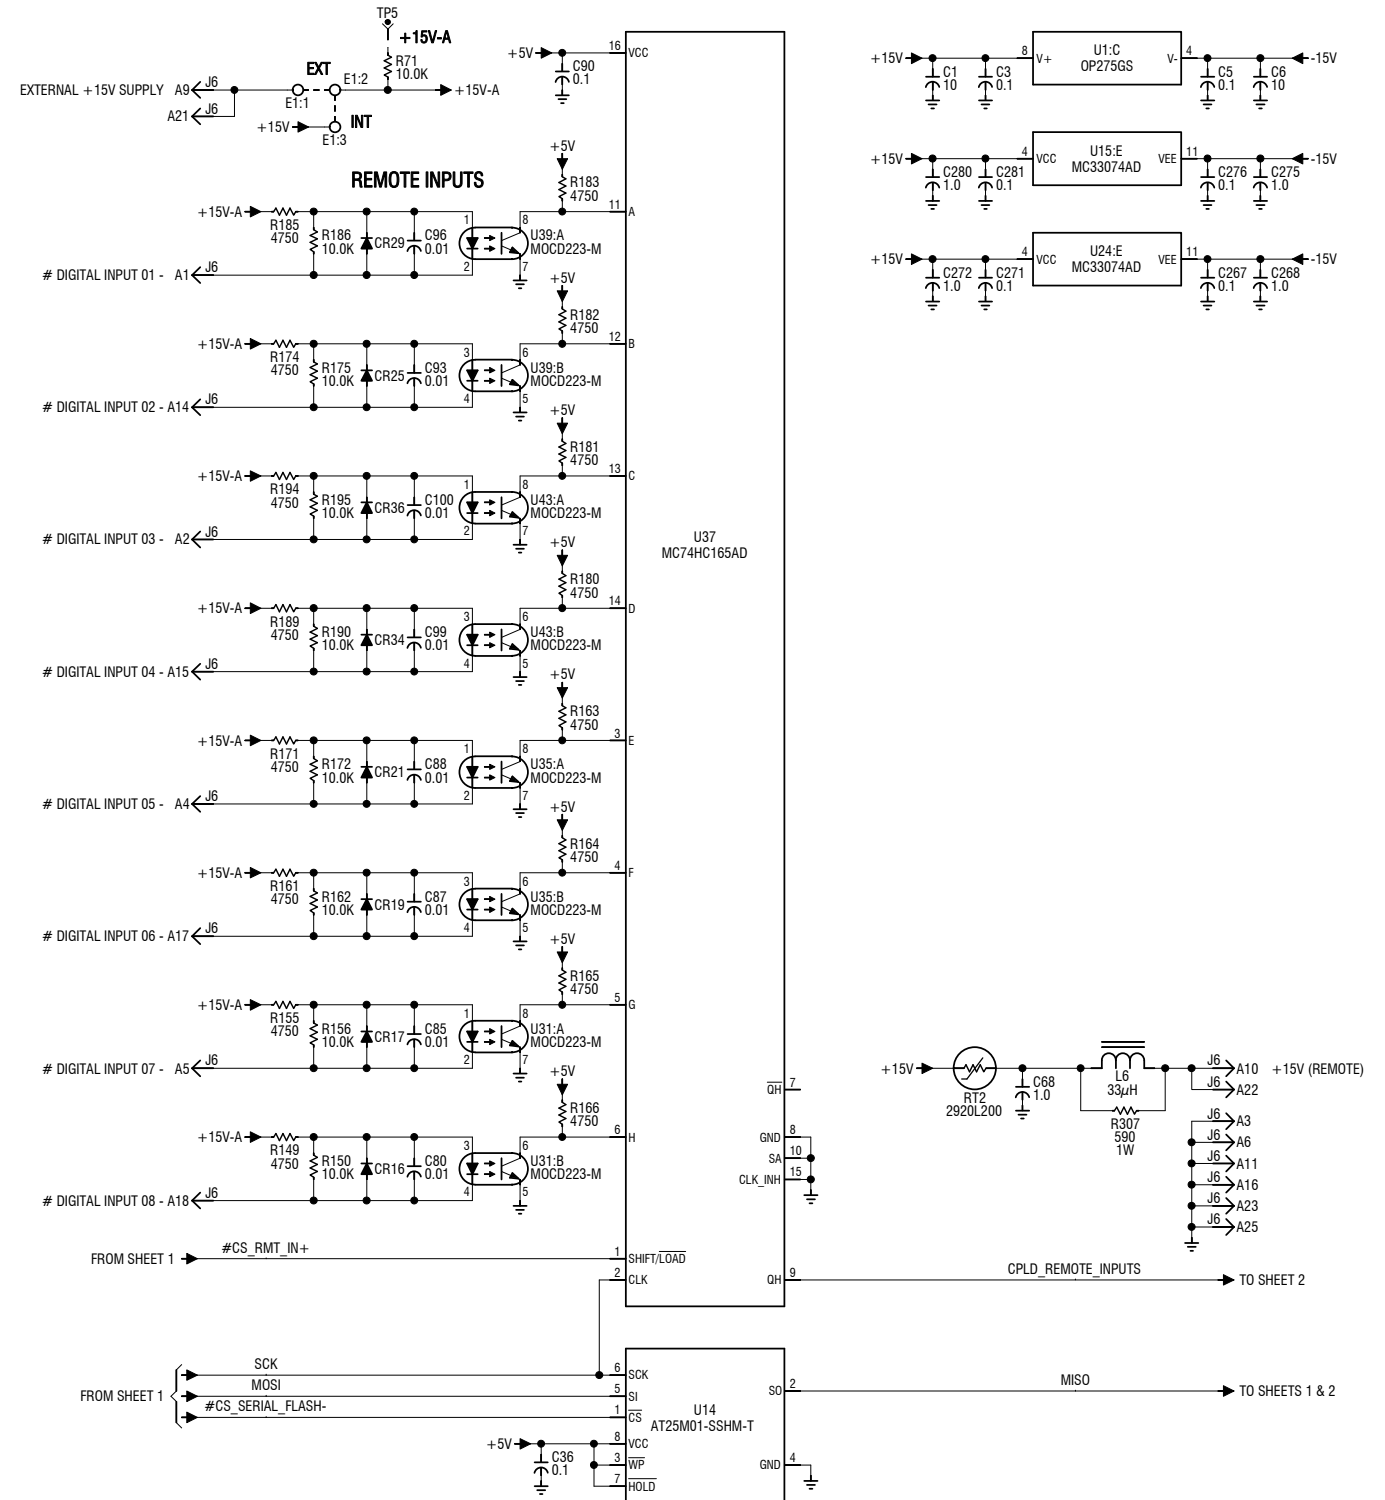


Figure SD-10: NAPC168A Control/Interface PWB (Sheet 4 of 9)



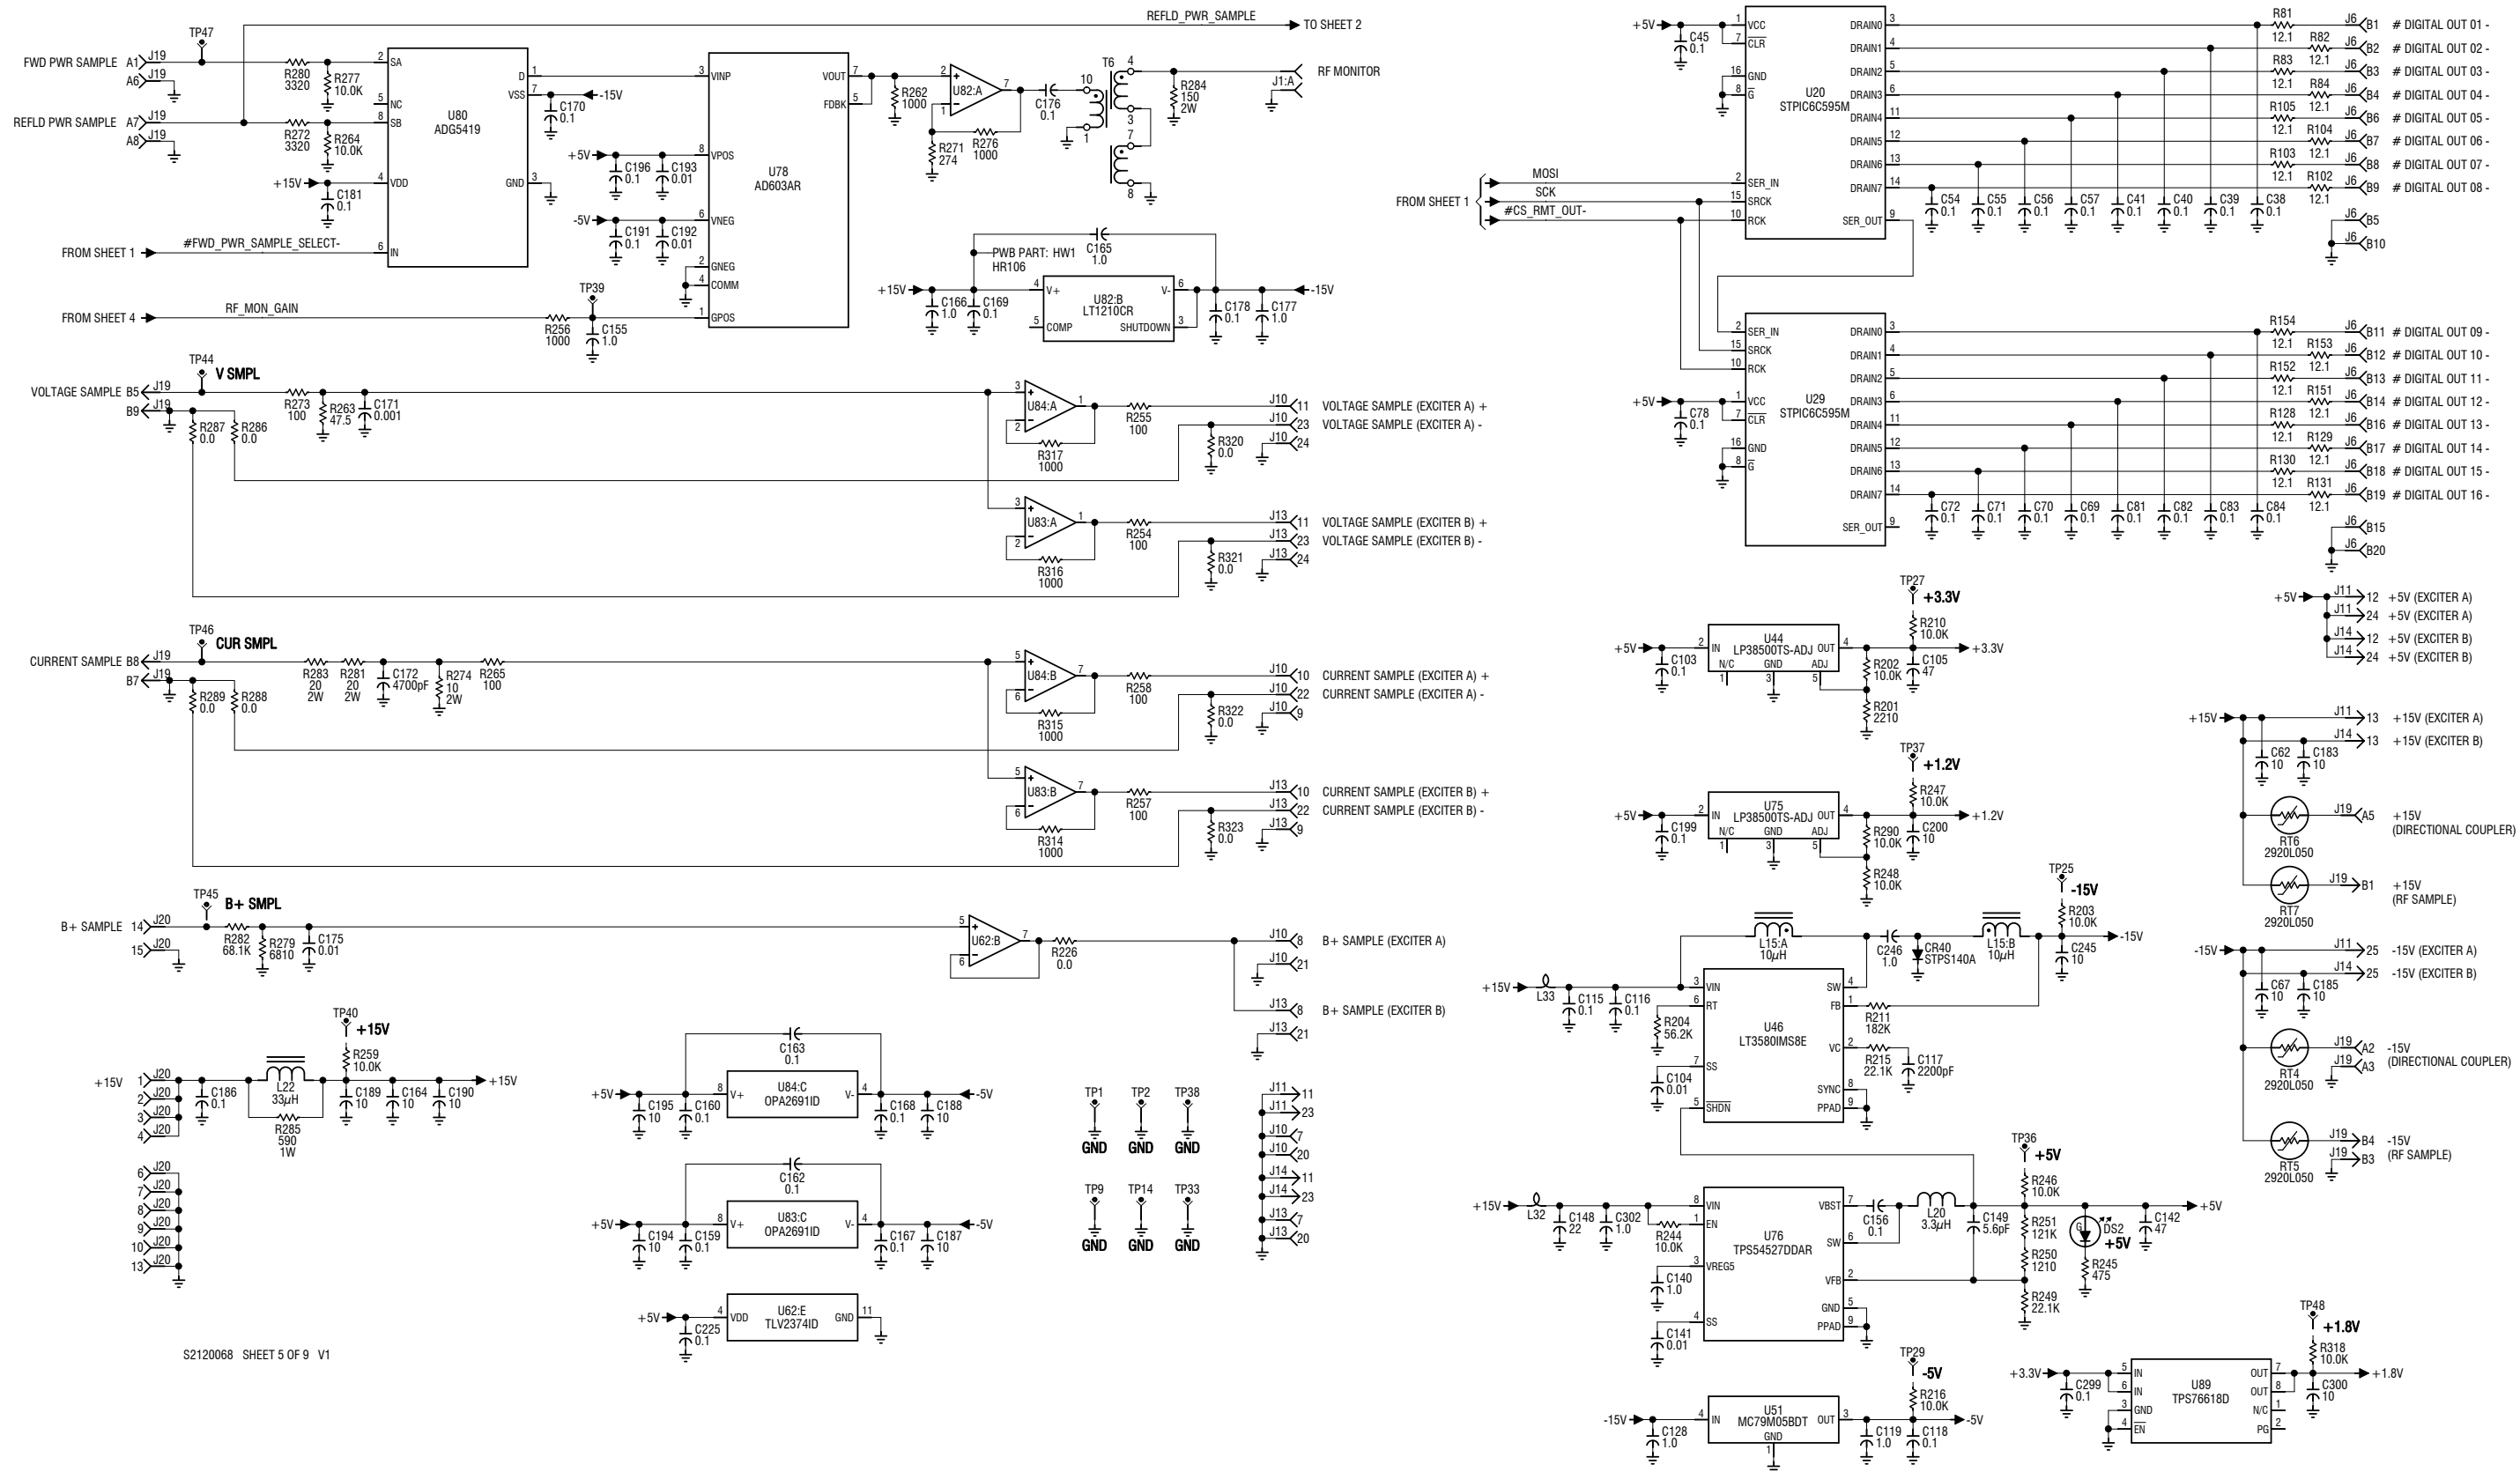



Figure SD-11: NAPC168A Control/Interface PWB (Sheet 5 of 9)

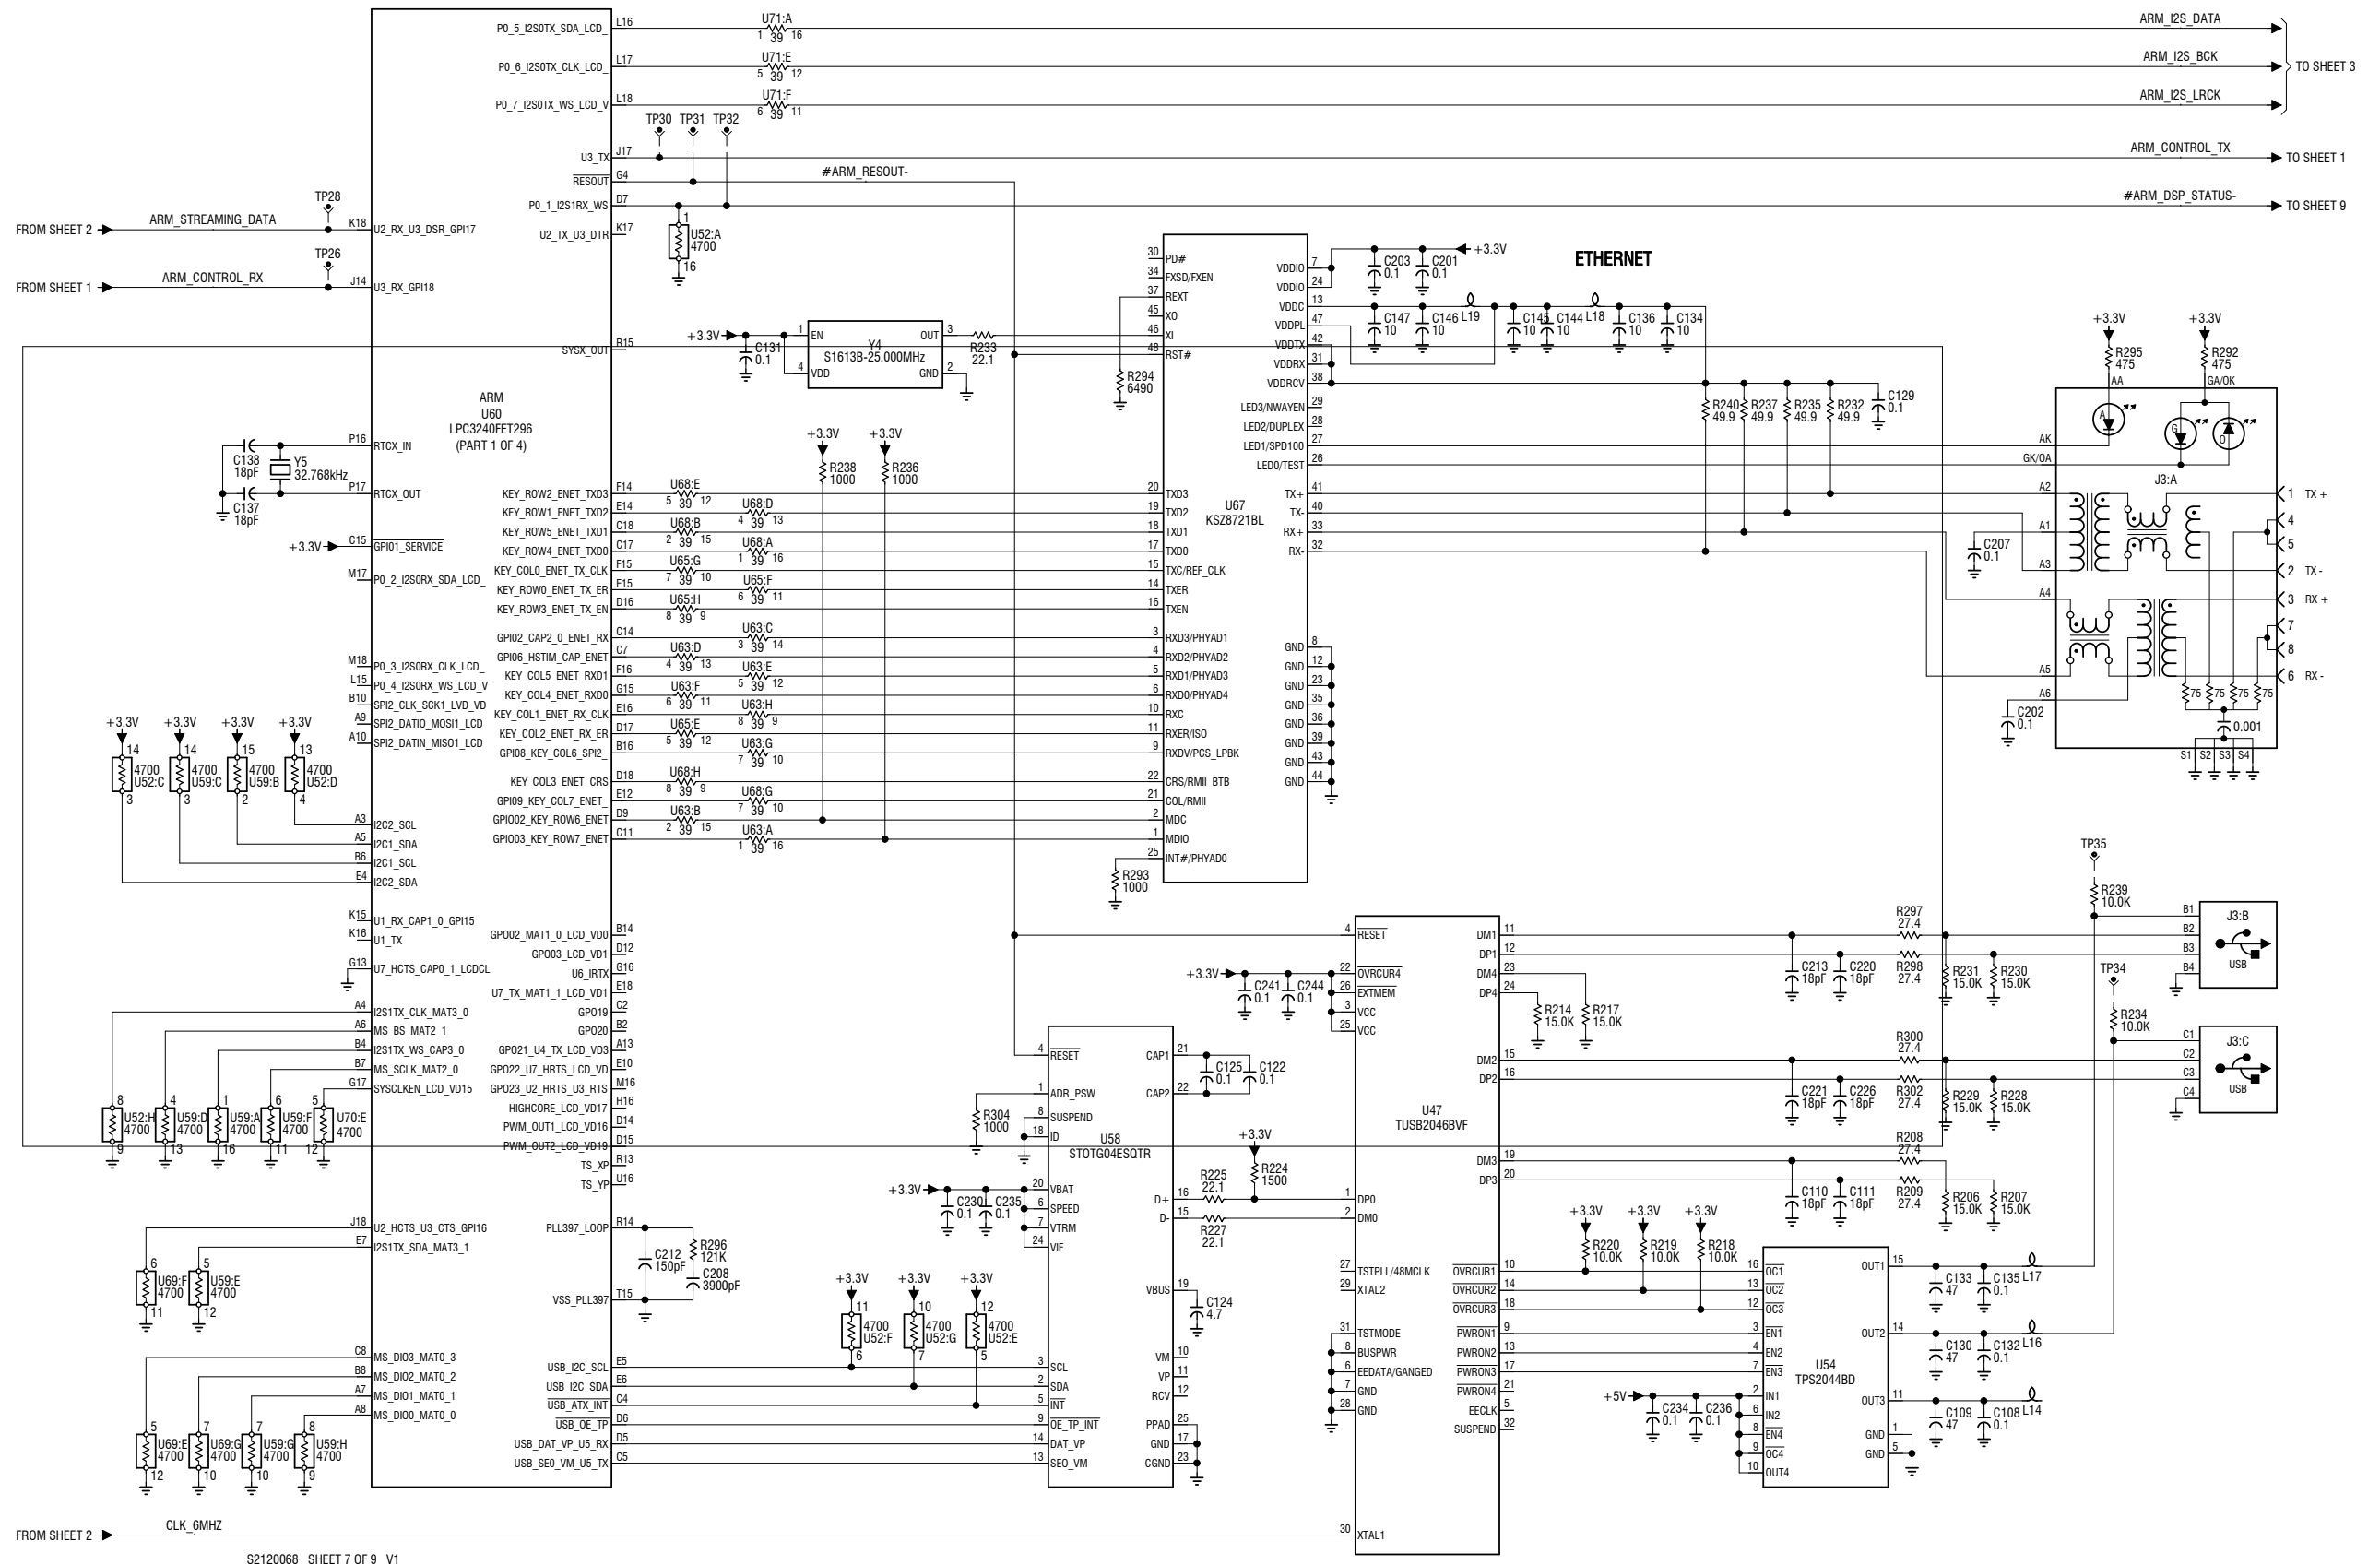

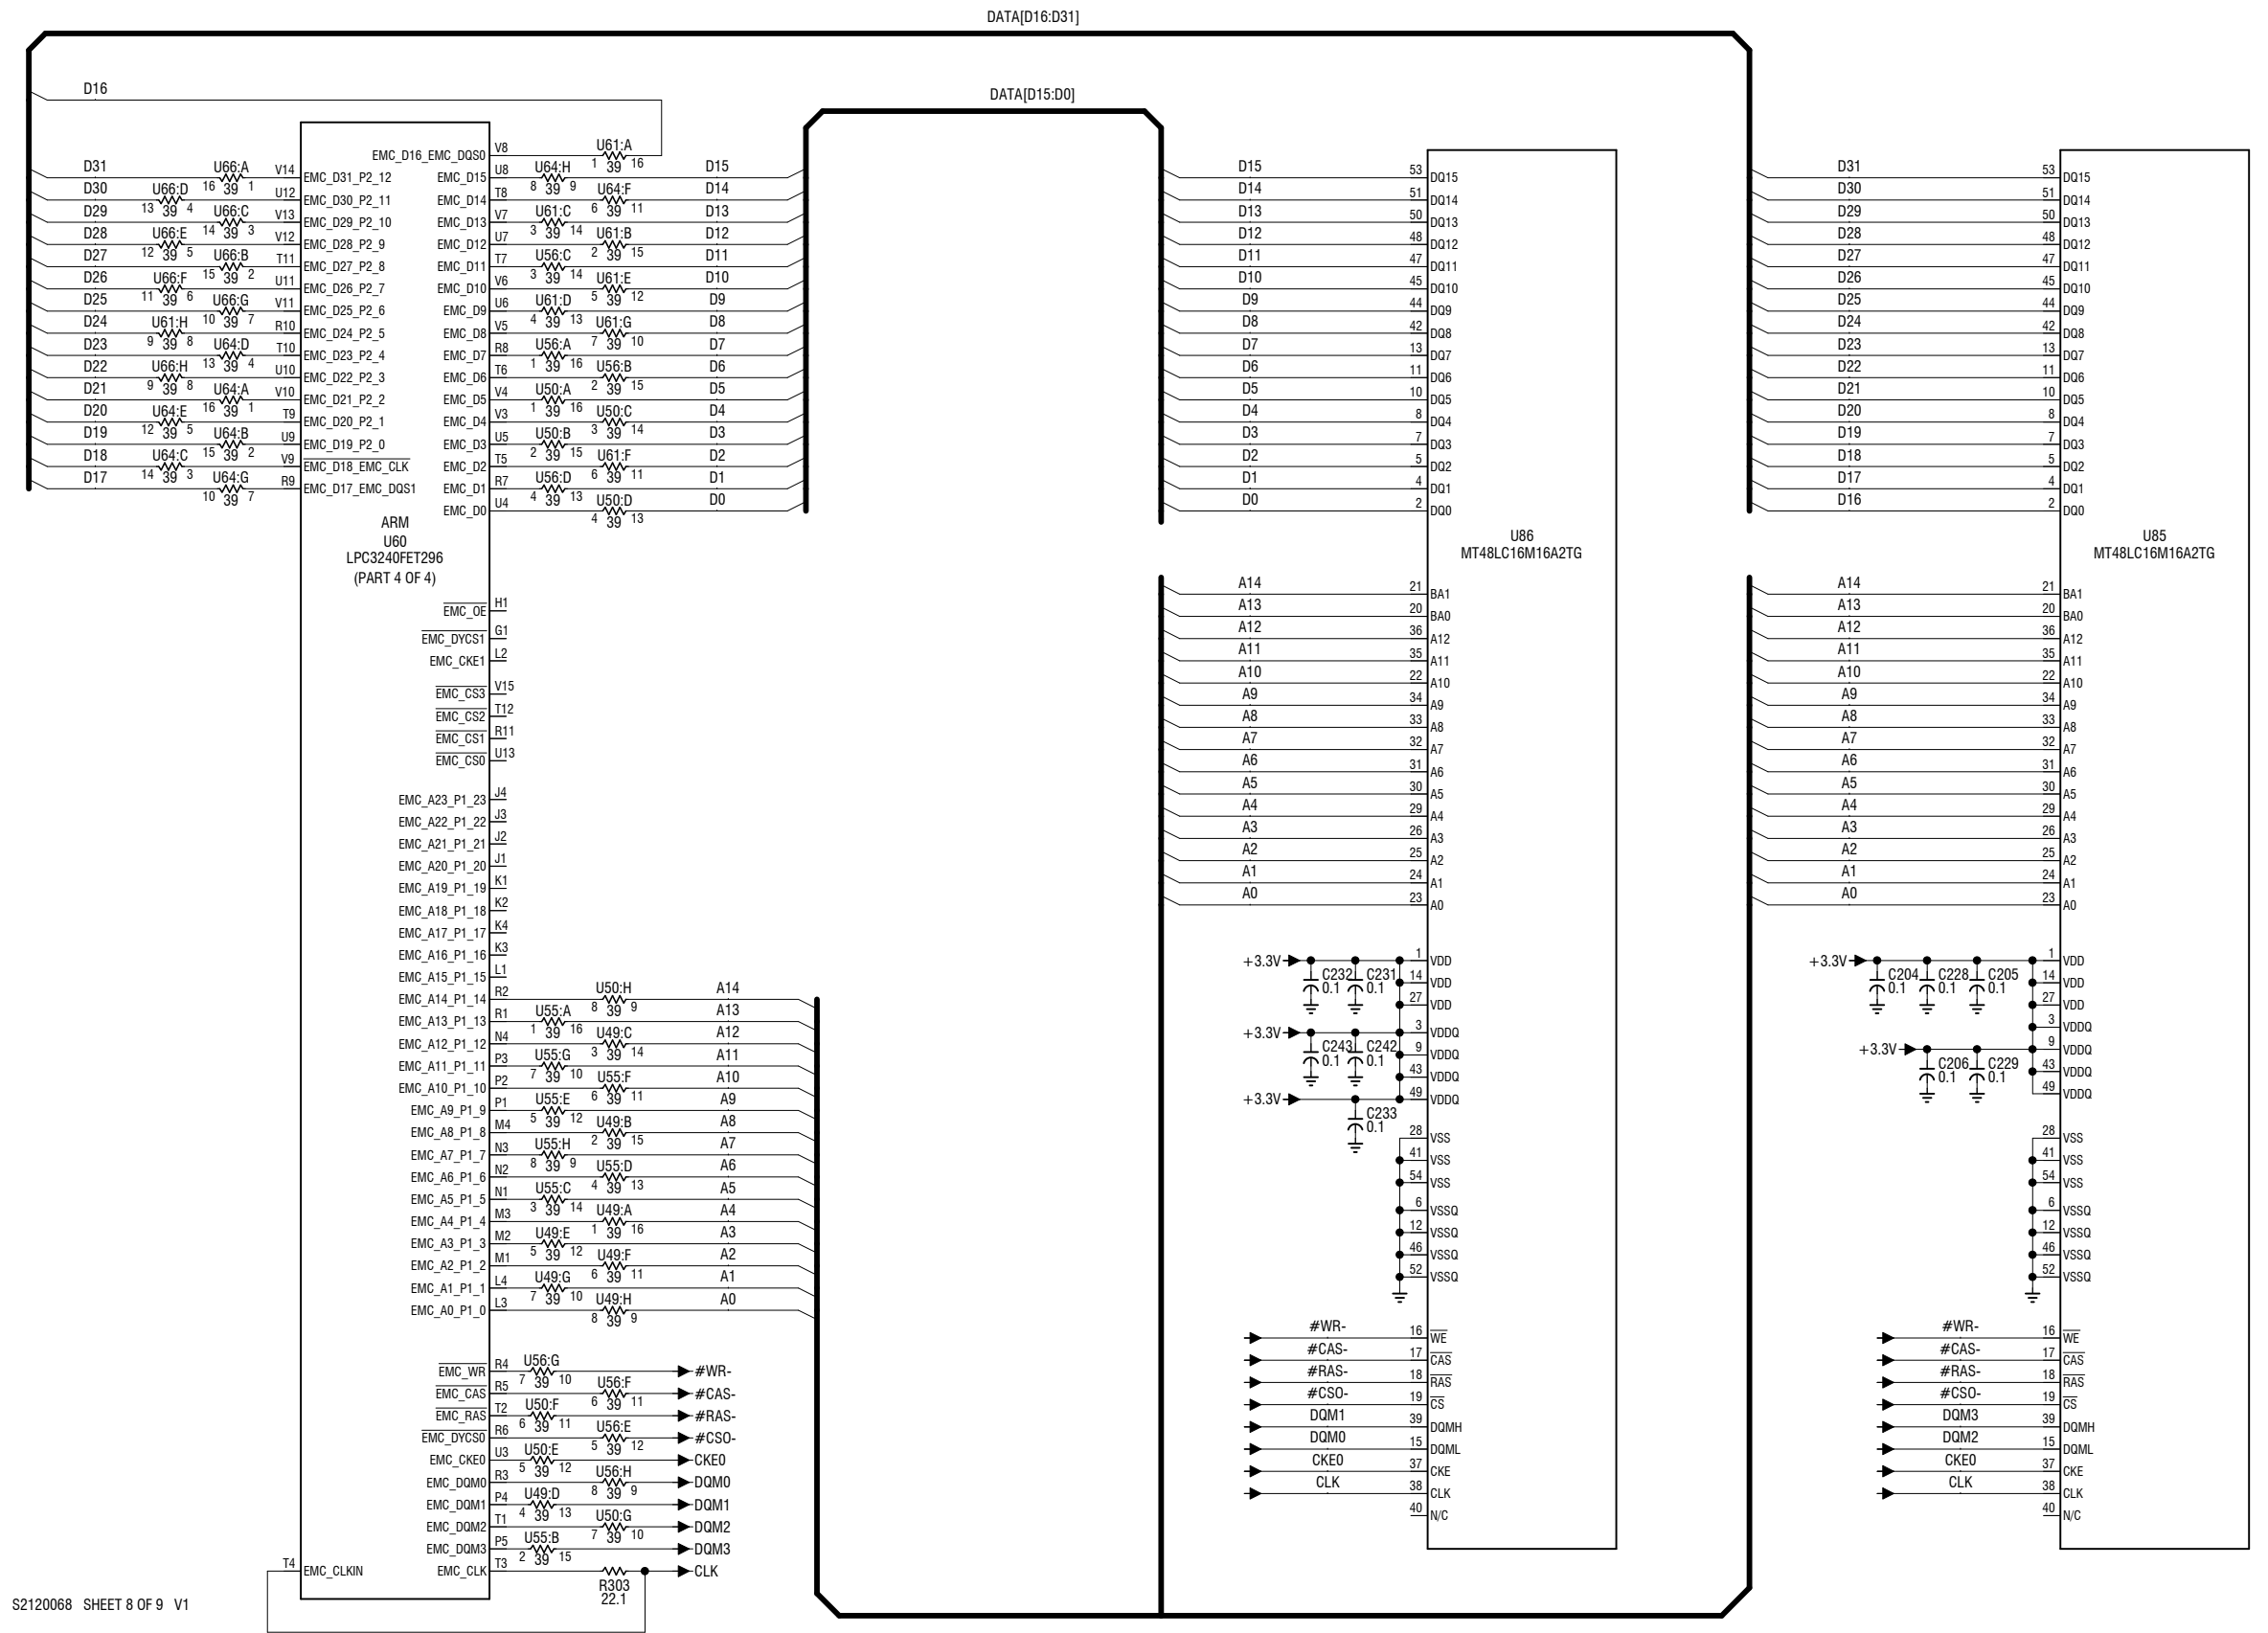

S2120068 SHEET 8 OF 9 V1

Figure SD-14: NAPC168A Control/Interface PWB (Sheet 8 of 9)

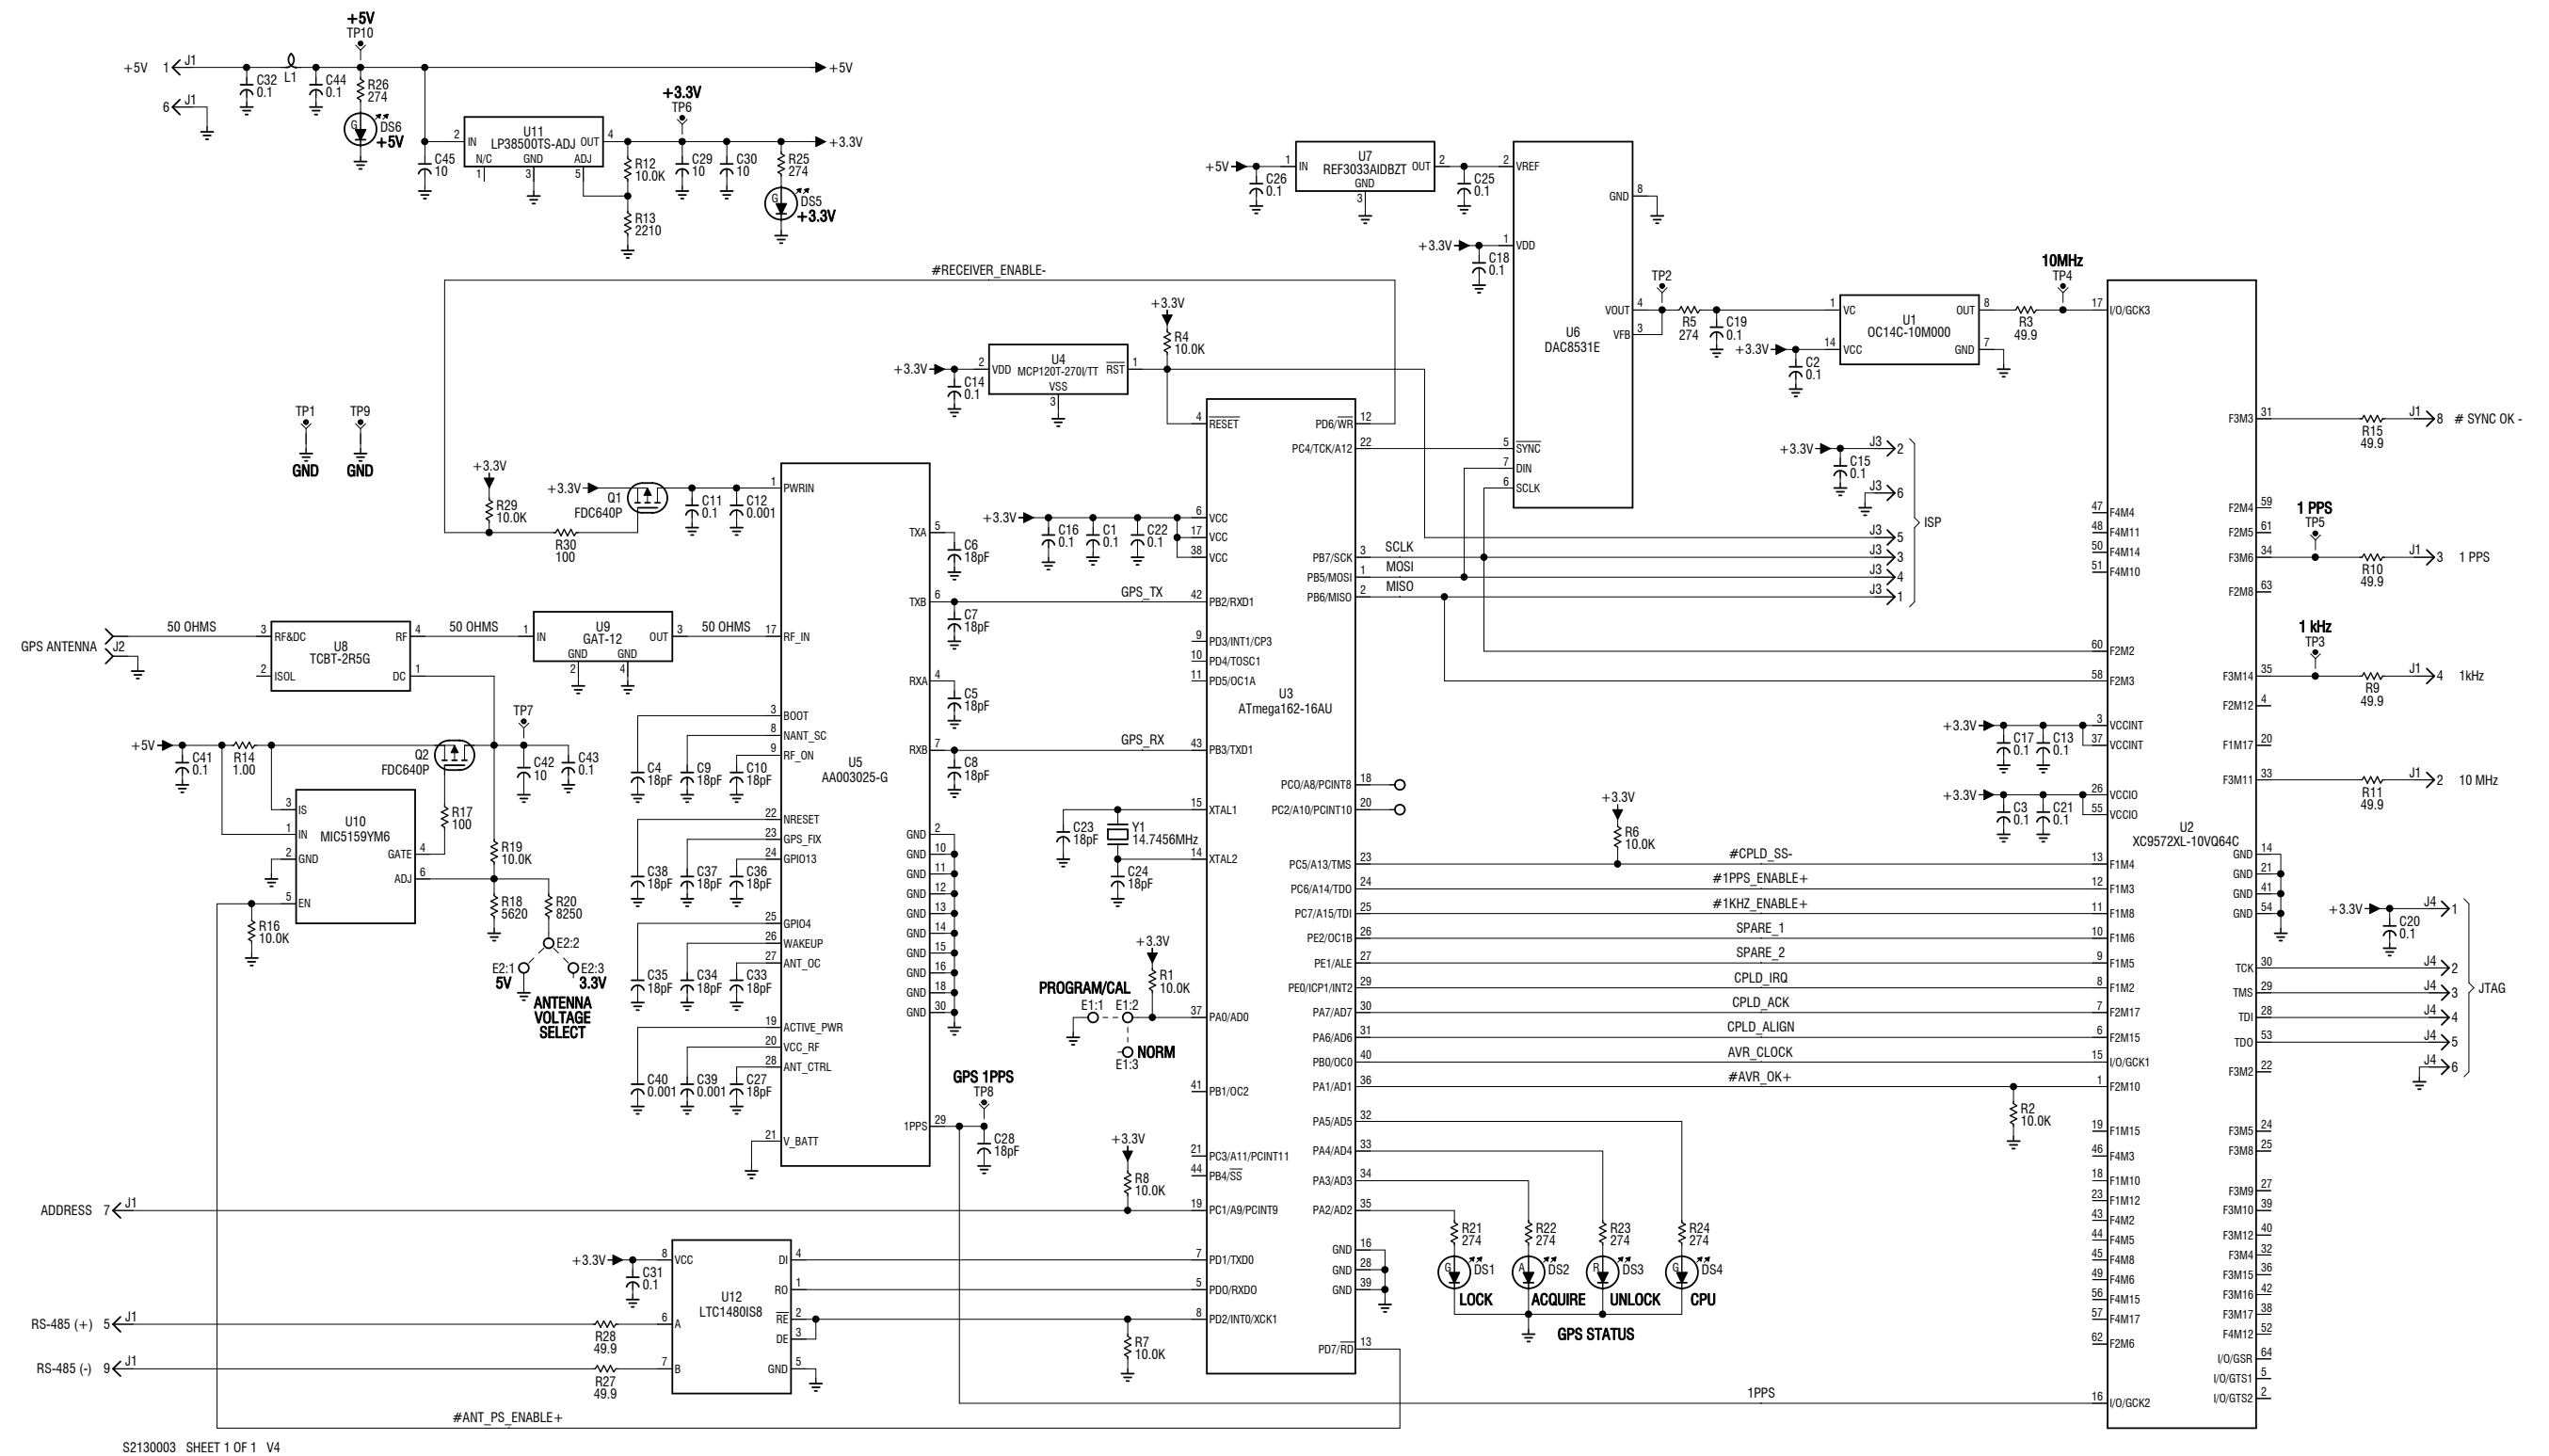

S2130003 SHEET 1 OF 1 V4

Figure SD-16: NAPX46 GPS Sync PWB (Optional)


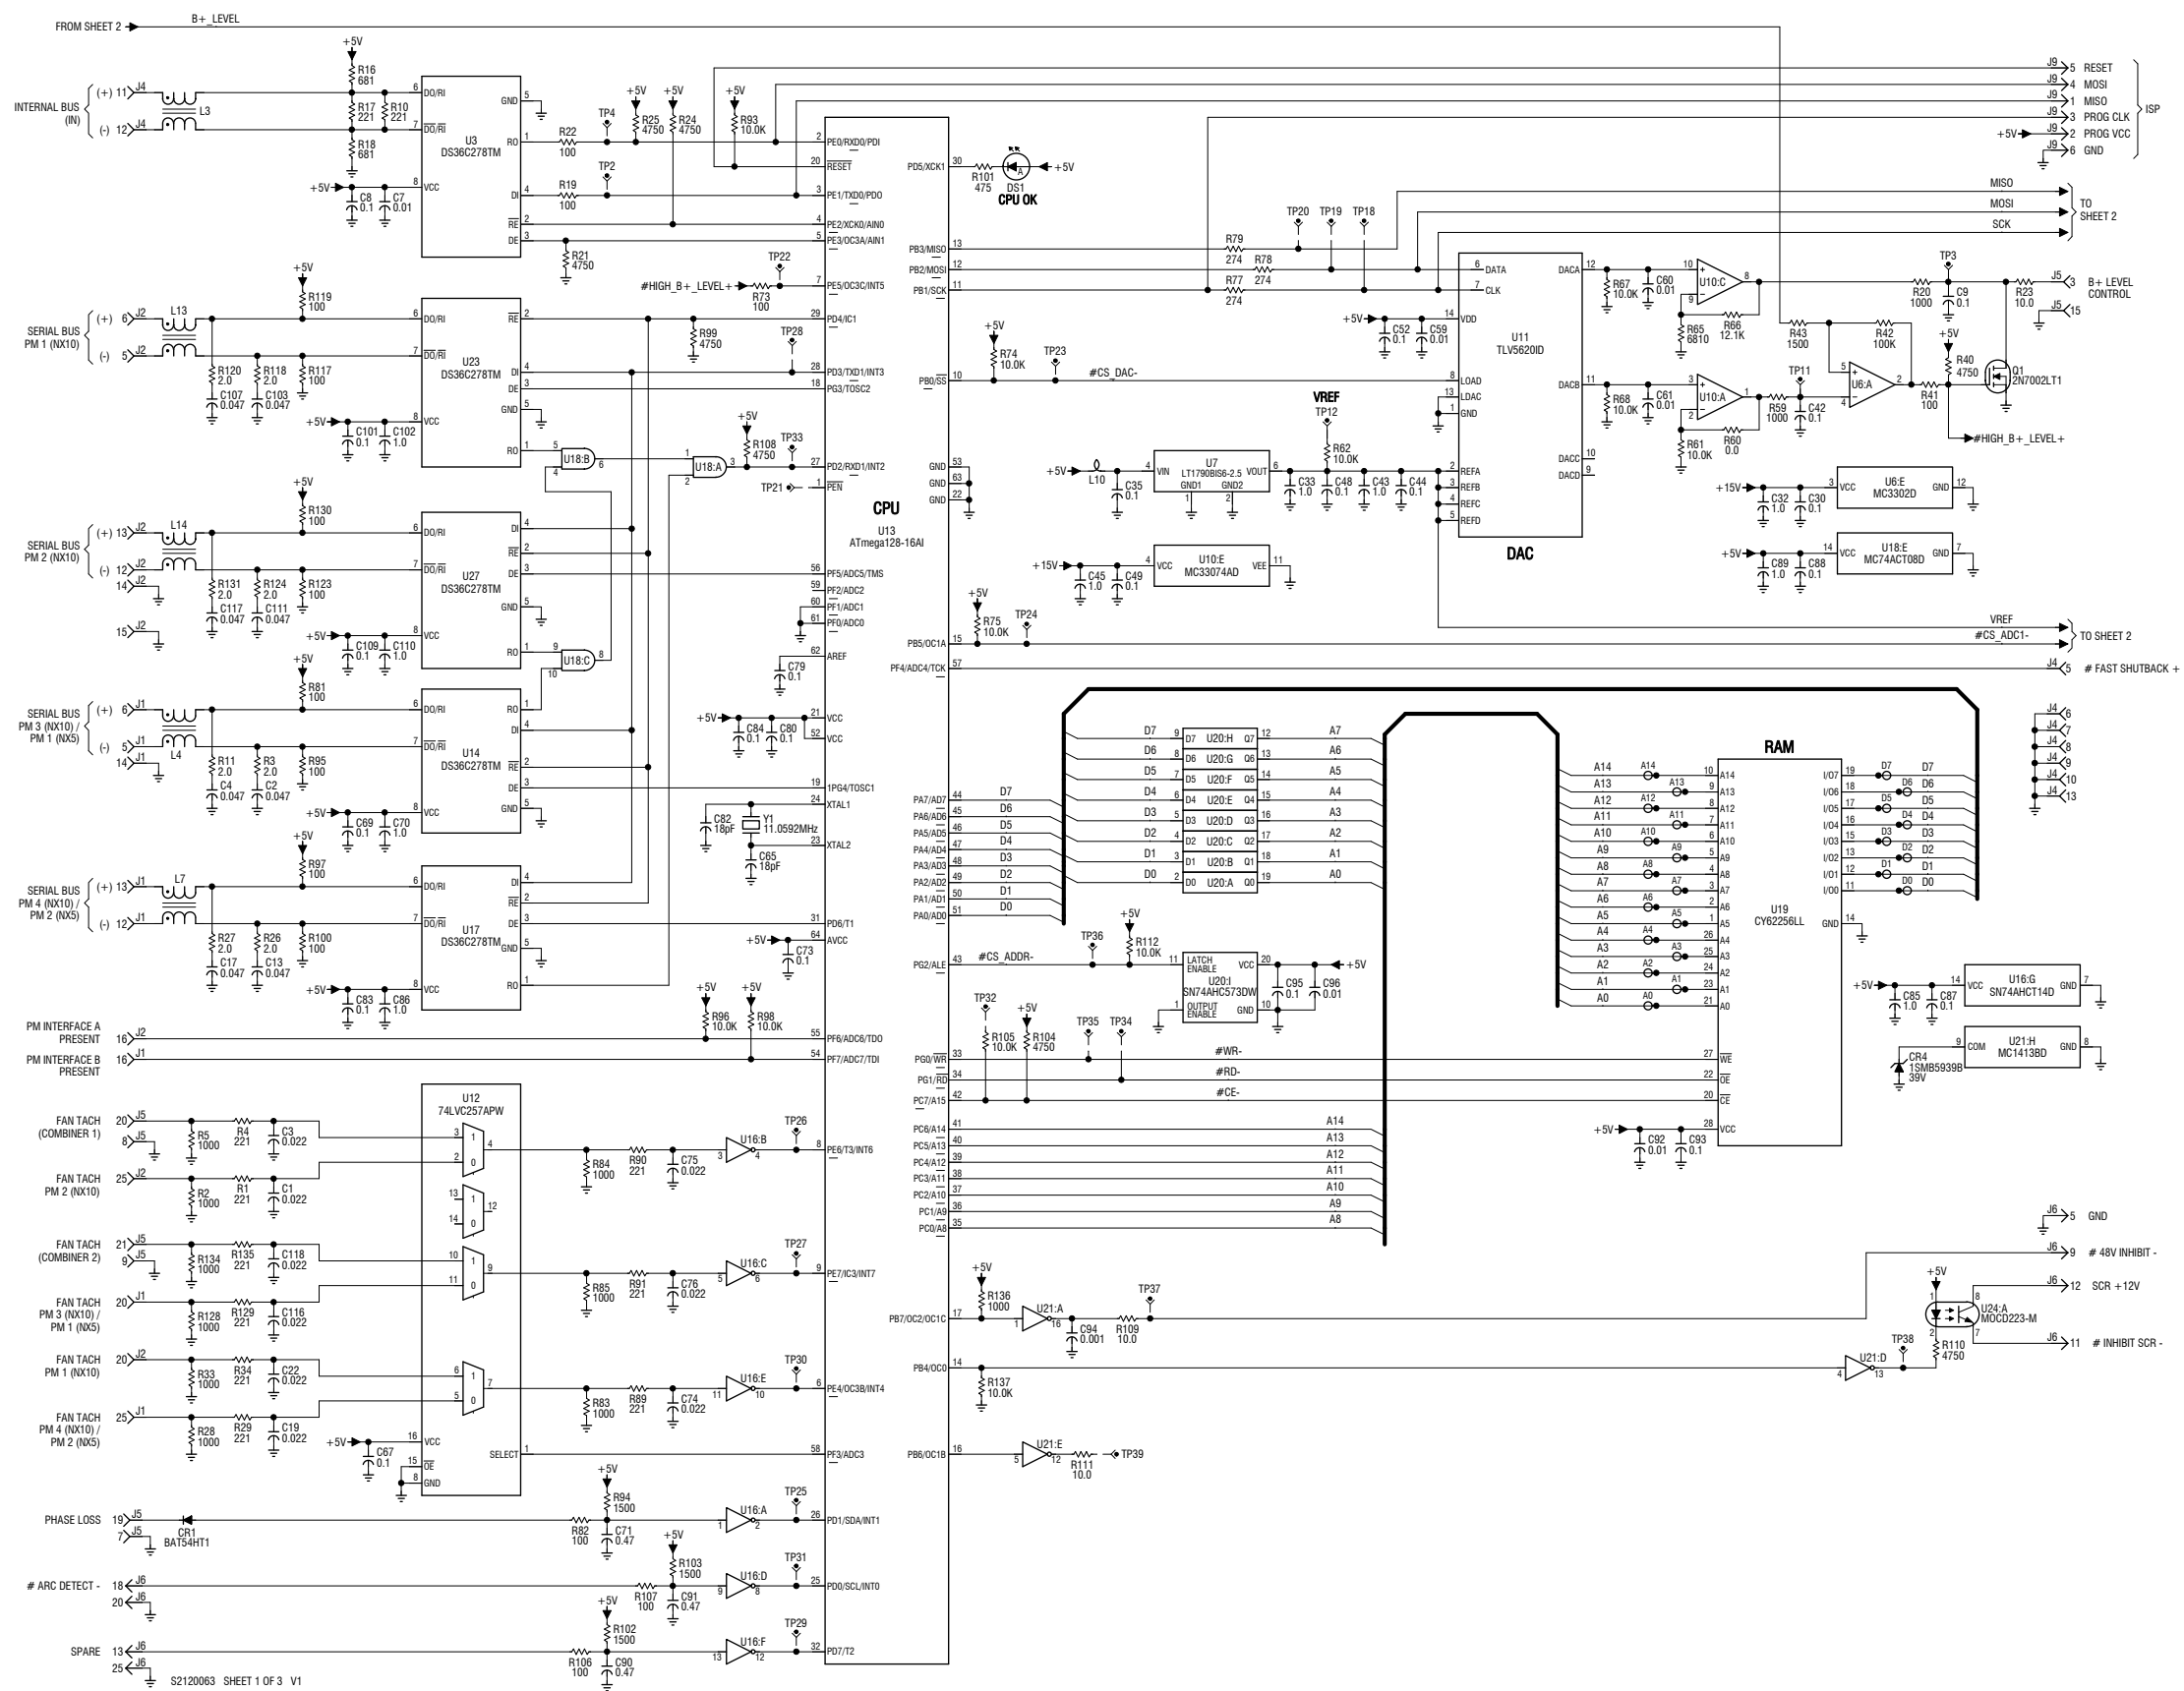


Figure SD-17: NAPI173A Rack Interface PWB (Sheet 1 of 3)

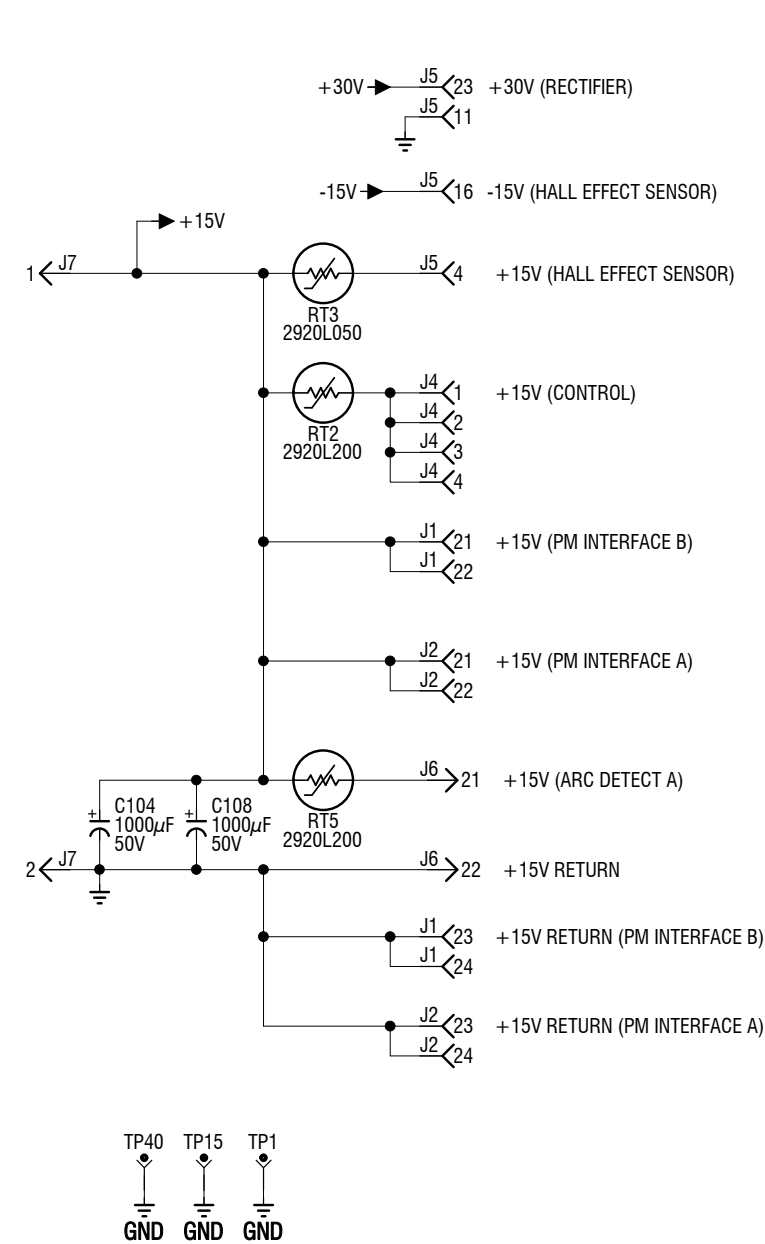

S2120063 SHEET 3 OF 3 V1

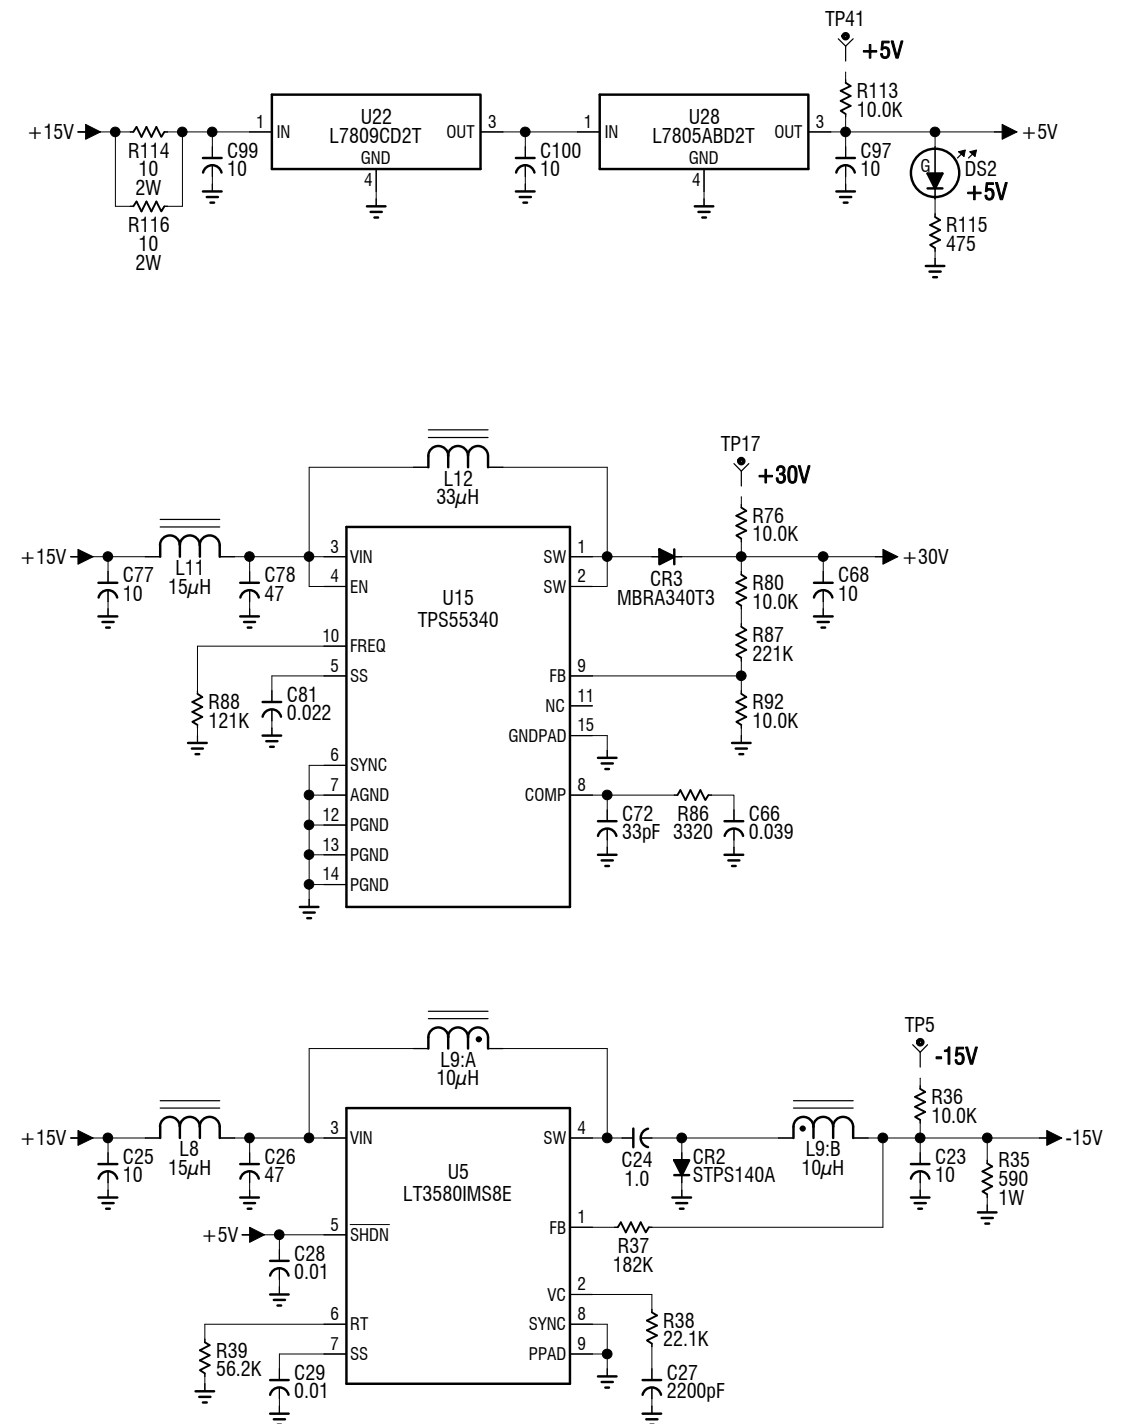


Figure SD-19: NAPI173A Rack Interface PWB (Sheet 3 of 3)

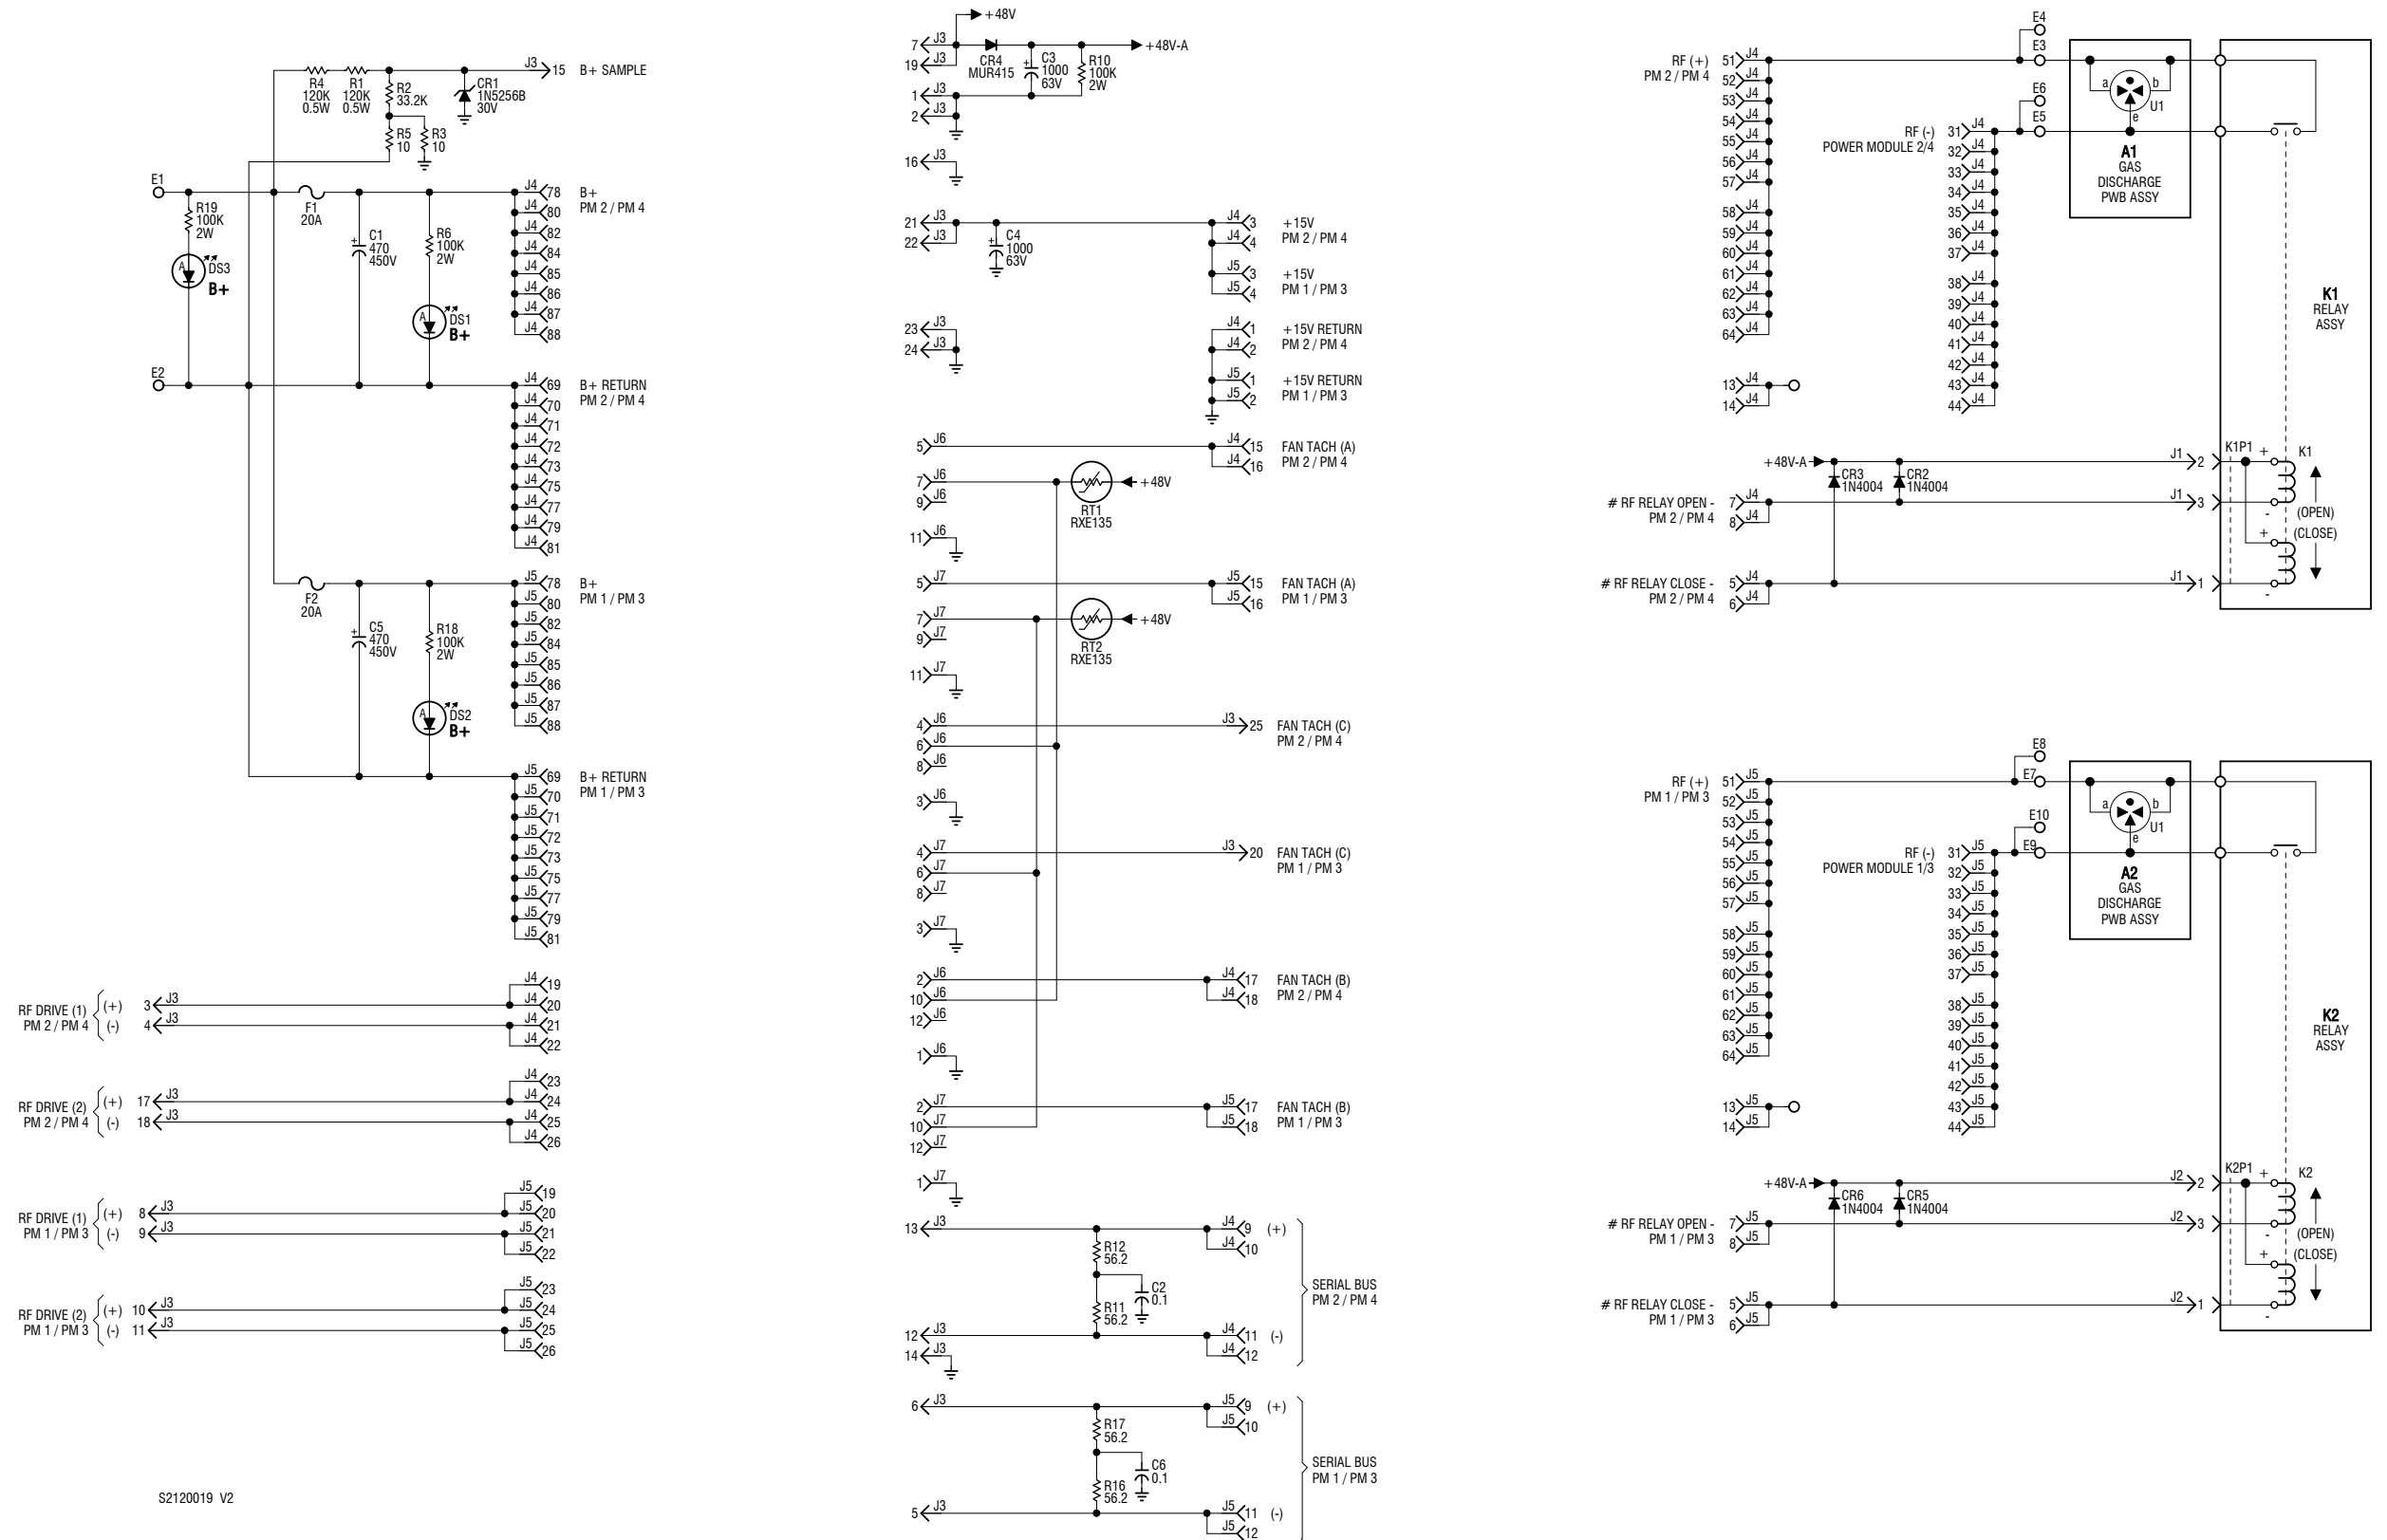


Figure SD-20: NAPI174 Power Module Interface PWB

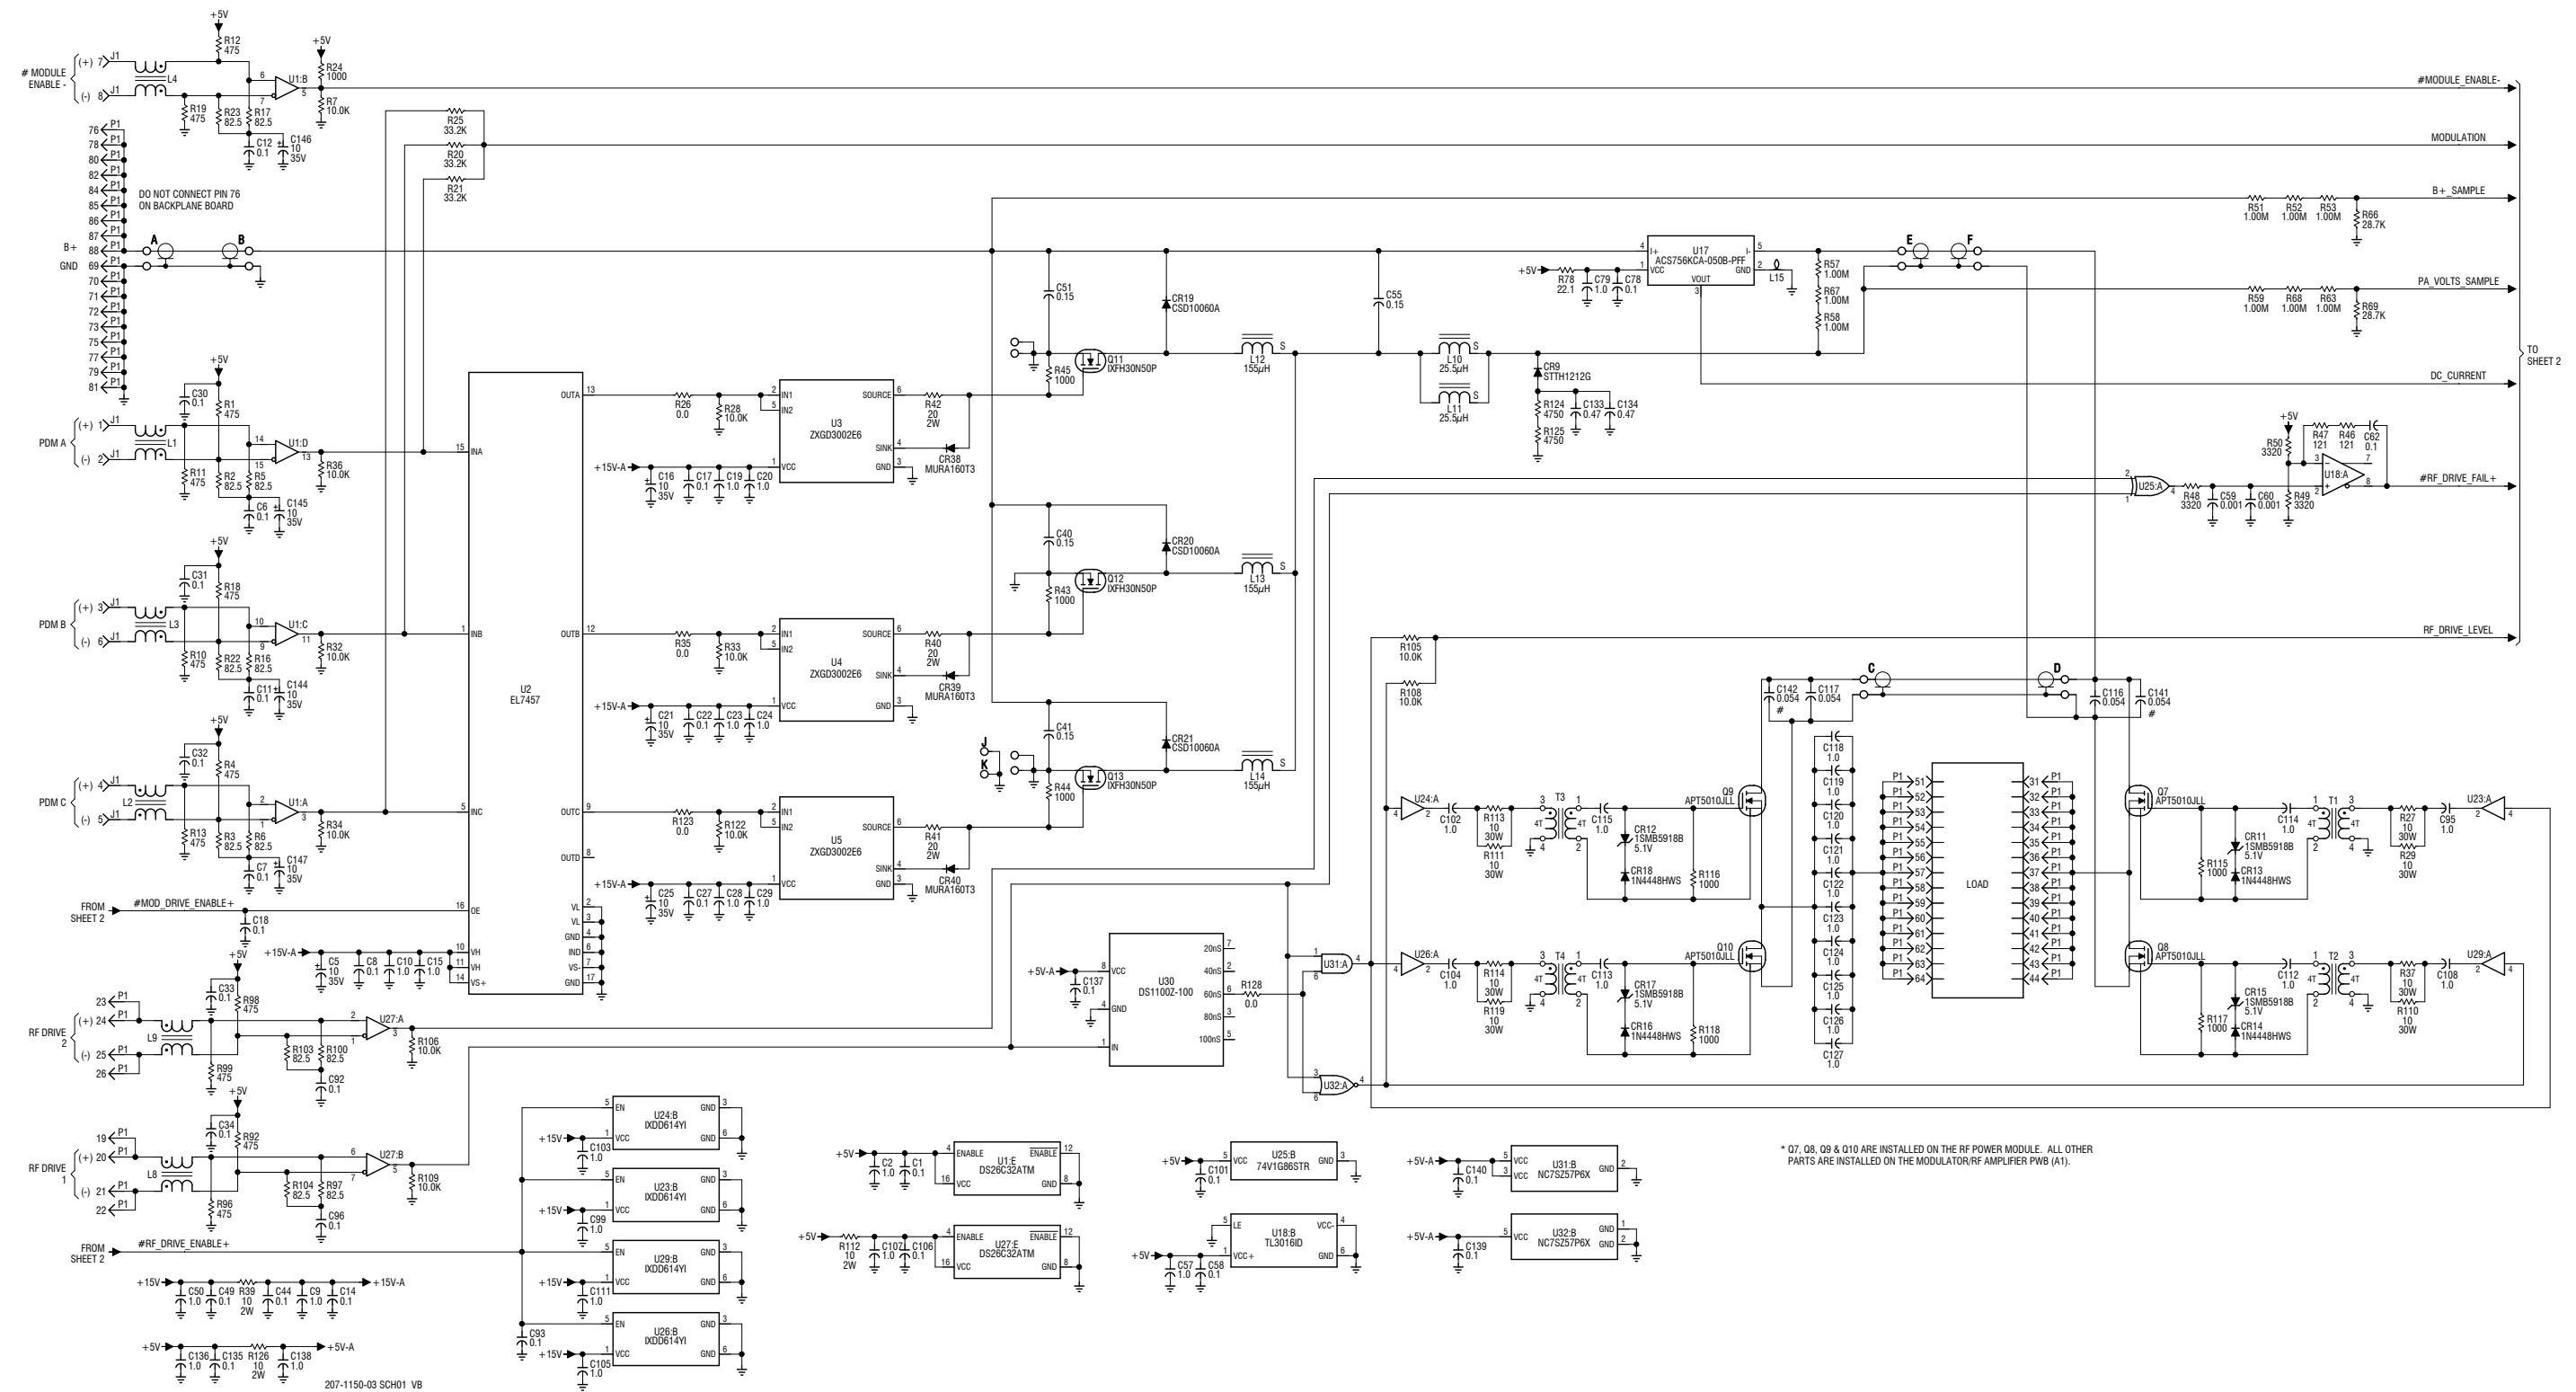


Figure SD-21: NAP39C RF Power Module and NAP434C Modulator/Power Amplifier PWB (Sheet 1 of 2)

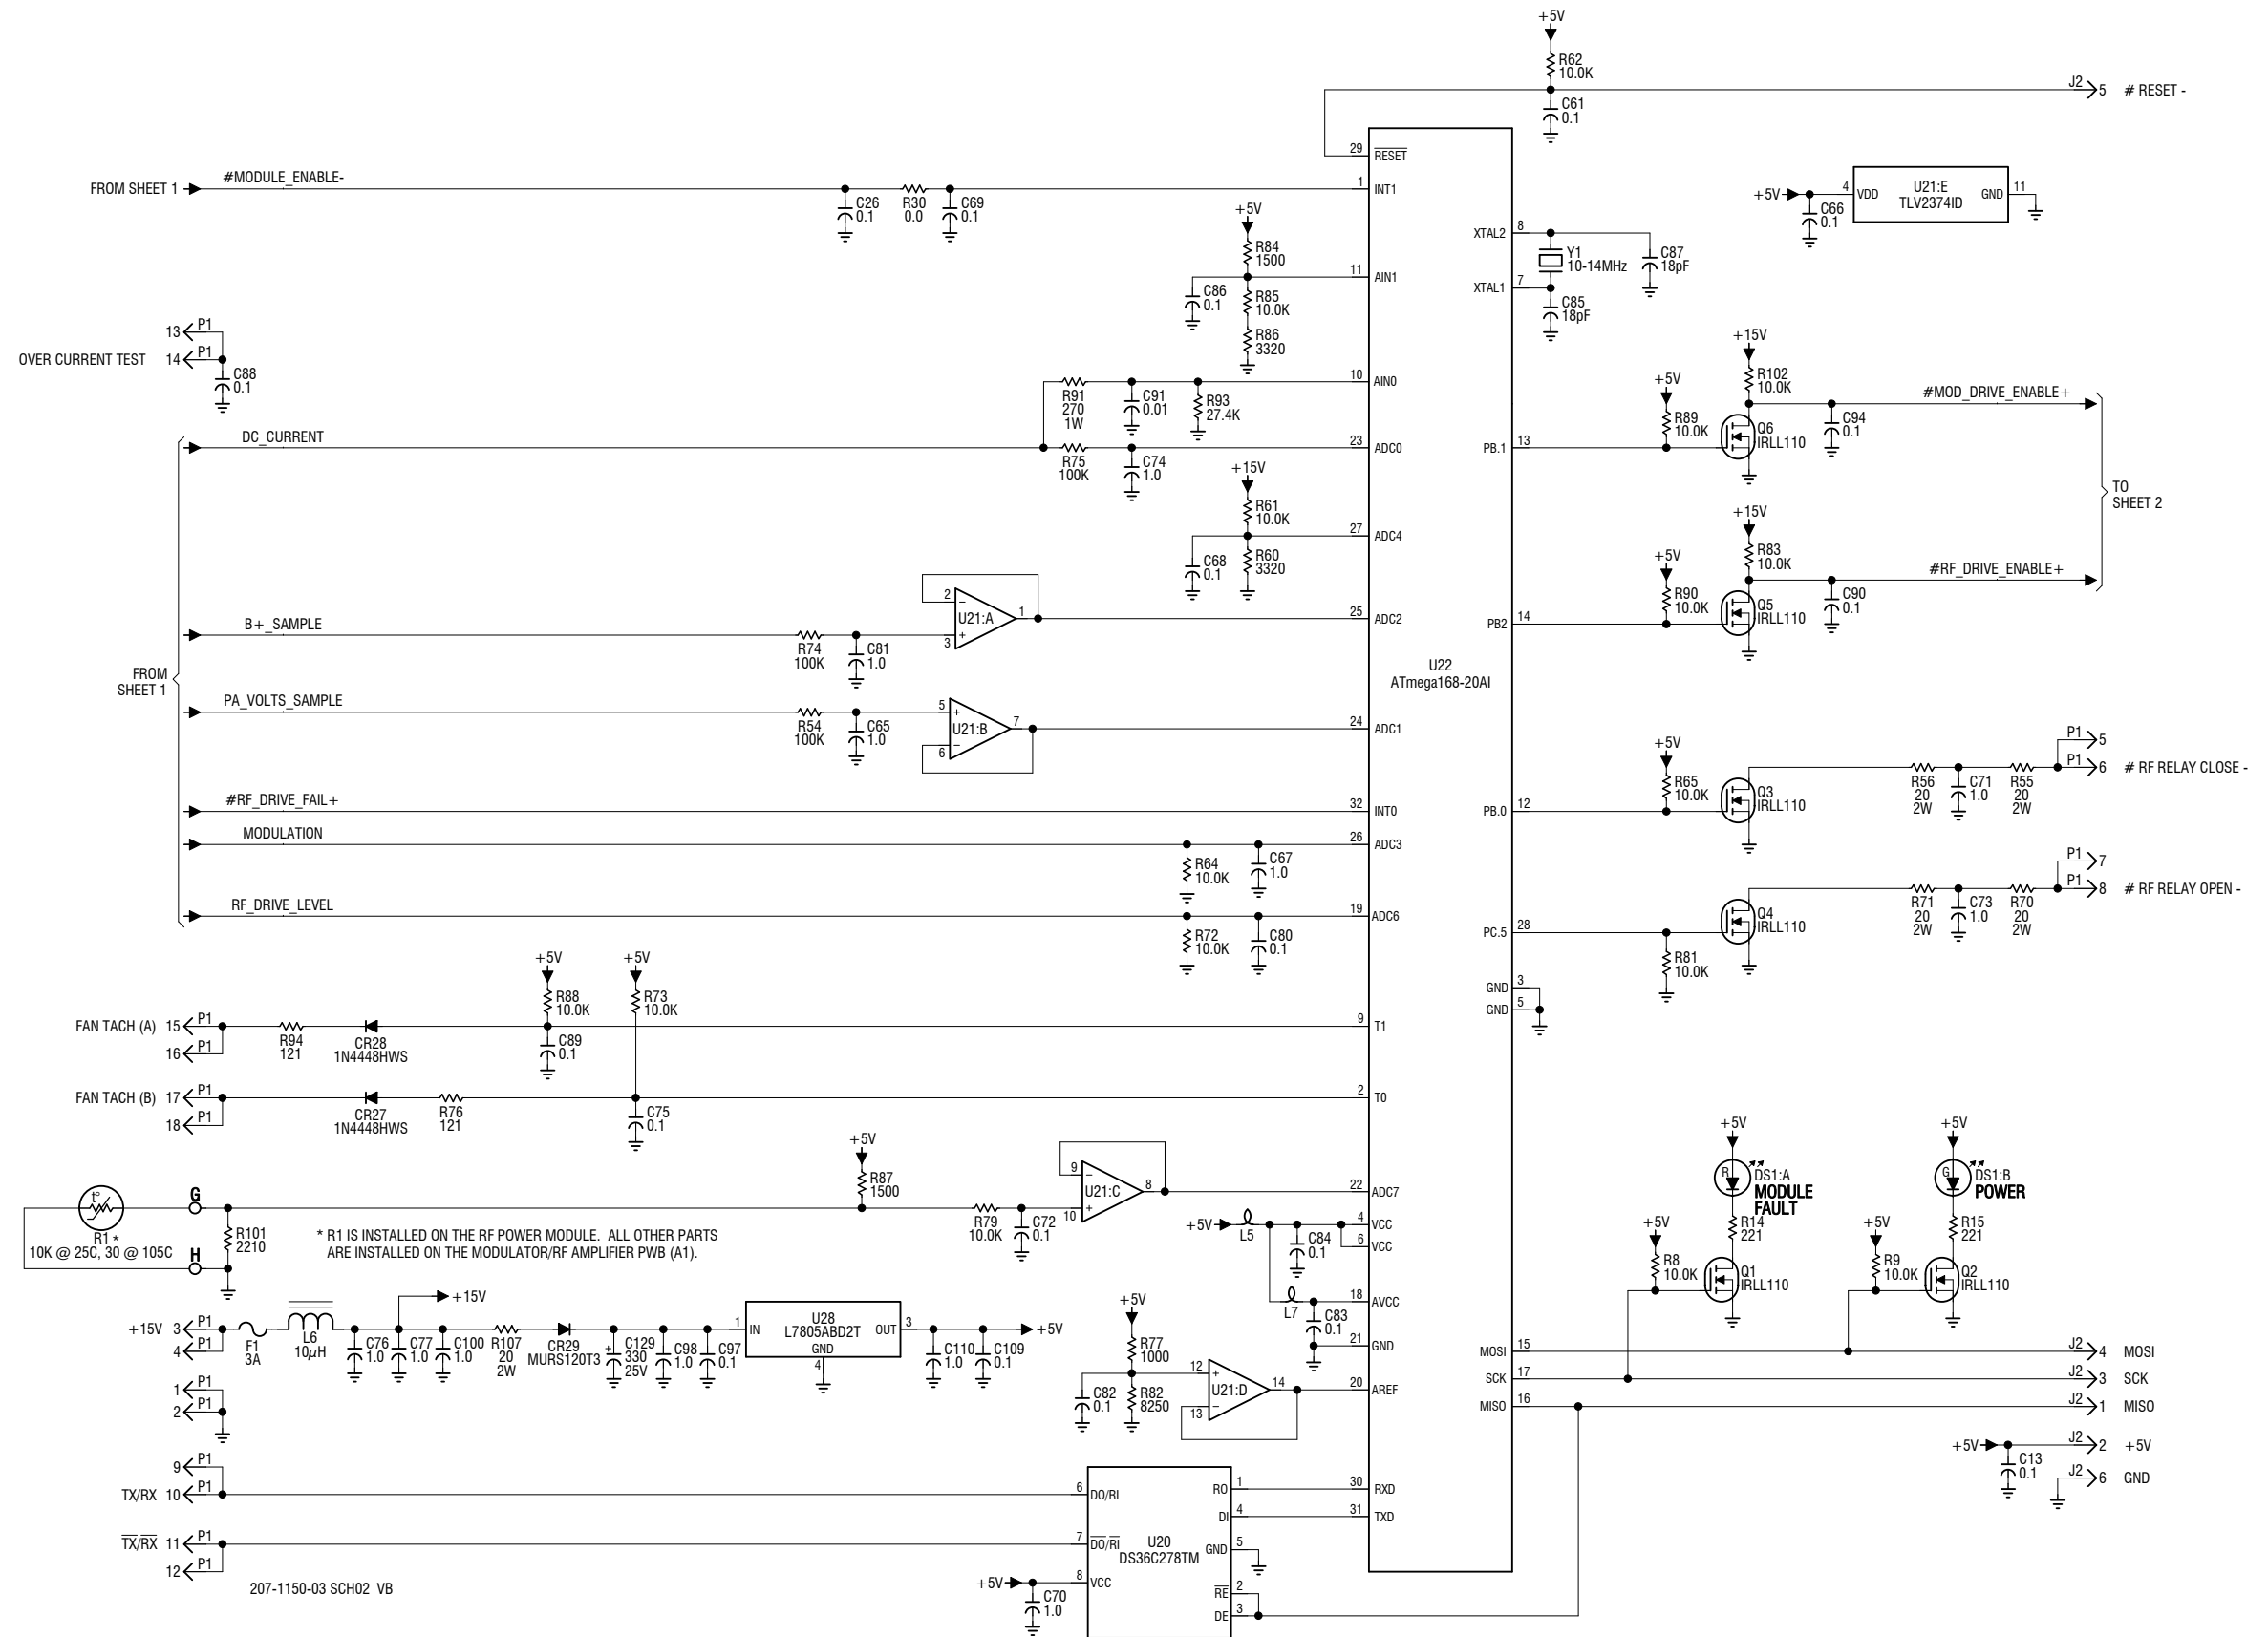


Figure SD-22: NAP39C RF Power Module and NAP434C Modulator/Power Amplifier PWB (Sheet 2 of 2)

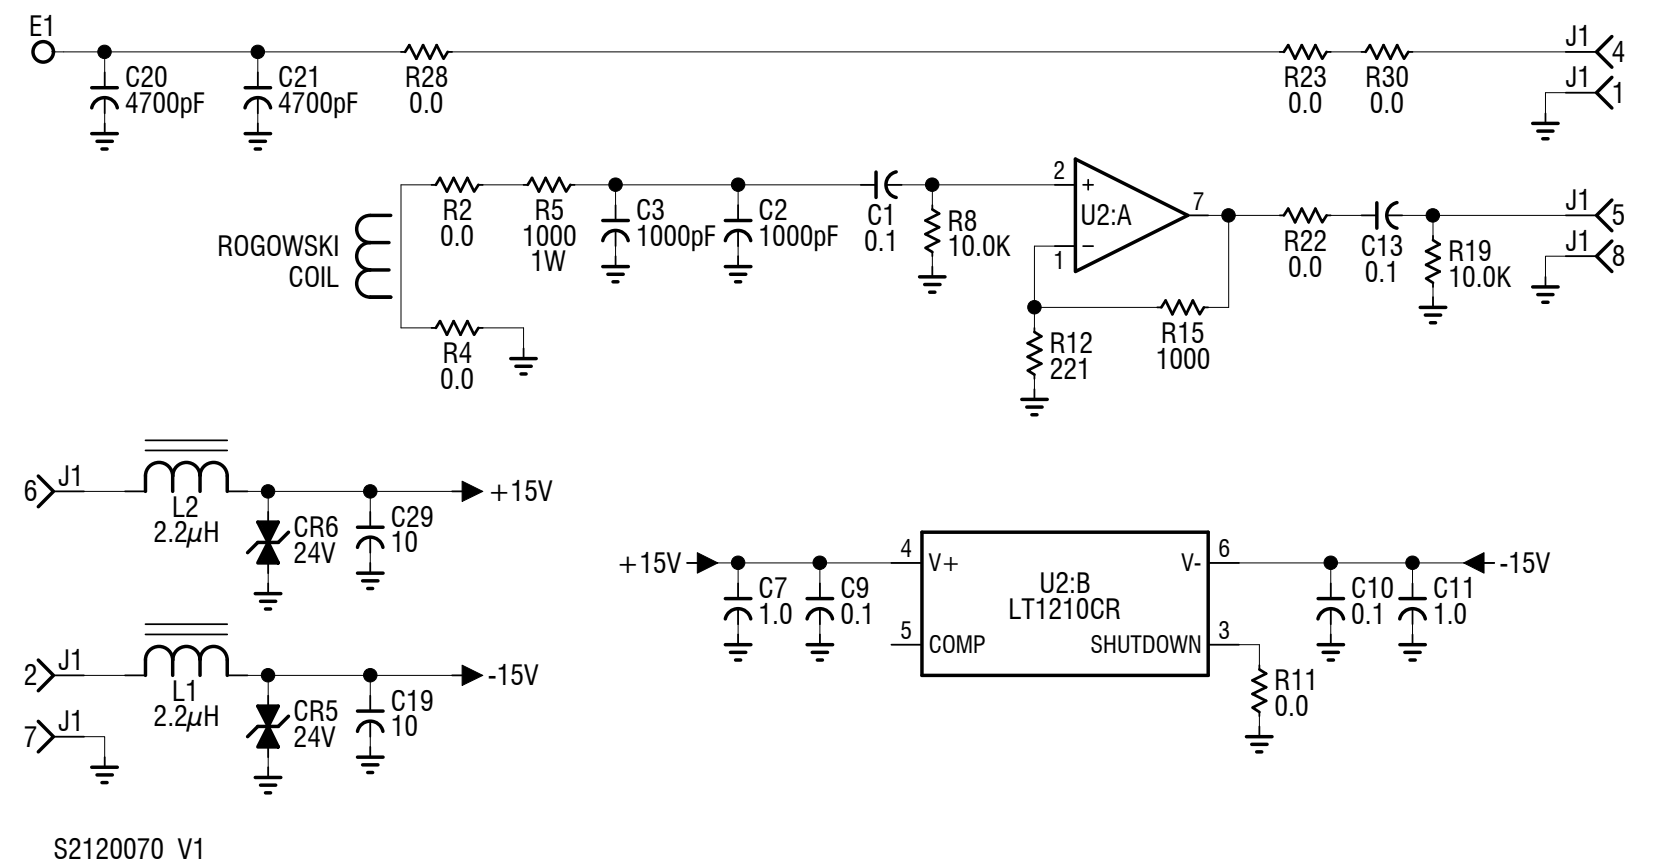


Figure SD-23: NAPP11/02A RF Voltage and Current Sample PWB

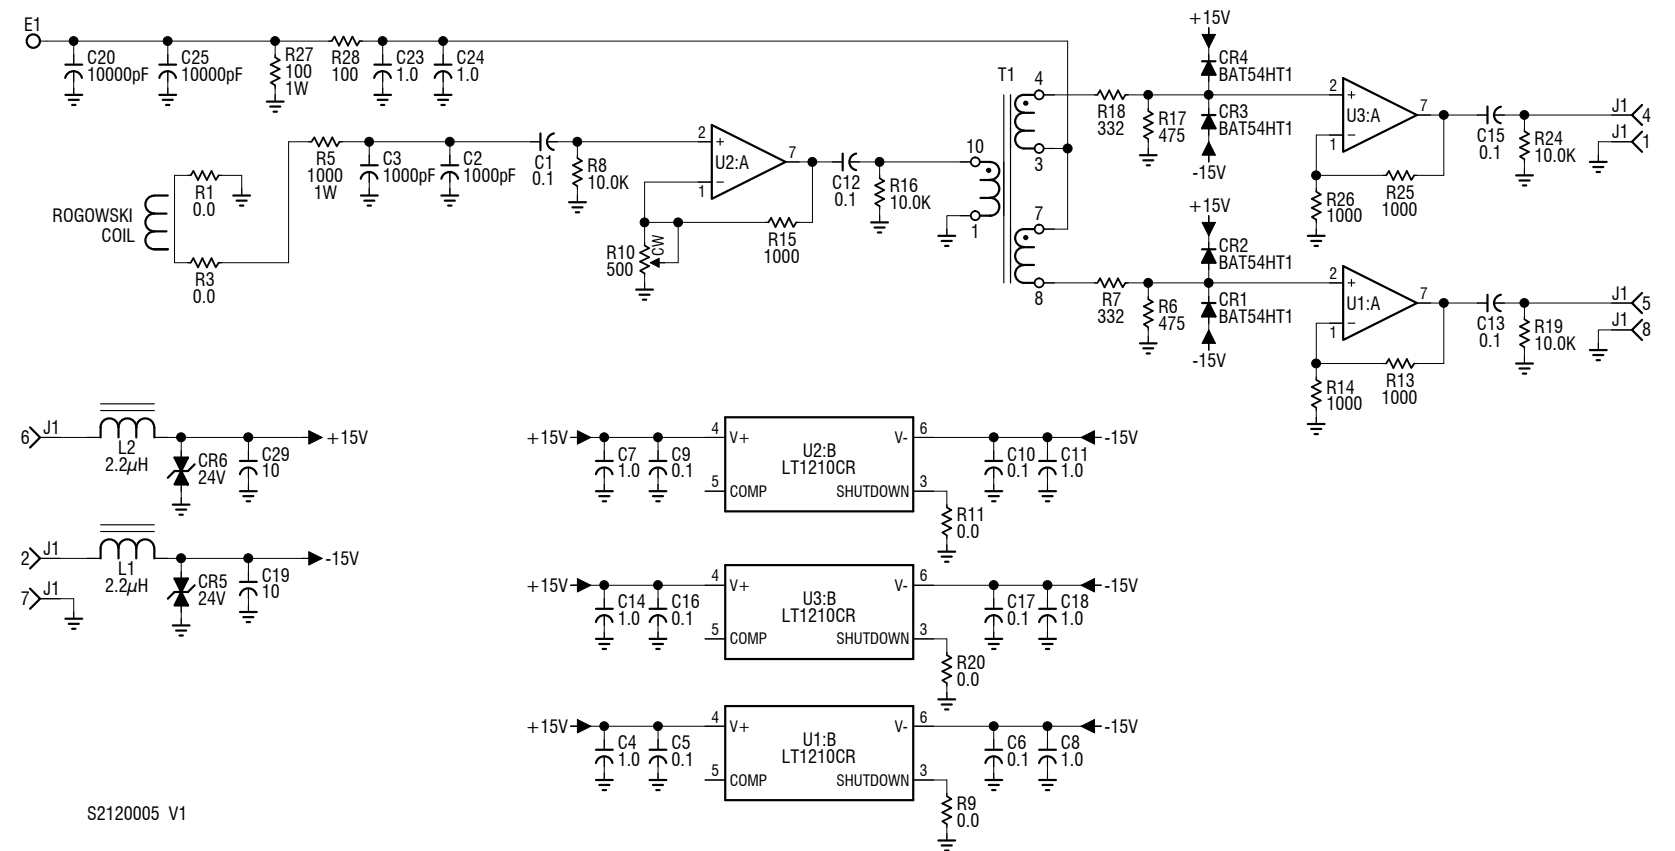


Figure SD-24: NAPP11 Directional Coupler PWB

SECTION 4.5: MECHANICAL DRAWINGS

This section contains mechanical drawings for assemblies of the transmitter. Dimensional drawings may be included. Refer to [Table 4.5.1 on page 4.5.2](#) for an itemized list.

Assembly detail drawings for assemblies and modules that have separate manuals are not included. Refer to the appropriate maintenance manual for the assembly detail of these assemblies.

Identifying Mechanical Drawings

Each mechanical drawing in this section is identified by a number that is both the figure number and the page number. The numbers are assigned sequentially and are prefixed by the letters MD. Drawings in this section are listed in [Table 4.5.1 on page 4.5.2](#).

Content of Mechanical Drawings

Mechanical drawings are illustrations that depict the location of electrical components and show assembly outline detail. Dimensional information is included, where appropriate.


When a module or assembly is the subject of its own assembly detail drawing, and it is also shown in a higher level assembly, the detail depicted in the higher level assembly may have minor differences from the module or assembly actually installed. In this case, always refer to the assembly detail drawing of the module or assembly for detailed information.

Locating a Part or Assembly on a Mechanical Drawing


1. When a part or assembly is assigned a reference designation (e.g., A2A1 or A2A1R1), refer to the family trees in [Section 4.2, "Parts Lists" on page 4.2.1](#). Follow the family tree branches to the block that contains the desired reference designation and Nautel nomenclature (e.g., NAPA34C Modulator/Power Amplifier PWB). Note the reference designations and Nautel nomenclatures of all higher assemblies in the path.
Example: A12 NAP39C RF Power Module > A12A1 NAPA34C Modulator/Power Amplifier PWB.
2. Refer to [Table 4.5.1 on page 4.5.2](#). Use the reference designation and Nautel nomenclature to identify the appropriate mechanical drawing.
Example: The NAPA34C Modulator/Power Amplifier PWB is shown on MD-11 and MD-12.
3. If necessary, refer to the referenced figure (e.g., MD-11 and MD-12) in this section and locate the next, lower-level assembly. Repeat this procedure until the desired part or assembly is found.

Table 4.5.1: List of Mechanical Drawings


Figure #	Title
MD-1	NX10 Transmitter (Front Views)
MD-2	NX10 Transmitter (Rear Views)
MD-3	B+ Distribution Assembly (212-7120)
MD-4	NAPI142A UI Interface PWB
MD-5	NAPC168A Control/Interface PWB
MD-6	NAPE78A/01 Digital AM Exciter PWB
MD-7	NAPX46 GPS Sync PWB (Optional)
MD-8	NAPI173A Rack Interface PWB
MD-9	NAPI174 Power Module Interface PWB
MD-10	NAP39C RF Power Module
MD-11	NAPA34C Modulator/Power Amplifier PWB (Front View)
MD-12	NAPA34C Modulator/Power Amplifier PWB (Rear View)
MD-13	NAX274 Fan Tray Assembly
MD-14	NAPP11/02A RF Voltage and Current Sample PWB
MD-15	NAFP112 Directional Coupler Assembly (NAPP11 Directional Coupler PWB)

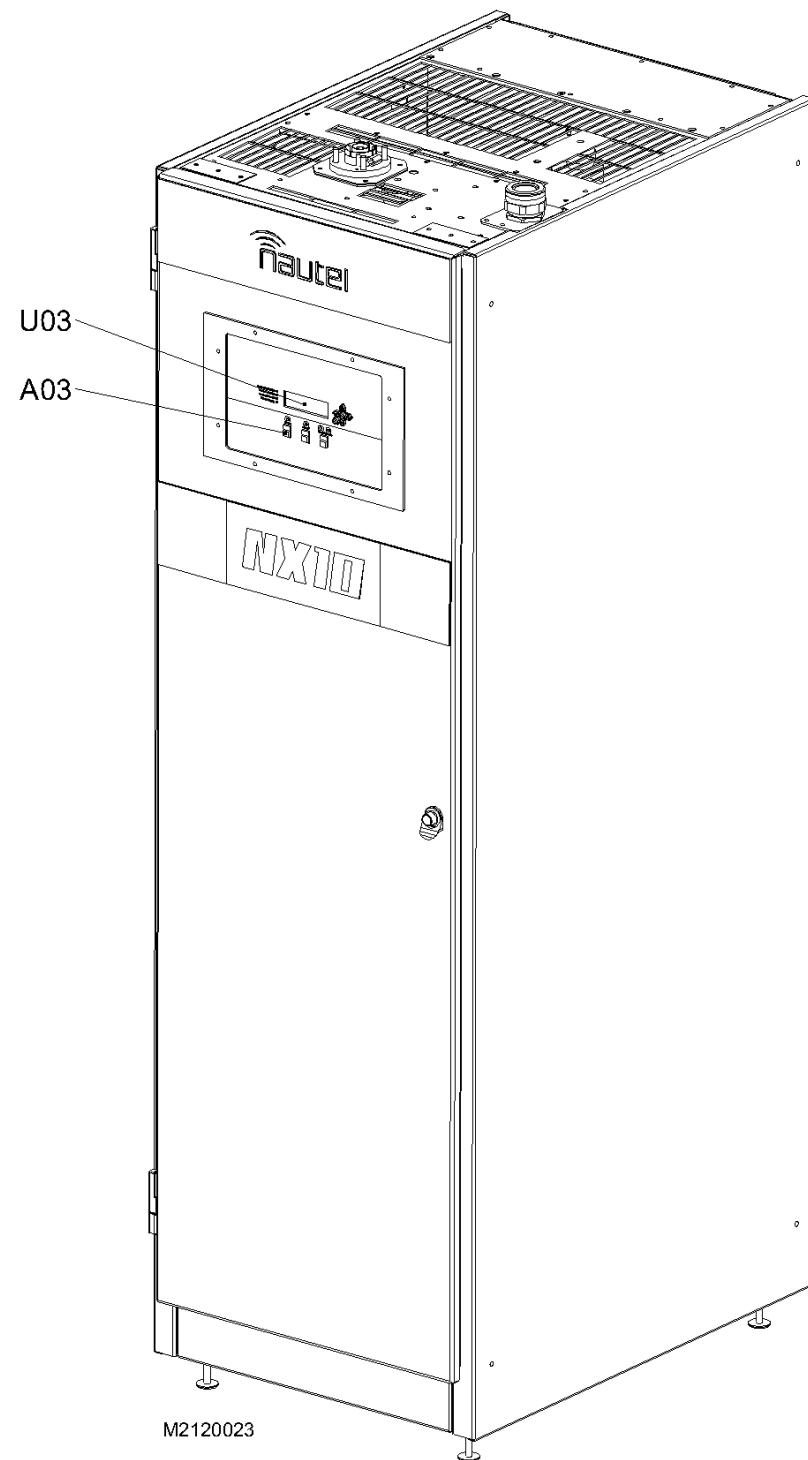

A3 - UI INTERFACE PWB
U3 - FRONT PANEL UI

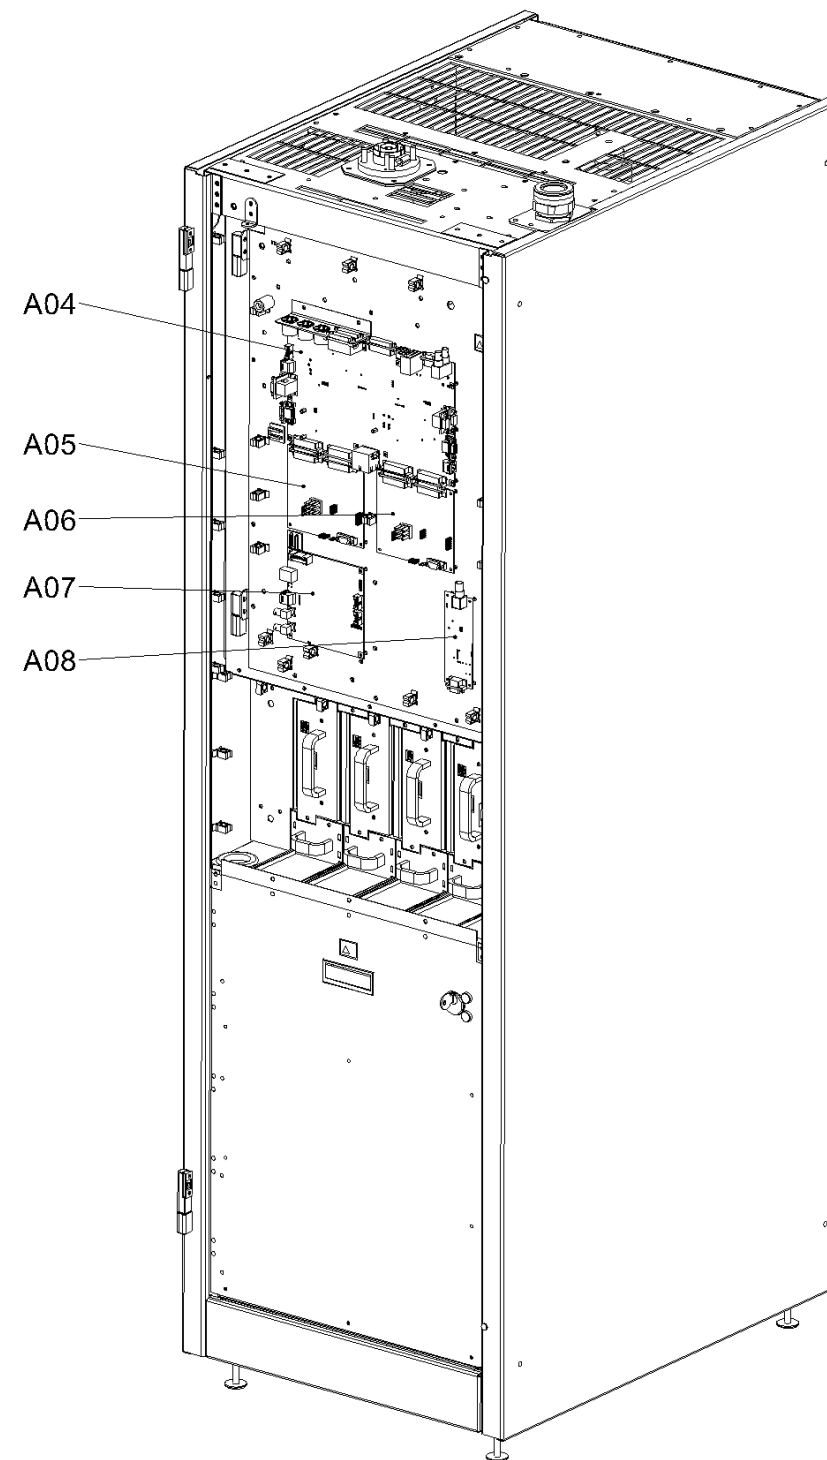



A4 - CONTROL/INTERFACE PWB
A5 - DIGITAL AM EXCITER PWB (A)
A6 - DIGITAL AM EXCITER PWB (B) (OPTIONAL)
A7 - EXGINE PWB (OPTIONAL)
A8 - GPS SYNC PWB (OPTIONAL)

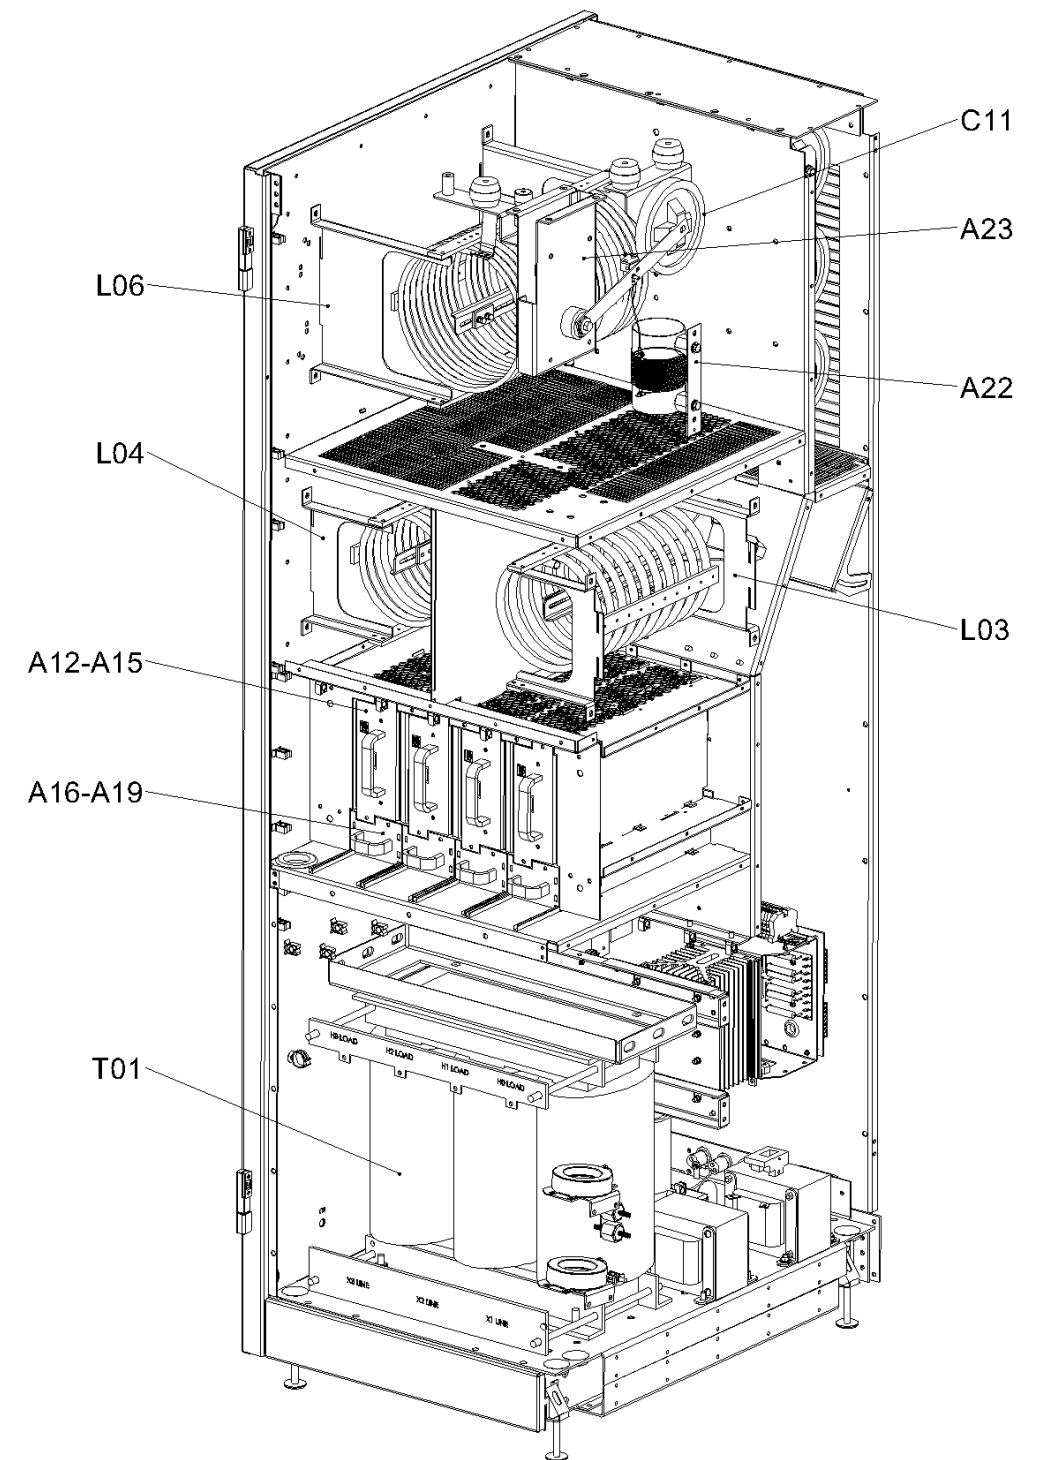

A12, A13, A14, A15 - RF POWER MODULES 1, 2, 3, 4
A16, A17, A18, A19 - FAN TRAY ASSEMBLIES 1, 2, 3, 4
A22 - STATIC DRAIN CHOKE ASSEMBLY
A23 - DIRECTIONAL COUPLER ASSEMBLY
T1 - POWER TRANSFORMER

Figure MD-1: NX10 Transmitter (Front Views)

A9 - RACK INTERFACE PWB
 A10 - POWER MODULE INTERFACE PWB (A)
 A11 - POWER MODULE INTERFACE PWB (B)
 A20 - RF VOLTAGE AND CURRENT SAMPLE PWB
 A21 - COMBINER ASSEMBLY
 A24 - ARC DETECTOR ASSEMBLY
 DS1, DS2, DS3 - 3-PHASE AC INDICATORS
 U1 - +15V POWER SUPPLY
 U2 - +48V POWER SUPPLY

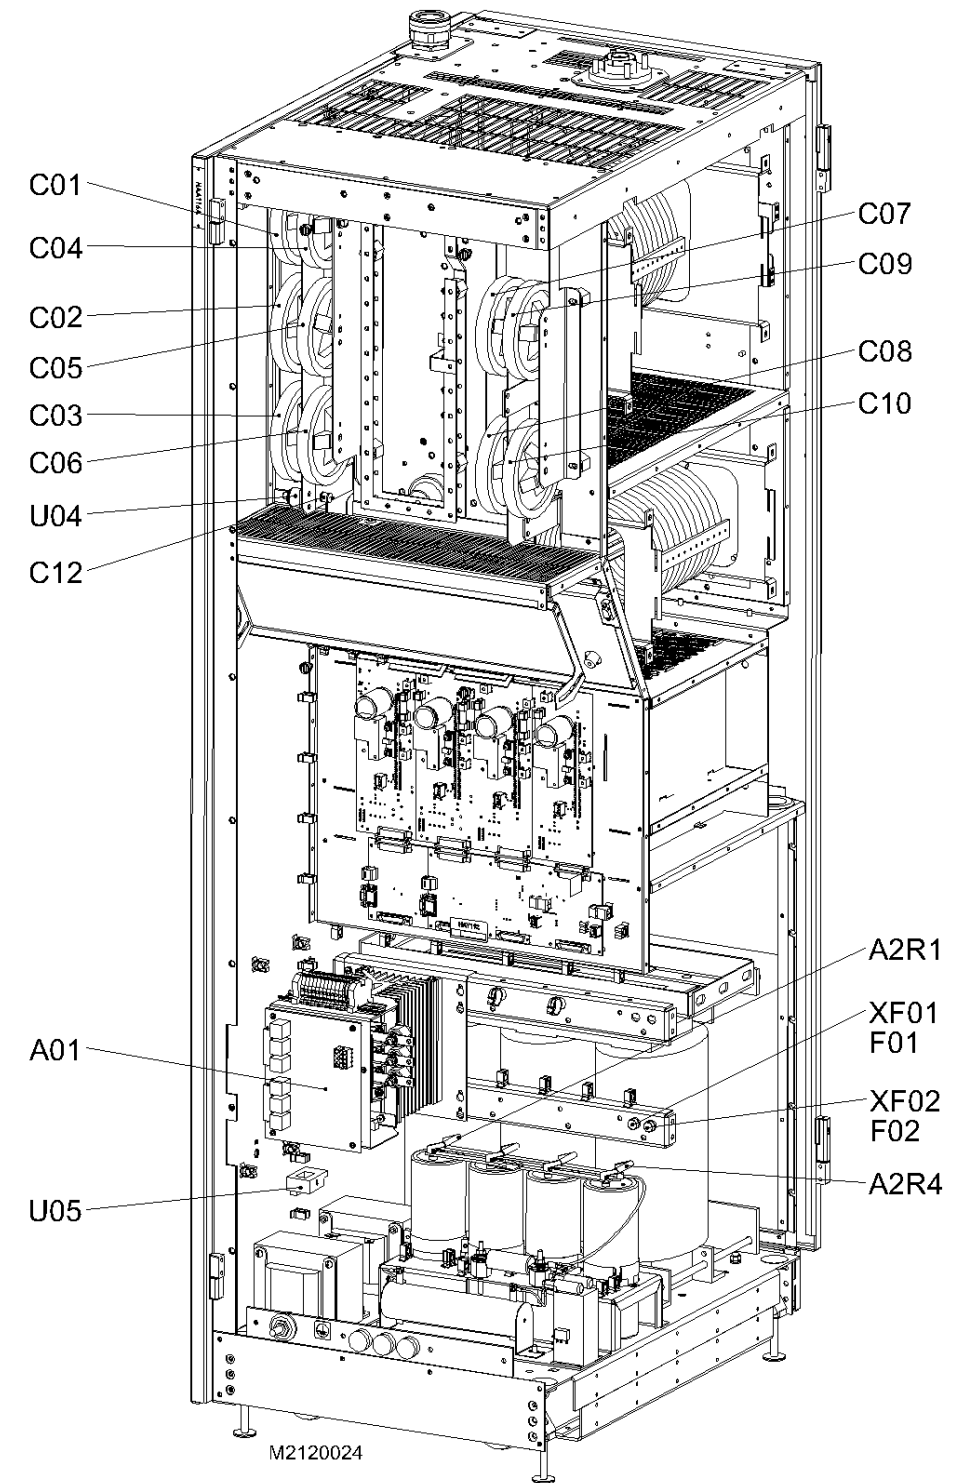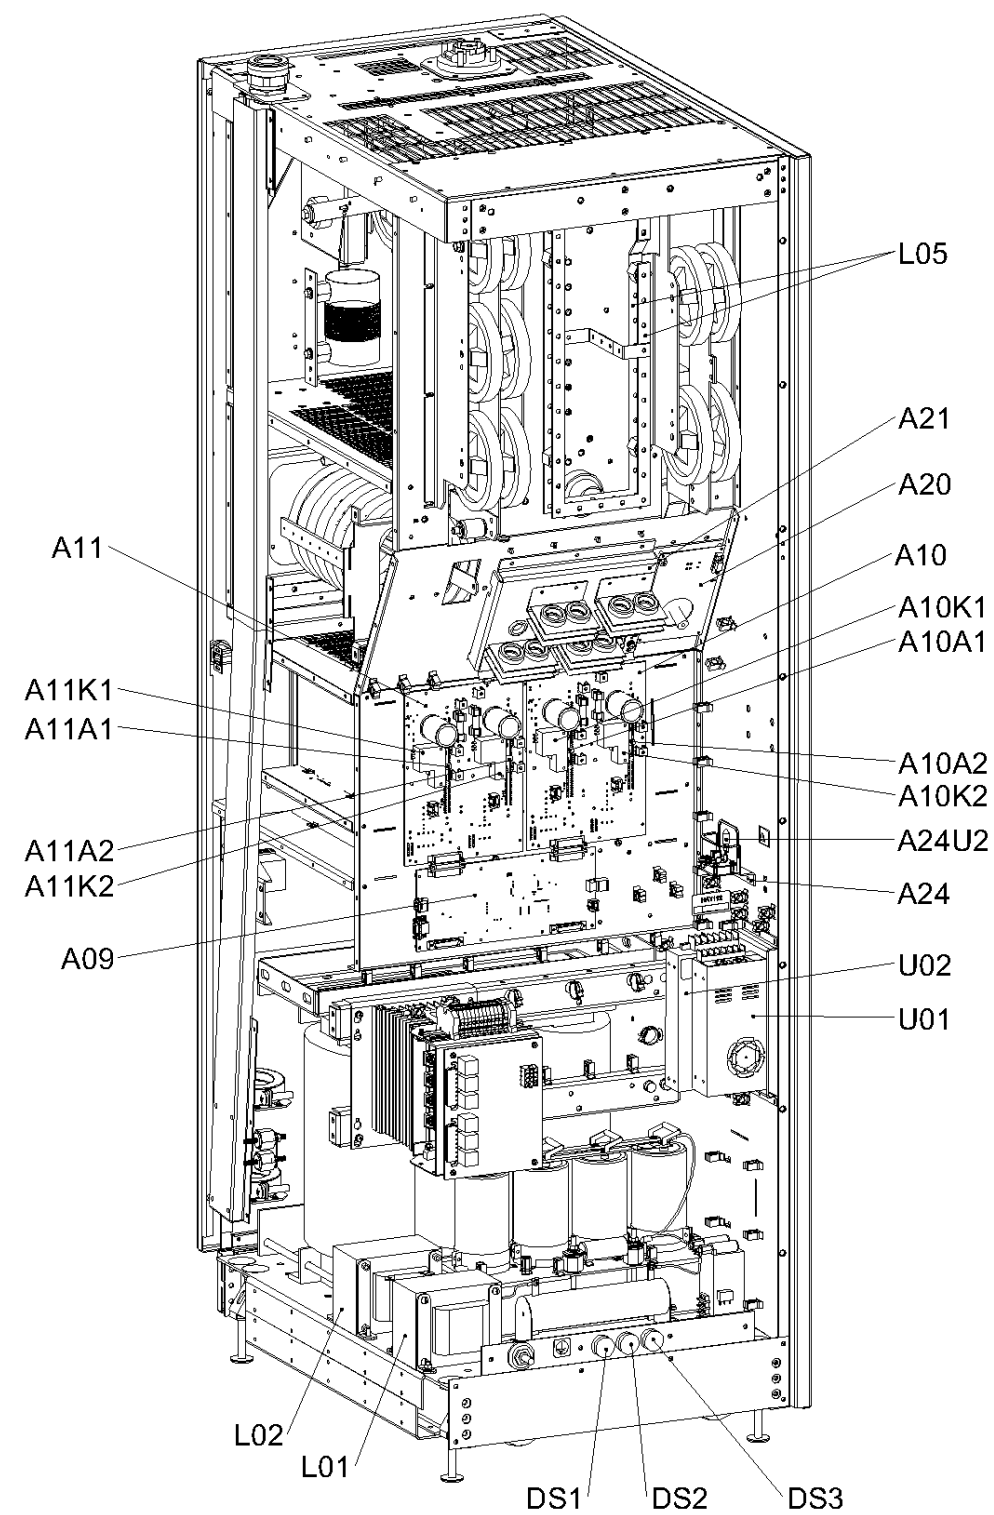

A1 - RECTIFIER ASSEMBLY
 A2 - B+ DISTRIBUTION ASSEMBLY
 U4 - SURGE ARRESTOR
 U5 - DC CURRENT SENSOR

Figure MD-2: NX10 Transmitter (Rear Views)

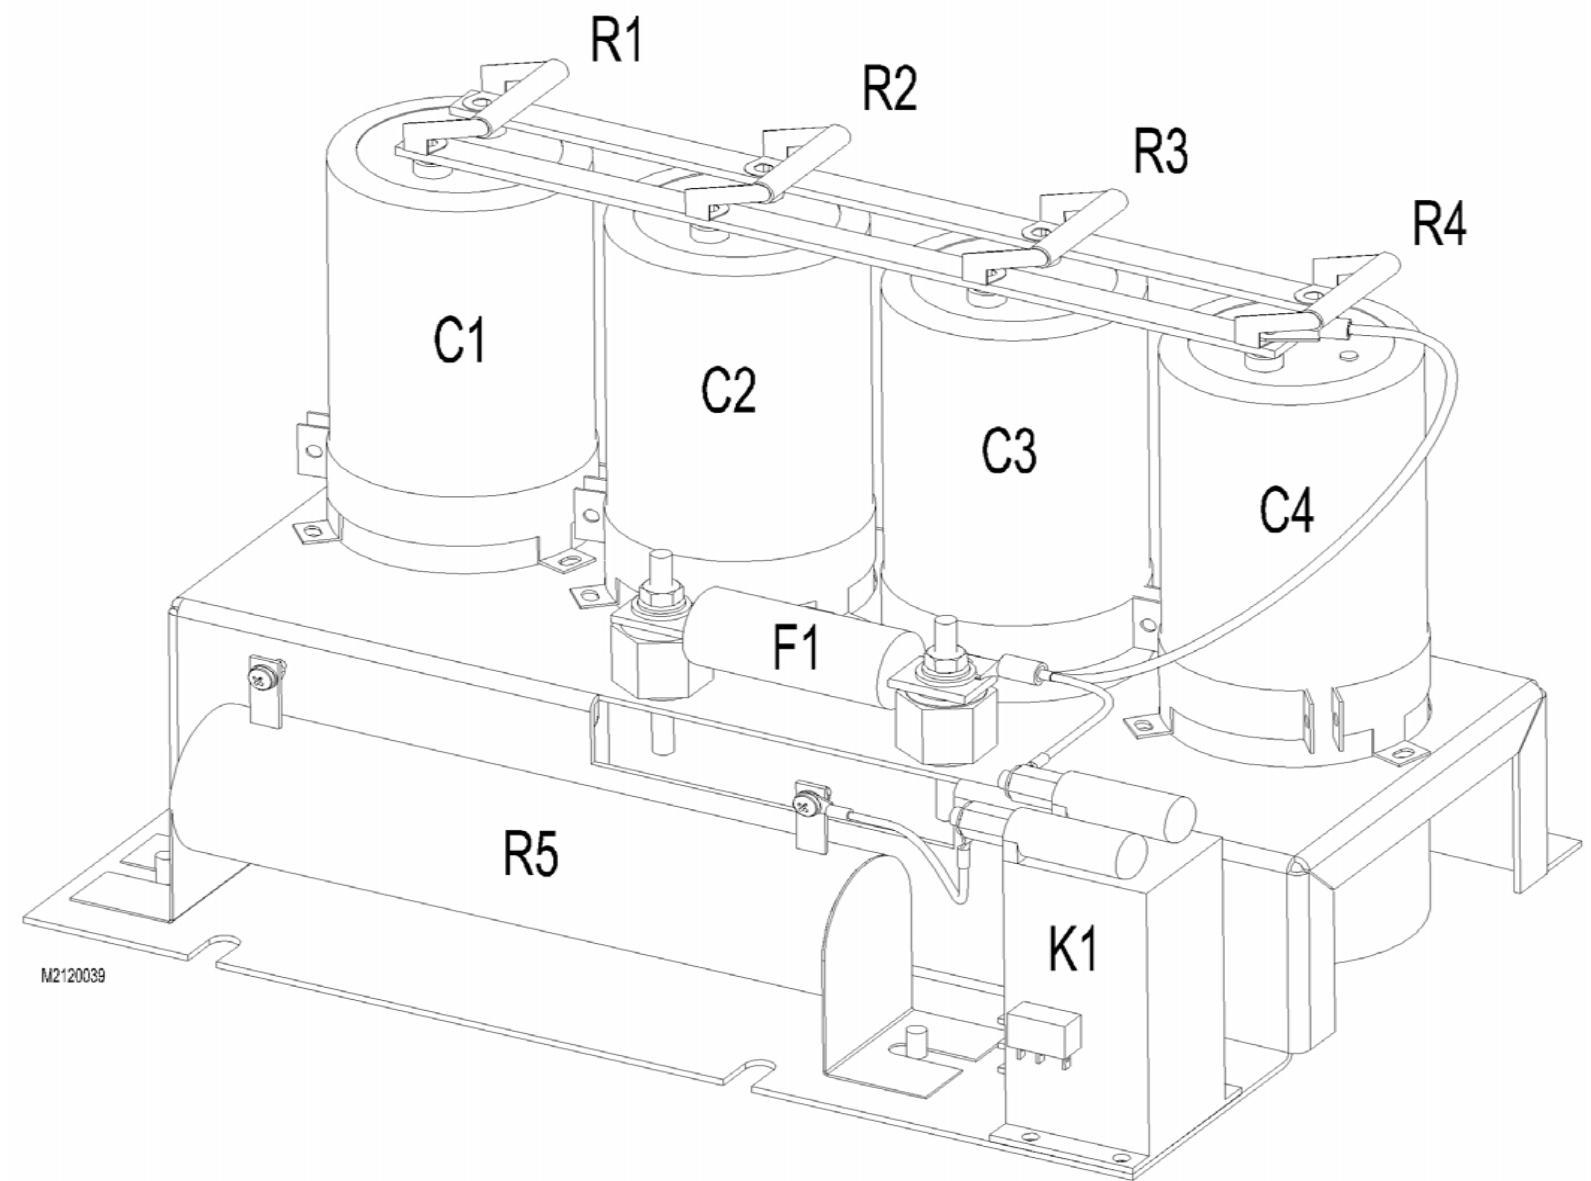


Figure MD-3: B+ Distribution Assembly (212-7120)

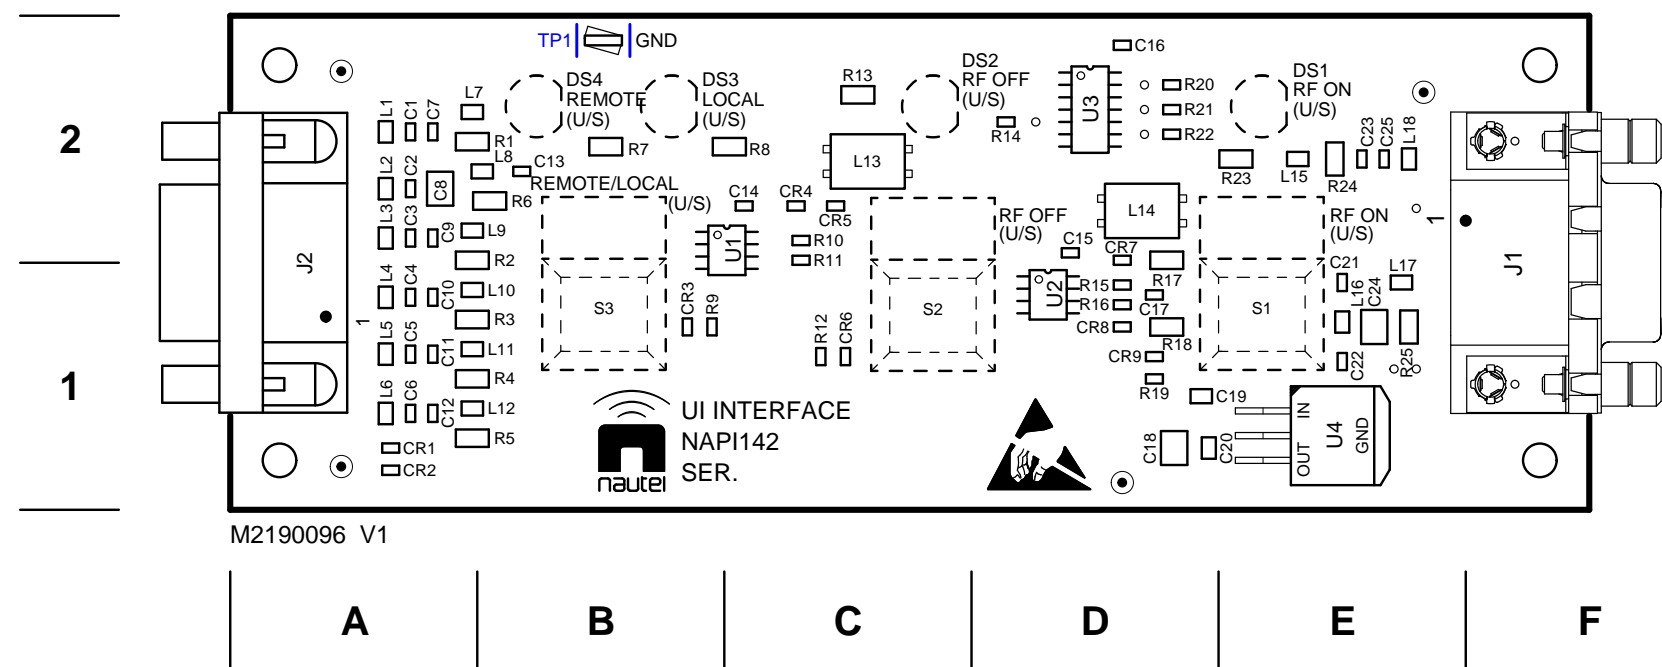


Figure MD-4: NAPI142A UI Interface PWB

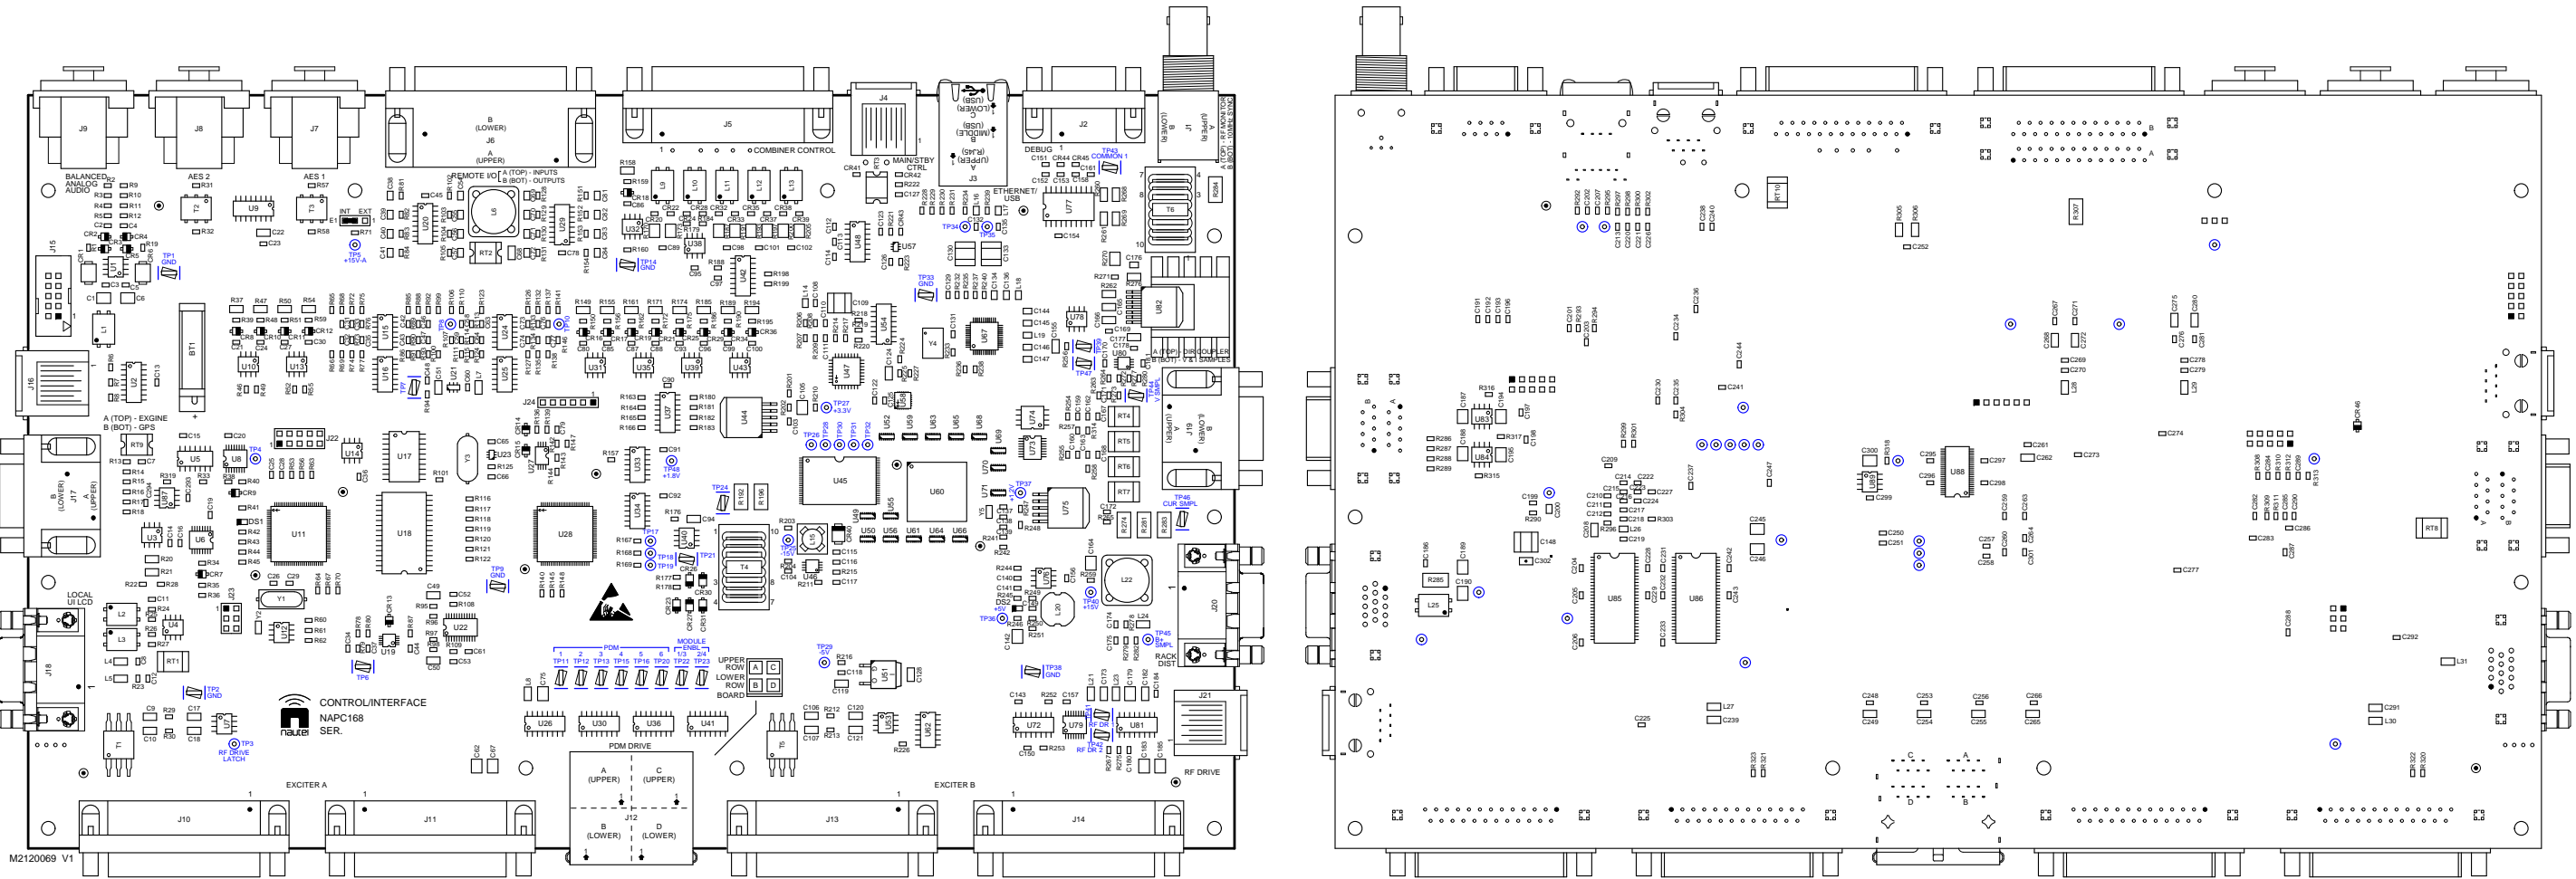


Figure MD-5: NAPC168A Control/Interface PWB

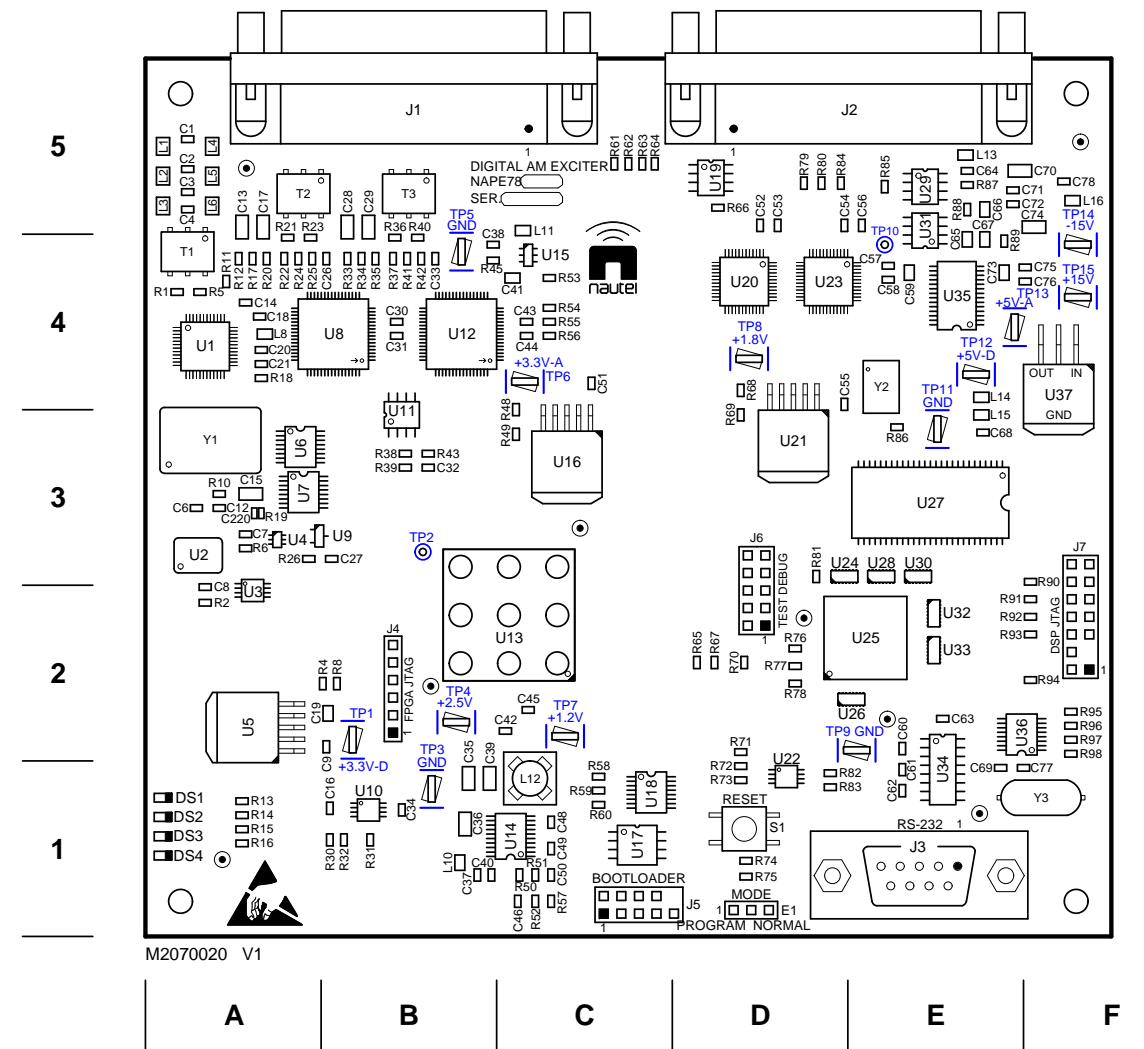
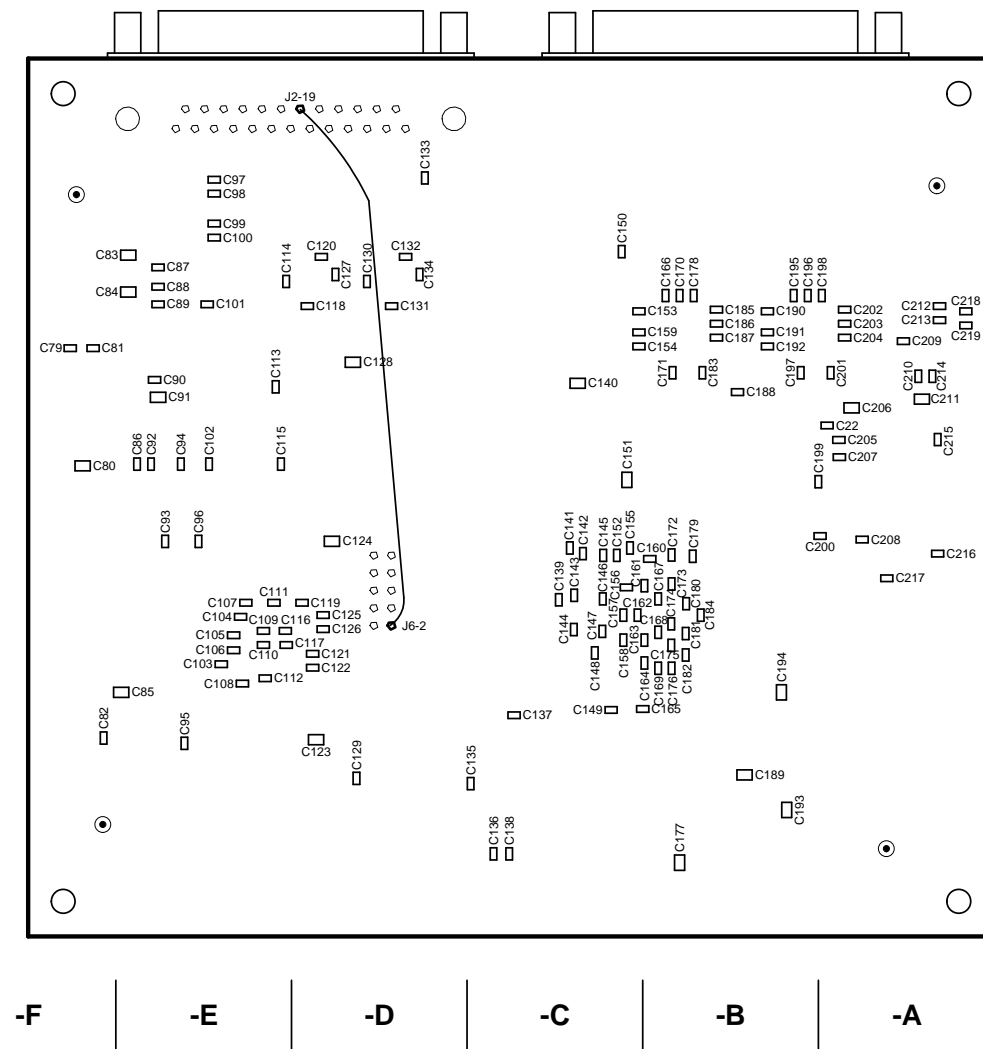


Figure MD-6: NAPE78A/01 Digital AM Exciter PWB

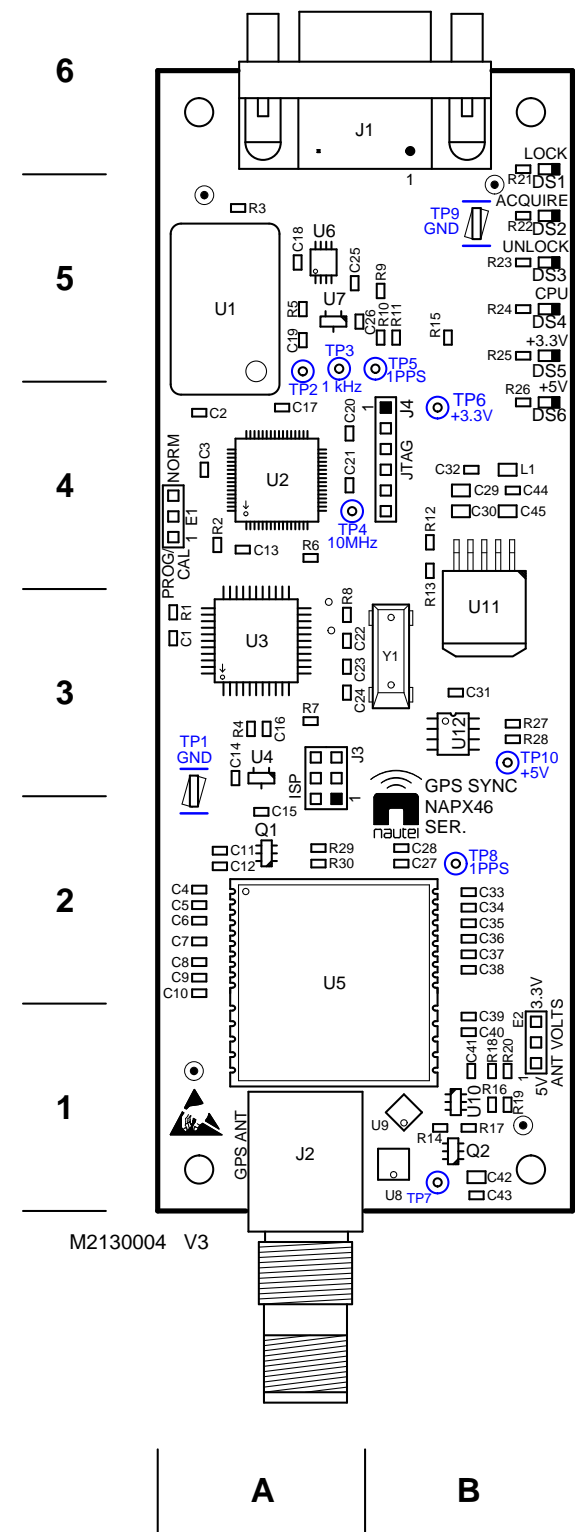


Figure MD-7: NAPX46 GPS Sync PWB (Optional)

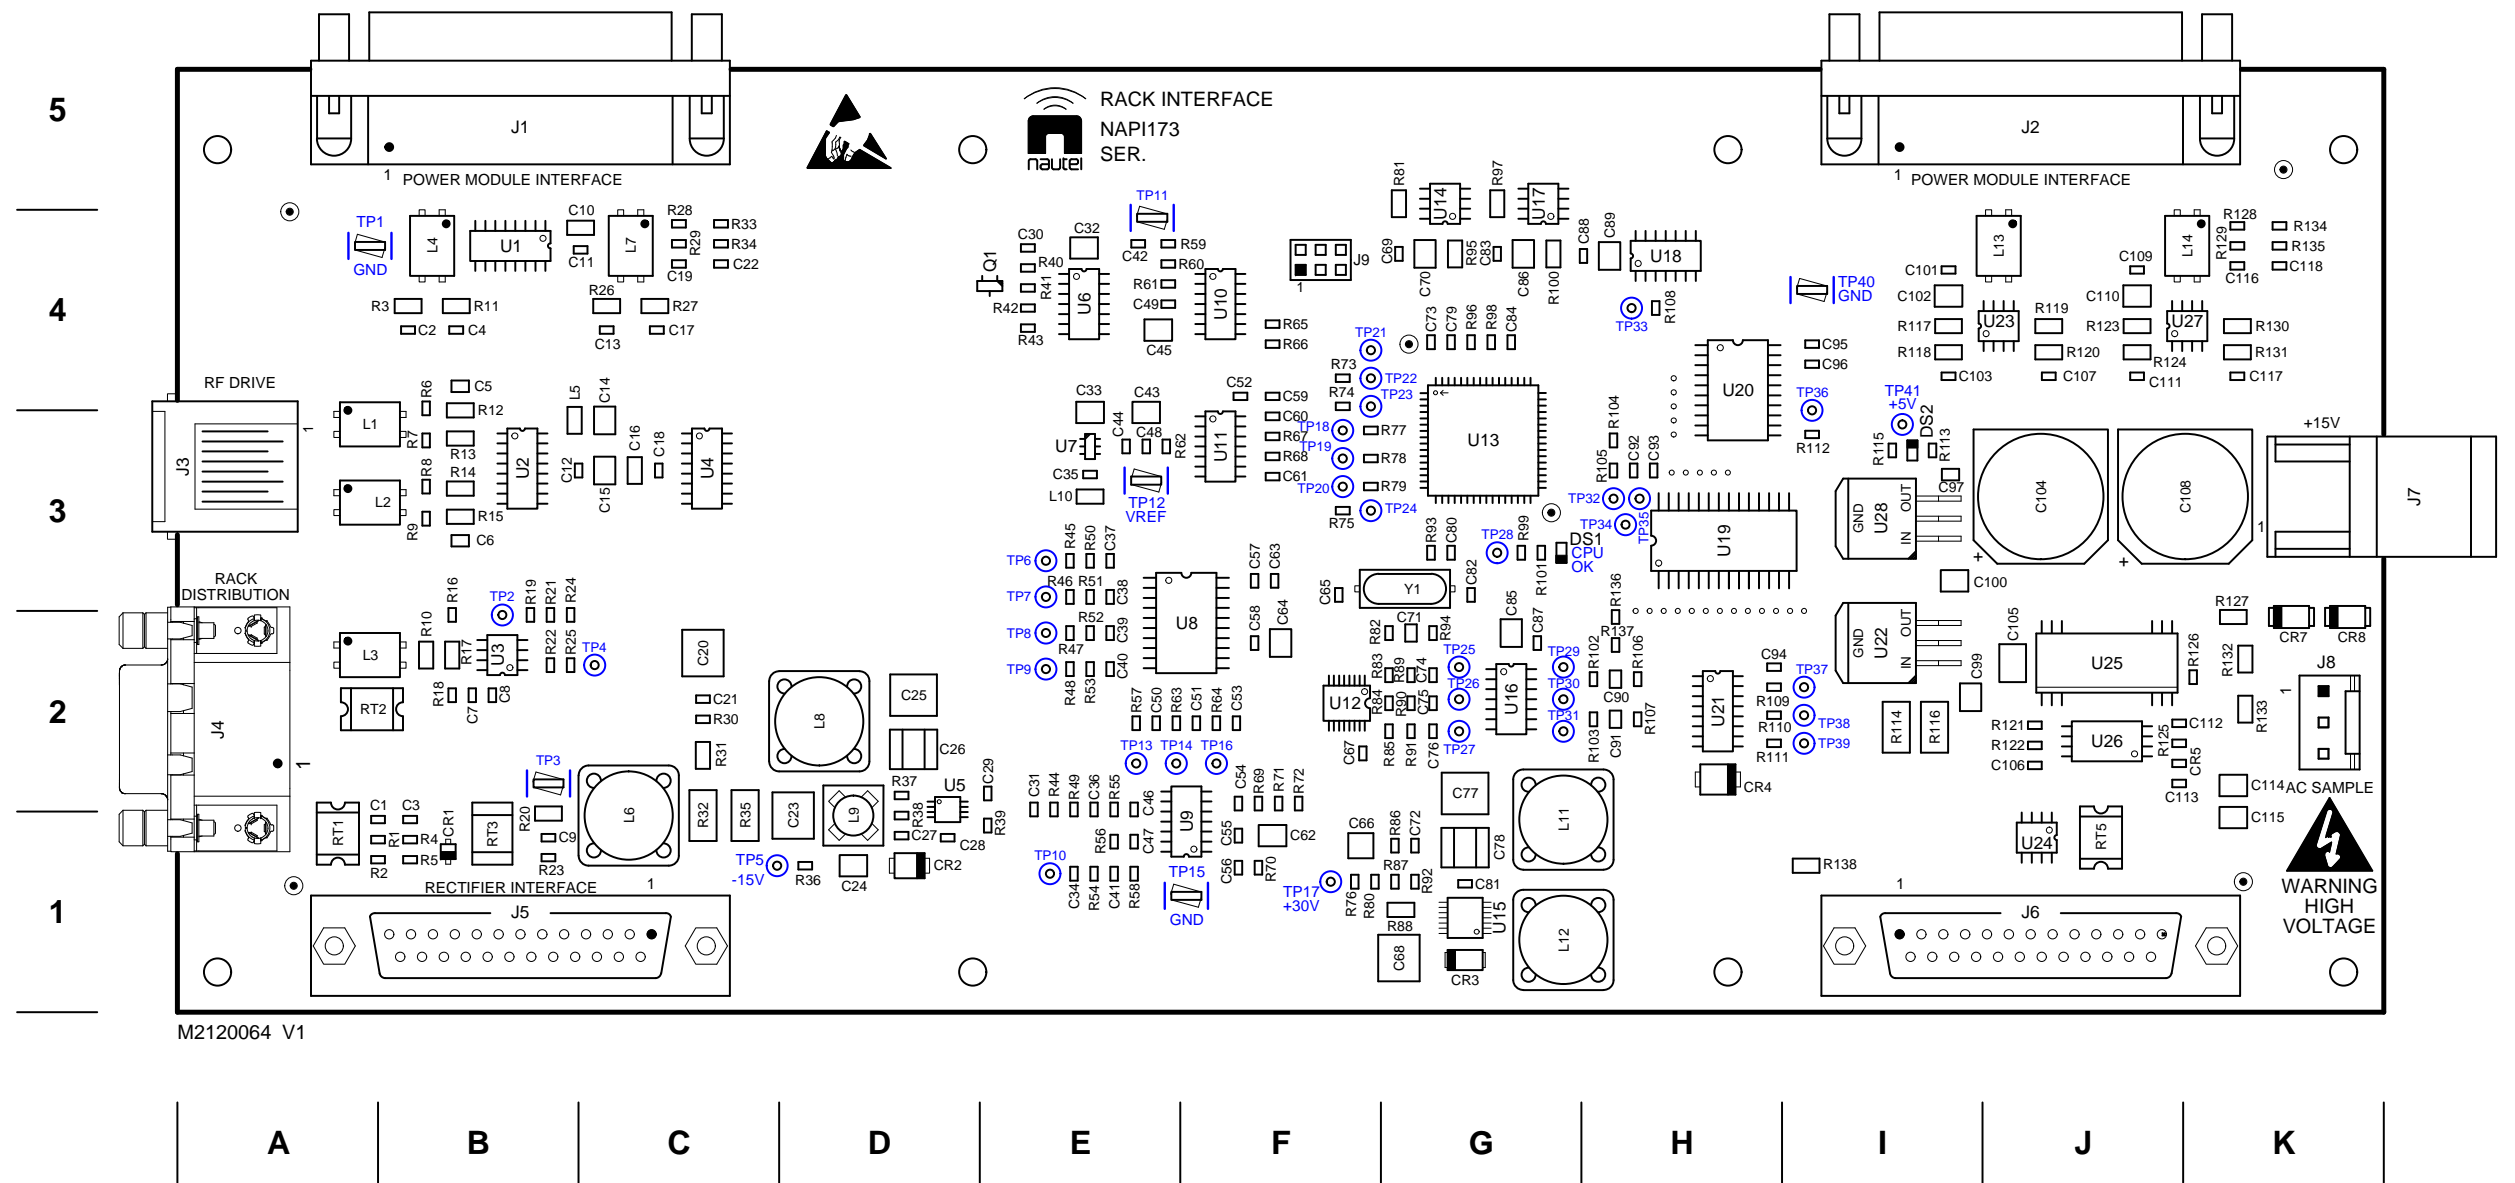


Figure MD-8: NAPI173A Rack Interface PWB



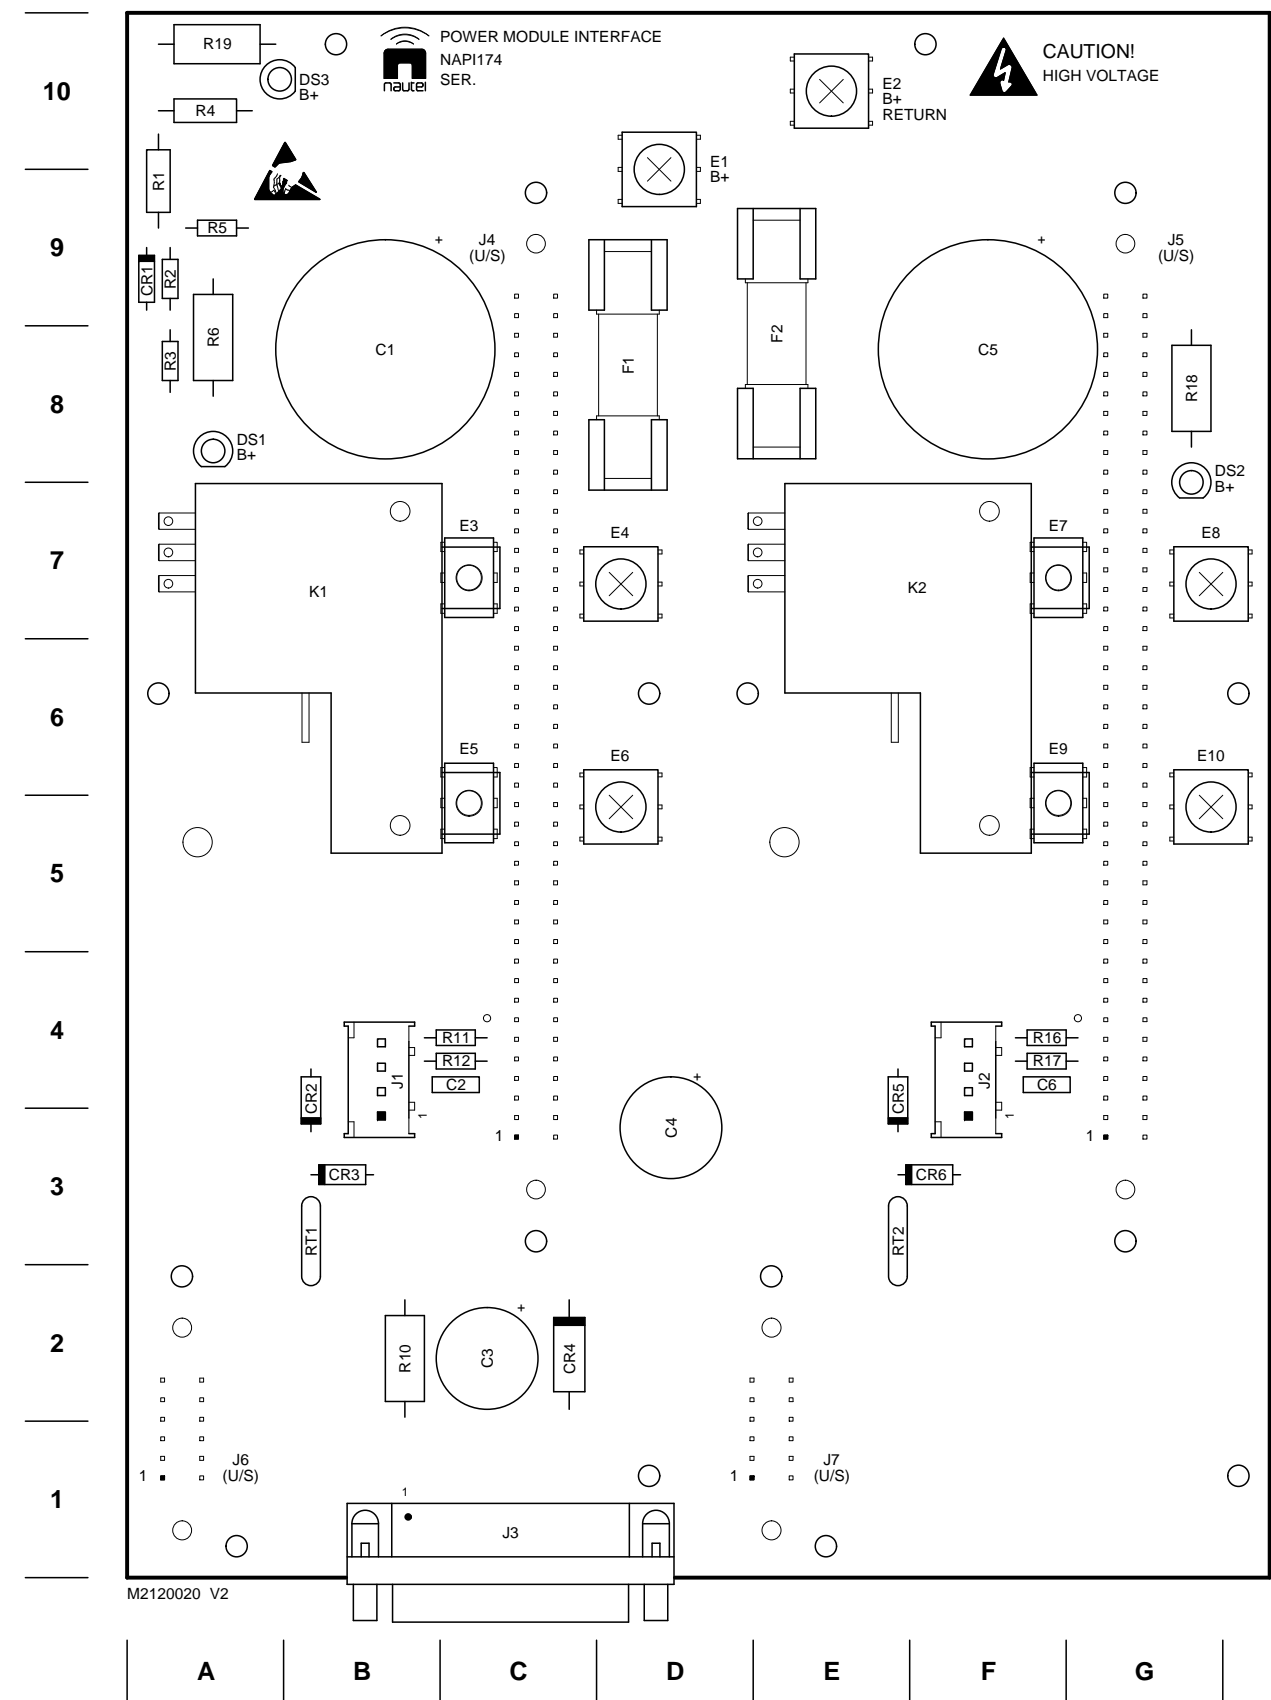


Figure MD-9: NAPI174 Power Module Interface PWB

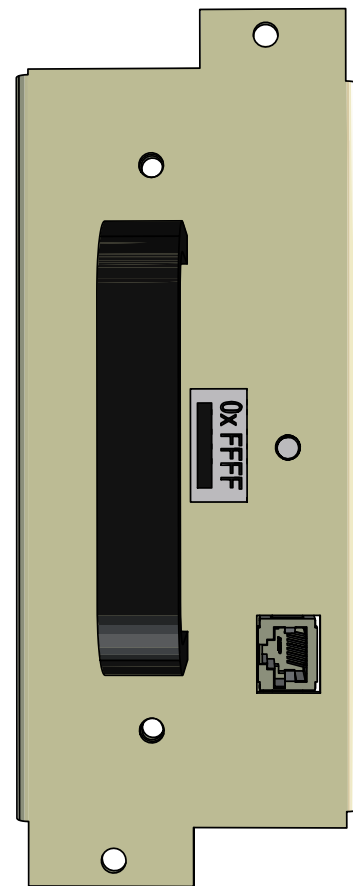


FRONT VIEW

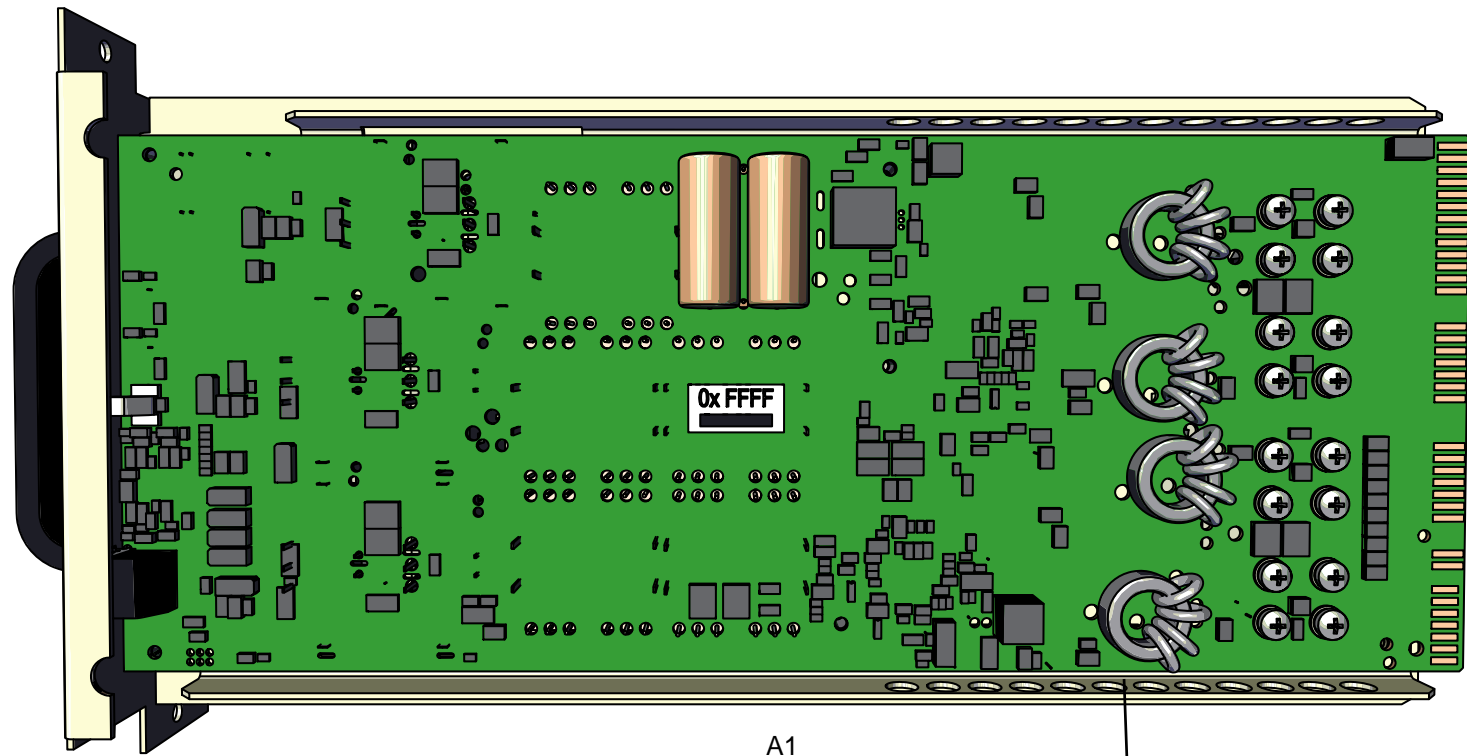


A1

MODULATOR / POWER
AMPLIFIER PWB

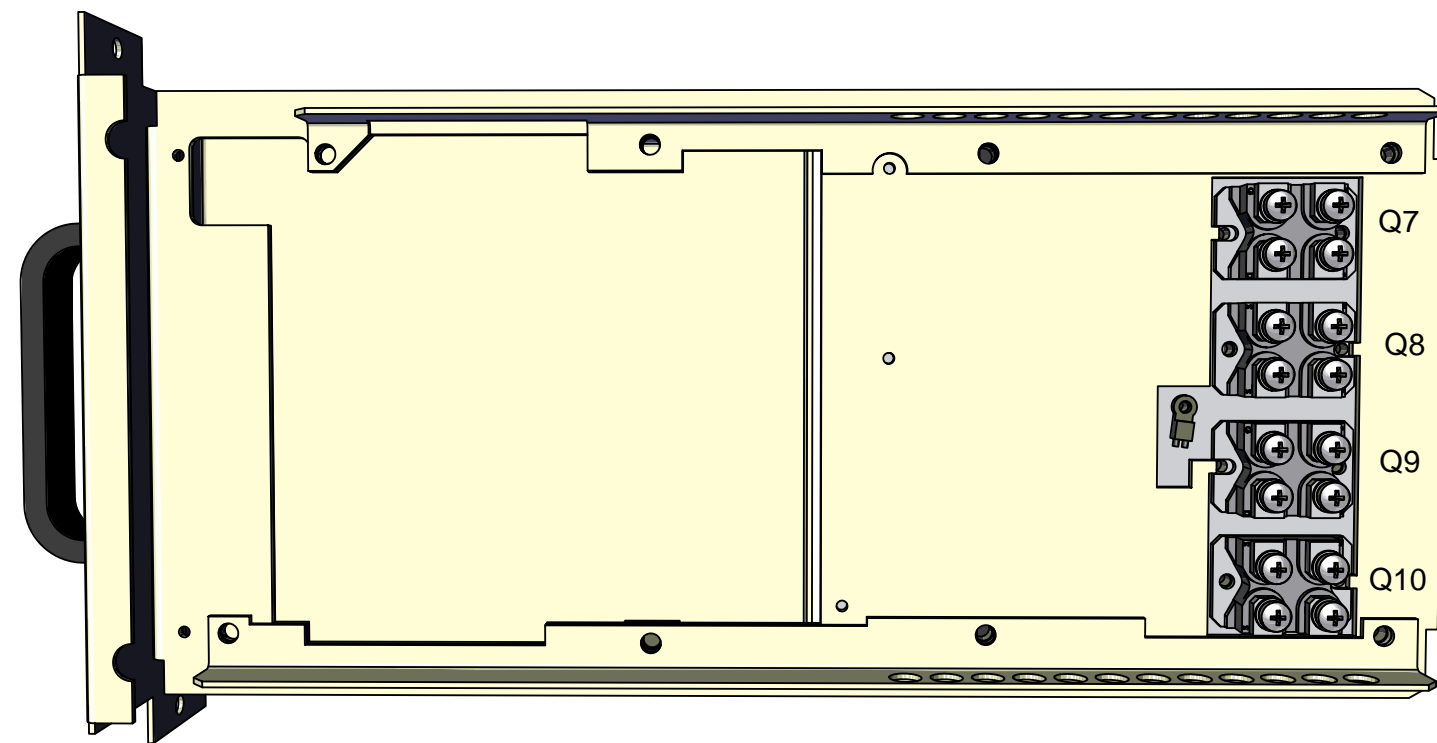

CUTAWAY FROM A1 TO SHOW
LOCATION / ORIENTATION
OF FETS Q7 TO Q10


Figure MD-10: NAP39C RF Power Module

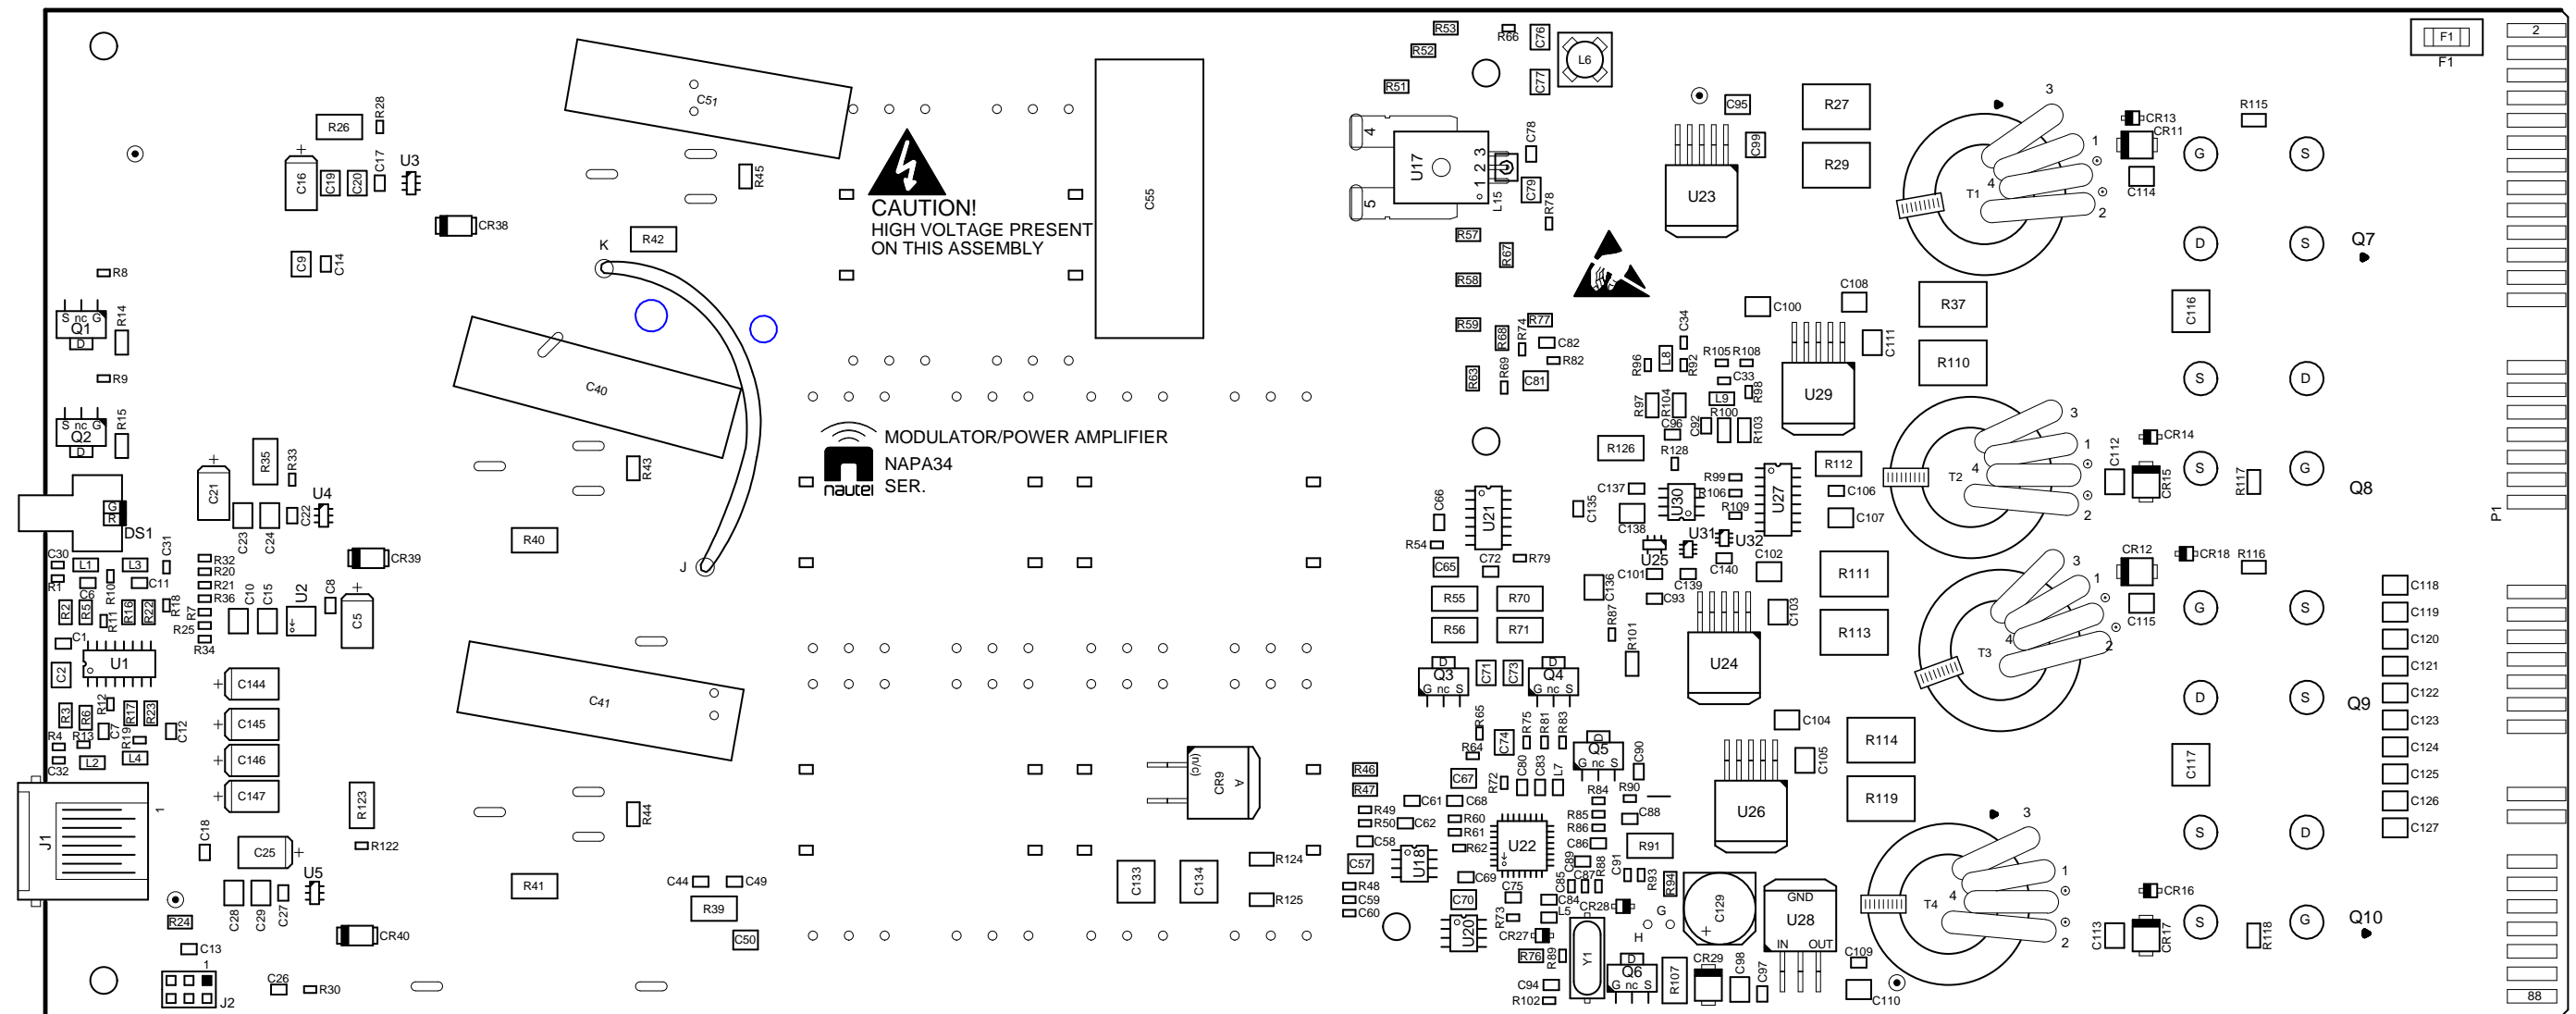

207-1150-03 MCH01 VA

FRONT

Figure MD-11: NAPA34C Modulator/Power Amplifier PWB (Front View)

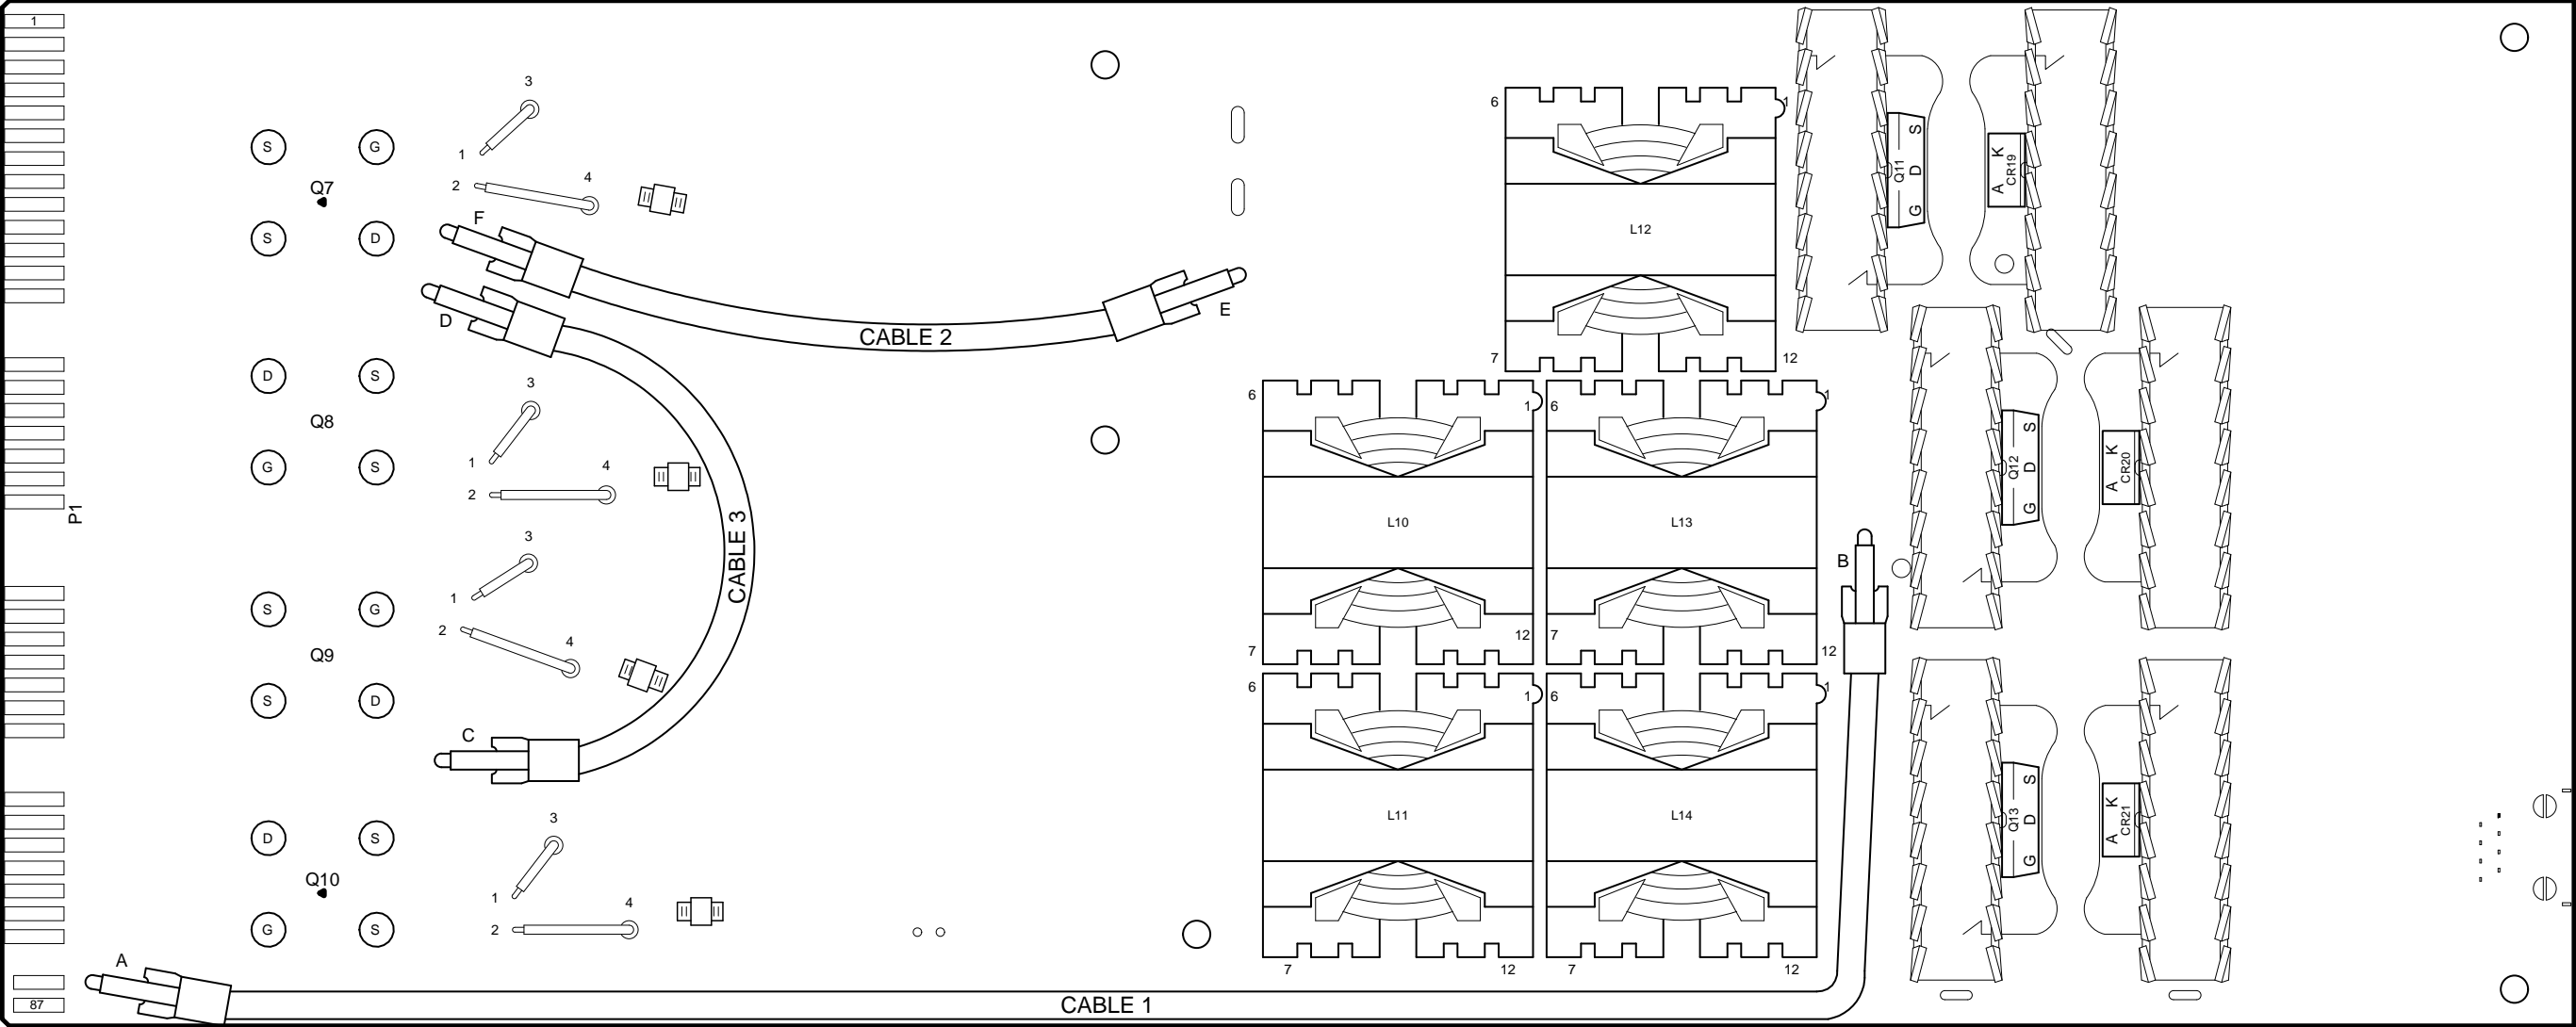

207-1150-03 MCH02 VA

REAR

Figure MD-12: NAPA34C Modulator/Power Amplifier PWB (Rear View)

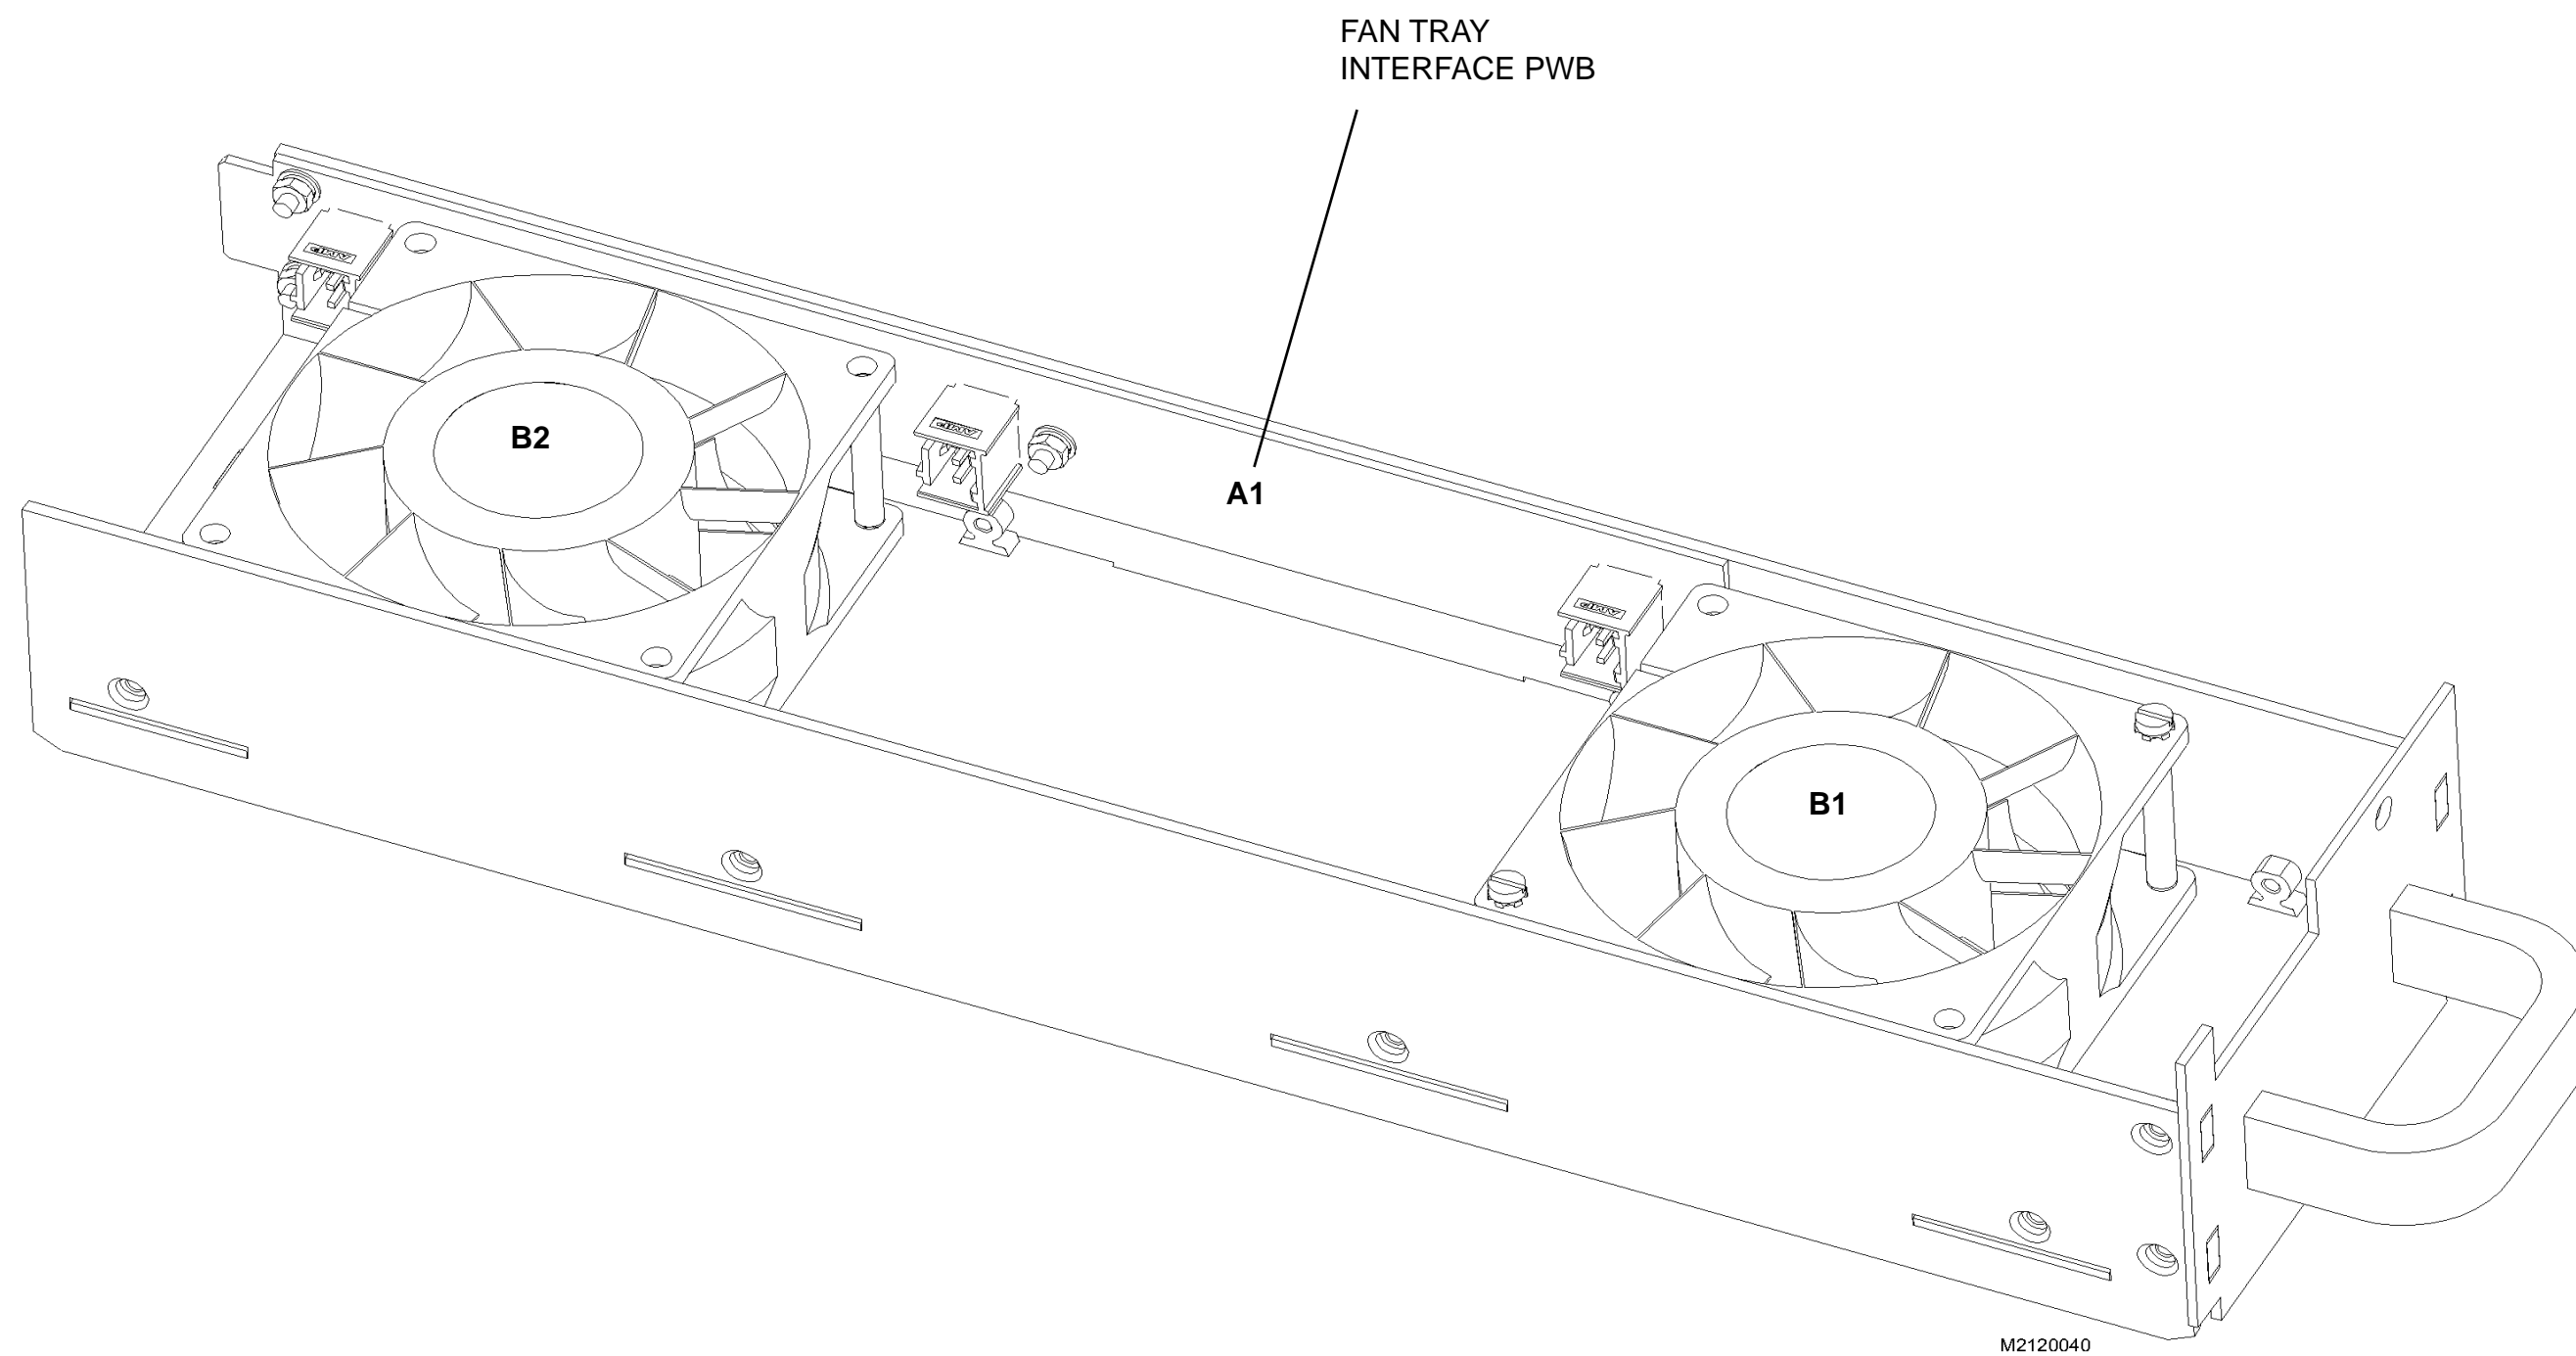


Figure MD-13: NAX274 Fan Tray Assembly


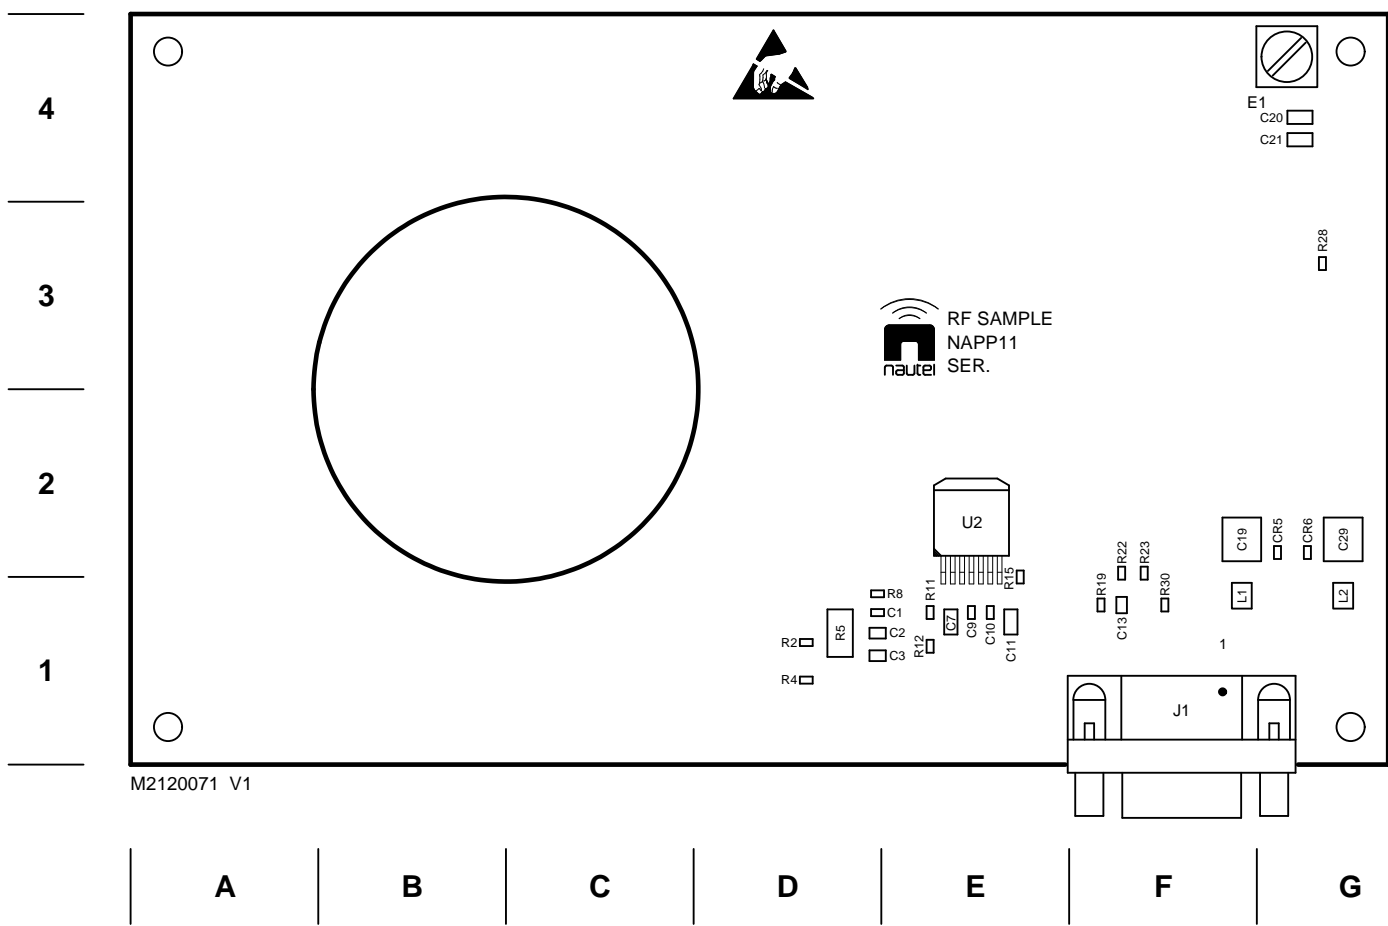


Figure MD-14: NAPP11/02A RF Voltage and Current Sample Probe

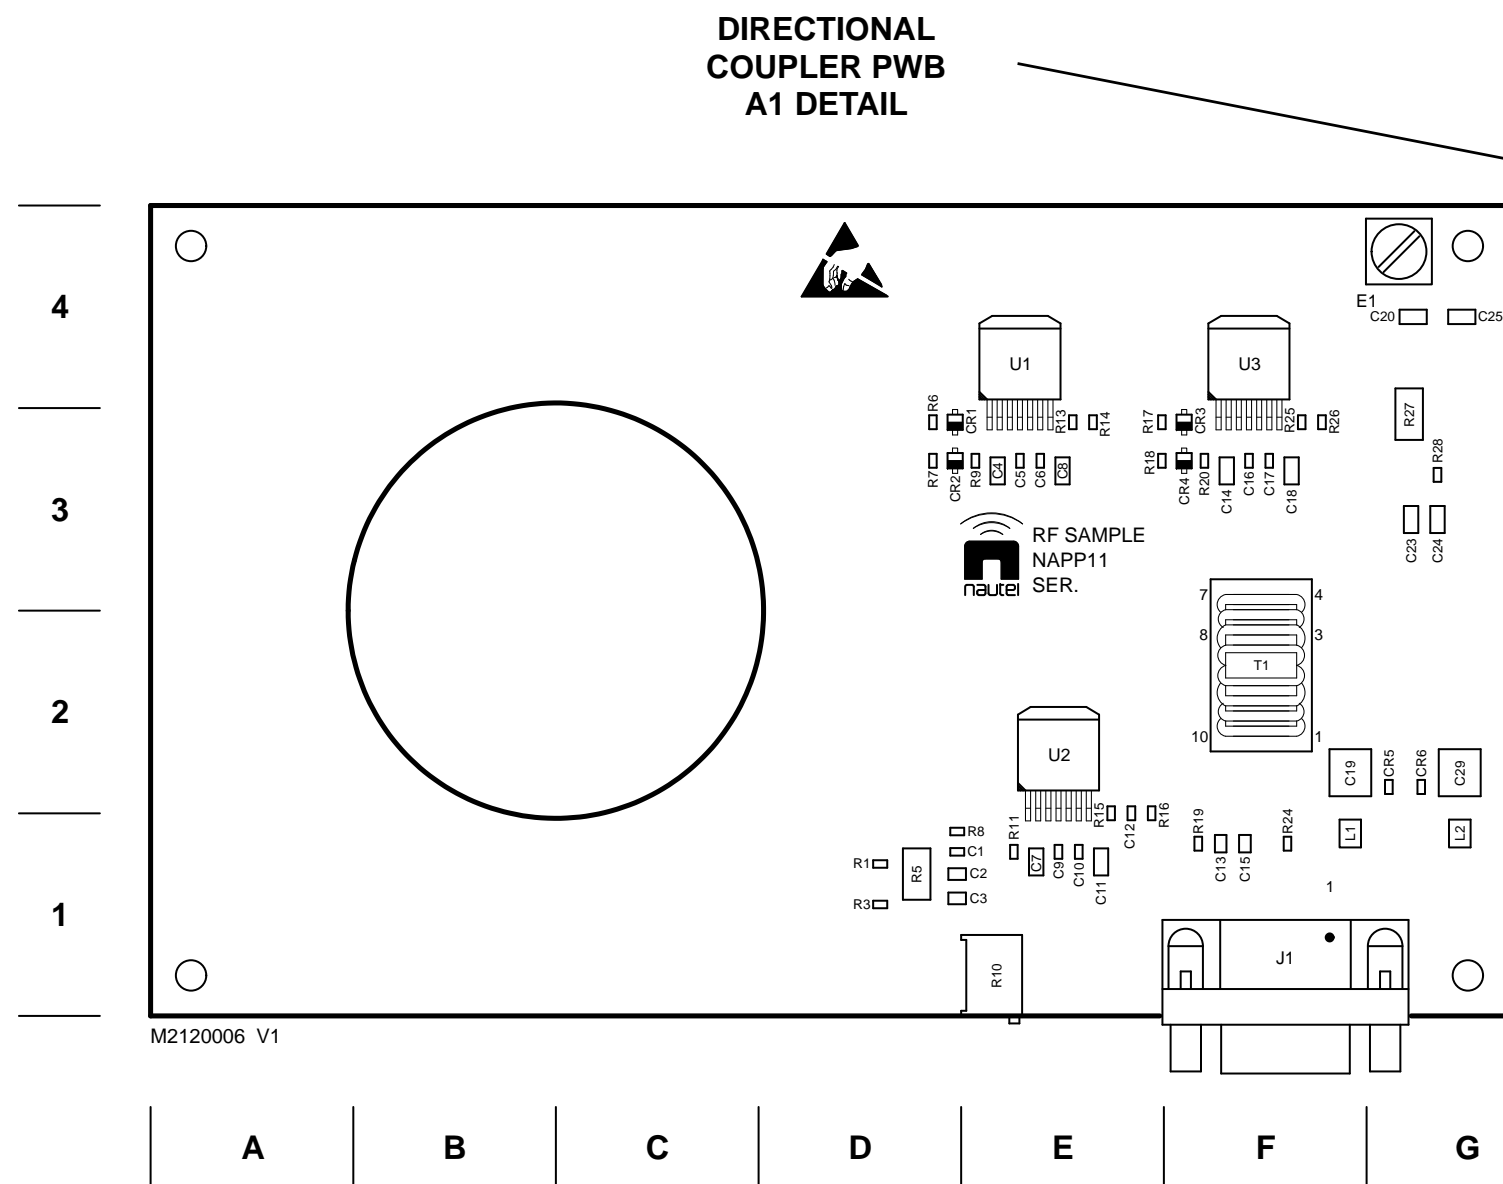

Cover partially
removed for clarity

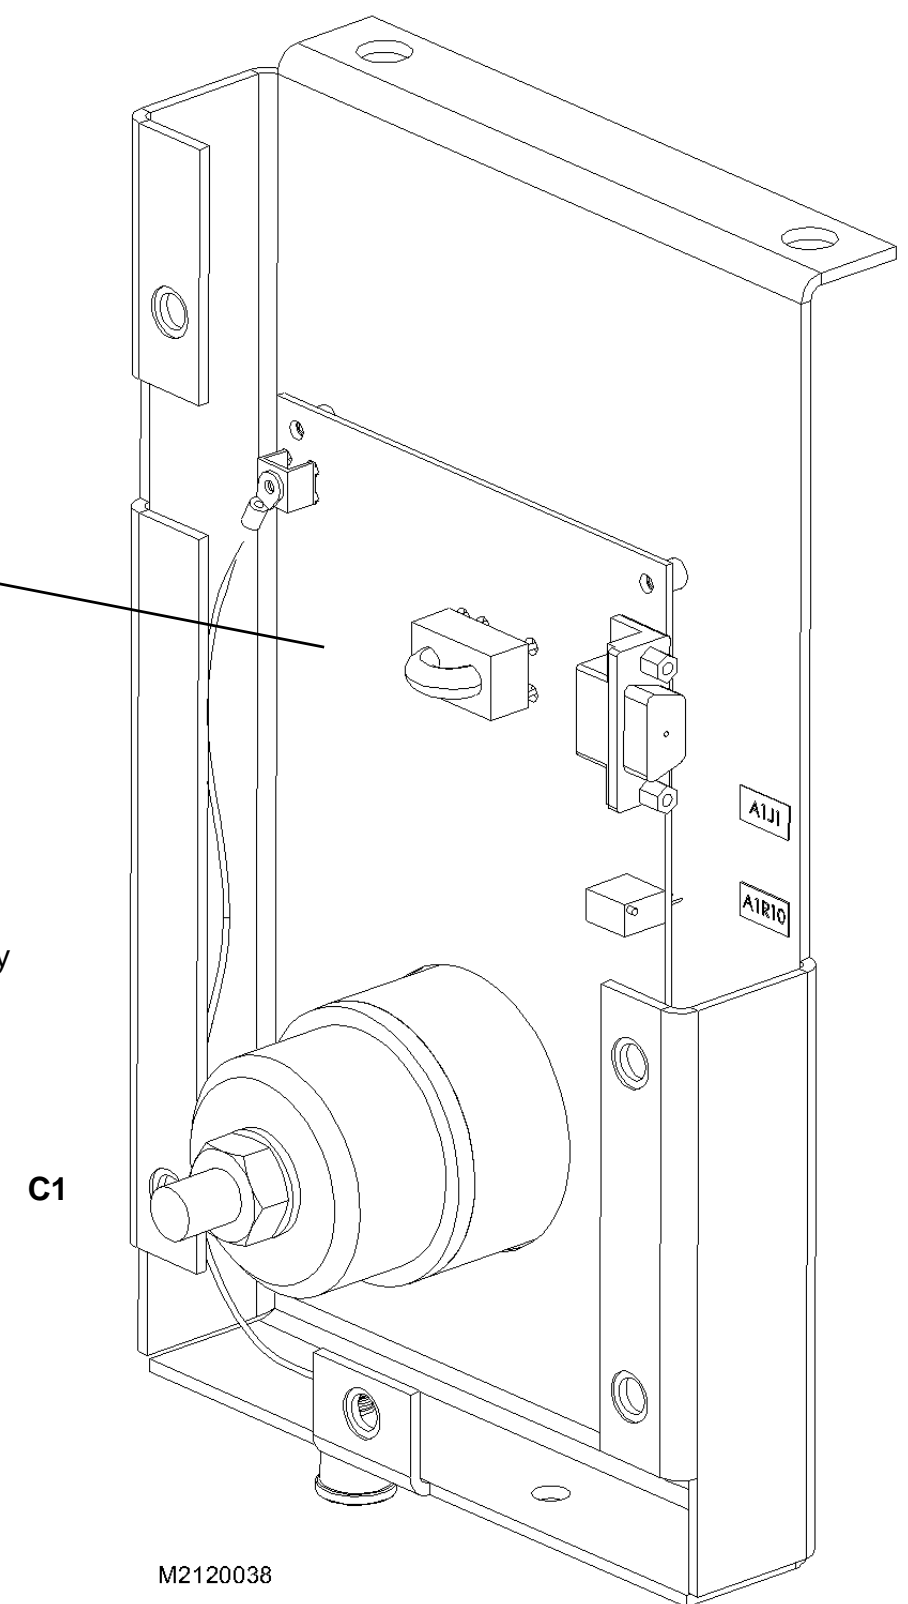


Figure MD-15: NAFP112 Directional Coupler Assembly (NAPP11 Directional Coupler PWB)

SECTION 4.6: LIST OF TERMS

This section defines some of the terms that are used in Nautel documentation.

ADC. Analog to Digital Converter.

AES-EBU. Audio Engineering Society/European Broadcasting Union (AES/EBU) is the name of a digital audio transfer standard. The AES/EBU digital interface is usually implemented using 3-pin XLR connectors (the same type connector used in professional microphones). One cable carries both left and right-channel audio data to the receiving device.

B+. The high voltage dc generated by the transmitter's ac power supply for use within the transmitter. The B+ voltage is used to supply the transmitter's modulators and other transmitter circuitry.

CUTBACK. A reduction in RF output power, caused by a total power limit fault or the occurrence of three shutbacks within a five second period.

DAC. Digital to Analog Converter.

DAM. Dynamic Amplitude Modulation.

DCC. Dynamic Carrier Control.

DRM. Digital Radio Mondiale. A set of digital audio broadcasting technologies designed to work existing AM radio channels.

DSP. Digital Signal Processing.

FPGA. Field Programmable Gate Array.

HD RADIO. HD Radio is another term for In Band On Channel (IBOC) technology. HD Radio is a trademark of iBiquity Digital Corporation.

IBOC. Nautel In-Band-On-Channel technology provides high quality digital audio over existing AM radio channels.

IPM. Incidental Phase Modulation

LATCHING ALARM. An alarm that, while active, keeps the transmitter in an 'RF inhibited' state. This type of alarm (e.g., High SWR Shutdown) require a reset - locally or remotely - to attempt to restore transmitter operation.

NE IBOC. Nautel's In-Band-On-Channel signal generator. See IBOC. Required for NX series IBOC installations.

PDM. Pulse Duration Modulation.

PRESET. A setting that controls power level, active exciter, and power scheduler status on a time-of-day and date basis. Exciters can be configured on a preset for a specific operating mode (for example, Exciter A - conventional AM, and Exciter B - IBOC). The NX10 allows you to pre-program multiple presets.

SHUTBACK. A complete loss of RF output power, caused by any one of a variety of faults, including high VSWR, low B+ voltage, high RF current, RF drive failure, external interlock or spark gap.

SNMP. Simple network management protocol. A method of communication via web browser between the transmitter and remote computer using specific agent software (in the transmitter) and client software.

SURGE PROTECTION BOARD. An electrical panel that protects equipment from electrical surges in the ac power supply, antenna or site ground caused by lightning strikes.

VSWR. Voltage standing wave ratio. This is an expression of the ratio of forward voltage to reverse voltage on the feedline and antenna system. An ideal VSWR of 1:1 provides maximum transmitter-antenna efficiency.

NX10 TROUBLESHOOTING MANUAL

Document: NHB-NX10-TRB

Issue: 2019-06-01

Nautel Limited

10089 Peggy's Cove Road
Hackett's Cove, NS Canada B3Z 3J4

Toll Free: +1.877.6NAUTEL (662.8835)
(Canada & USA only) or

Phone: +1.902.823.3900 or

Fax: +1.902.823.3183

Nautel Inc.

201 Target Industrial Circle
Bangor, Maine USA 04401

Phone: +1.207.947.8200

Fax: +1.207.947.3693

Customer Service (24-hour support)

+1.877.628.8353 (Canada & USA only)

+1.902.823.5100 (International)

Email: support@nautel.com

Web: www.nautel.com

© Copyright 2019 NAUTEL. All rights reserved.

